# OMRON

# **Switch Mode Power Supply S8JX (15/35/50/100/150/300/600-W Models)**

**S8JX-G Series** 

# Easy-to-use, Widely range from 15 W to 600 W (Output Voltage: 5 V to 48 V)

Easy Mounting:

Front-mounted type, DIN rail-mounted type are available.

Screw-mount at the top. (except 300-/600-W models)

Safety standards:

UL 508/60950-1 cUL CSA C22.2 No. 107.1 cUR CSA C22.2 No. 60950-1 EN 50178 (= VDE 0160) Over voltage category III EN 60950-1 (= VDE 0805 Teil 1)

- EMC: Conforms to EN 61204-3. (EMI:EN55011 ClassA)
- Input conditions:

The input voltage range of 15-W, 35-W, 50-W, 100-W, and 150-W models has been increased to 80 to 370 VDC (EC Directives and safety standards do not apply.).



 
c us c us c e


**S8JX-P Series** 

# S8JX-P Series with EMI ClassB and Power Factor Correction is newly added to S8JX Series.

(Applicable to all capacities from 50 W to 600 W)

- Limits for harmonic current emissions (conforms to EN61000-3-2)
- Conforms to ÉMI EN55011 Class B
- Applicable to input free voltage: 100 to 240 VAC
- Extended DC input voltage range: 80 to 370 VAC
   DC input is not subject to EC directives and safety standards.
- Easy mounting: Front-mounting bracket type and DIN-Rail mounting type are included as standard with the product.
   Screw-mount at the top. (except 300-/600-W models)
- Safety standards
- UL508/60950-1, cUL CSA C22.2 No.107.1, cUR CSA C22.2 No.60950-1
- EN50178 (=VDE0160) Over voltage category III \* EN60950-1 (=VDE0805 Teil1) \*
- \* Scheduled to be obtained in June, 2012 (5V, 12V, and 48V types of 300-W/600-W models).
- <Applicable only for 300 W and 600 W>
- High capacity application-covered functions are included as standard with the product.
- Alarm detection function, Remote control function, Remote sensing function



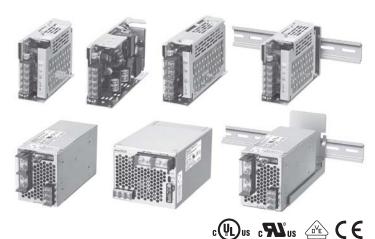

## **Model Number Structure**

#### **Model Number Legend**

Note: Not all combinations are possible. Refer to List of Models in Ordering Information on page 3.

15-/35-/50-/100-/150-W Models

S8JX-G 1 2 3 4

1. Power Ratings

015: 15 W 035: 35 W 050: 50 W 100: 100 W 150: 150 W

2. Output Voltage

05: 5 V 12: 12 V 15: 15 V 24: 24 V 48: 48 V 3. Configuration (15/35/50/100/150 W model)

None: Open-frame C: Covered

4. Configuration/mounting

None: Front-mounting D: DIN Rail-mounting

#### 300-/600-W Models

S8JX-G 1 2 3

1. Power Ratings

300: 300 W 600: 600 W 2. Output Voltage

05: 5V 12: 12 V 24: 24 V 48: 48 V

3. Configuration/mounting (covered type)

C: Front-mounting CD: DIN Rail-mounting

Note: Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.

# **Ordering Information**

## **List of Models**

Note: For details on normal stock models, contact your nearest OMRON representative.

Conf	figuration	Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
				5 V	3 A	:	S8JX-G01505
				12 V	1.3 A		S8JX-G01512
			15 W	15 V	1 A		S8JX-G01515
				24 V	0.65 A		S8JX-G01524
				48 V	0.35 A		S8JX-G01548
				5 V	7 A		S8JX-G03505
				12 V	3 A		S8JX-G03512
			35 W	15 V	2.4 A		S8JX-G03515
				24 V	1.5 A		S8JX-G03524
				48 V	0.75 A		S8JX-G03548
	Front-mounting *1			5 V	10 A		S8JX-G05005
	Tront mounting 4-1		50 W	12 V	4.2 A		S8JX-G05012
			00 11	24 V	2.1 A		S8JX-G05024
				48 V	1.1 A	1	S8JX-G05048
		100 to 240 VAC (free) (80 to 370 VDC ★3) S8JX-G15005□: Switchable between	100 W	5 V	20 A		S8JX-G10005
				12 V	8.5 A	No No	S8JX-G10012
				24 V	4.5 A		S8JX-G10024
				48 V	2.1 A		S8JX-G10048
			150 W	5 V	30 A		S8JX-G15005
				12 V	13 A		S8JX-G15012
				24 V	6.5 A		S8JX-G15024
n-frame Power				48 V	3.3 A		S8JX-G15048
plies		100 to 120 VAC and		5 V	3 A		S8JX-G01505E
		200 to 240 VAC. (DC		12 V	1.3 A		S8JX-G01512E
		power cannot be	15 W	15 V	1 A		S8JX-G01515E
		input.)		24 V	0.65 A		S8JX-G01524E
				48 V	0.35 A		S8JX-G01548E
			35 W	5 V	7 A		S8JX-G03505E
				12 V	3 A		S8JX-G03512E
				15 V	2.4 A		S8JX-G03515E
				24 V	1.5 A		S8JX-G03524E
				48 V	0.75 A		S8JX-G03548E
	DIN Rail-mounting *2			5 V	10 A	<del> </del>	S8JX-G05005E
			50 W	12 V 24 V	4.2 A	<del> </del>	S8JX-G05012E
					2.1 A	<del> </del>	S8JX-G05024E
				48 V 5 V	1.1 A 20 A	<del> </del>	S8JX-G05048E S8JX-G10005E
				-		<del> </del>	
			100 W	12 V 24 V	8.5 A 4.5 A	<del> </del>	S8JX-G10012E S8JX-G10024E
				24 V 48 V	4.5 A 2.1 A	<del> </del>	S8JX-G10024L S8JX-G10048E
				48 V		<del> </del>	
				5 V 12 V	30 A 13 A	<del> </del>	S8JX-G15005E
			150 W			-	S8JX-G15012E S8JX-G15024E
				24 V 48 V	6.5 A	<del> </del>	
		 d as standard with the		40 V	3.3 A		S8JX-G15048E

**<sup>\*1.</sup>** The front-mounting bracket is included as standard with the product.

<sup>\*2.</sup> A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Conf	iguration	Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
				5 V	3 A		S8JX-G01505C
				12 V	1.3 A		S8JX-G01512C
			15 W	15 V	1 A		S8JX-G01515C
				24 V	0.65 A		S8JX-G01524C
				48 V	0.35 A		S8JX-G01548C
				5 V	7 A		S8JX-G03505C
				12 V	3 A		S8JX-G03512C
			35 W	15 V	2.4 A		S8JX-G03515C
				24 V	1.5 A		S8JX-G03524C
				48 V	0.75 A		S8JX-G03548C
	Front-mounting *1			5 V	10 A		S8JX-G05005C
	3		50 W	12 V	4.2 A		S8JX-G05012C
				24 V	2.1 A		S8JX-G05024C
				48 V	1.1 A		S8JX-G05048C
				5 V	20 A		S8JX-G10005C
			100 W	12 V	8.5 A		S8JX-G10012C
				24 V 48 V	4.5 A		S8JX-G10024C S8JX-G10048C
		400 4 040 1/40		48 V	2.1 A		S8JX-G10048C
		100 to 240 VAC (free)	150 W	12 V	30 A 13 A	-	S8JX-G15003C
		(80 to 370 VDC <b>*</b> 3) S8JX-G15005		24 V	6.5 A	-	S8JX-G15012C
				48 V	3.3 A	<del> </del>	S8JX-G15048C
		Switchable between		5 V	3.3 A	No	S8JX-G01505CD
		100 to 120 VAC and	15 W	12 V	1.3 A		S8JX-G01512CD
		200 to 240 VAC. (DC power cannot be		15 V	1 A		S8JX-G01515CD
		input.)	10 11	24 V	0.65 A	+	S8JX-G01524CD
						_	S8JX-G01548CD
Covered Power					48 V 0.35 A 5 V 7 A	S8JX-G03505CD	
Supplies				12 V	3 A	1	S8JX-G03512CD
			35 W	15 V	3 A 2.4 A	S8JX-G03515CD	
				24 V	1.5 A		S8JX-G03524CD
				48 V	0.75 A		S8JX-G03548CD
	DIN Dell secondine de		50 W	5 V	10 A		S8JX-G05005CD
	DIN Rail-mounting *2			12 V	4.2 A		S8JX-G05012CD
				24 V	2.1 A		S8JX-G05024CD
				48 V	1.1 A		S8JX-G05048CD
			100 W	5 V	20 A		S8JX-G10005CD
				12 V	8.5 A		S8JX-G10012CD
				24 V	4.5 A		S8JX-G10024CD
				48 V	2.1 A		S8JX-G10048CD
				5 V	30 A	1	S8JX-G15005CD
			150 W	12 V	13 A	1	S8JX-G15012CD
			.55 **	24 V	6.5 A	1	S8JX-G15024CD
				48 V	3.3 A		S8JX-G15048CD
				5 V	60 A	Yes	S8JX-G30005C
			300 W	12 V	27 A	. 30	S8JX-G30012C
				24 V	14A	No	S8JX-G30024C
	Front-mounting *1			48 V	7A		S8JX-G30048C
	3	100 to 120 VAC		5 V	120A		S8JX-G60005C
		200 to 240 VAC	600 W	12 V	53A	ļ ļ	S8JX-G60012C
		(Switchable)	-	24 V	27A	Yes	S8JX-G60024C
		_		48 V	13A	100	S8JX-G60048C
				5 V	60 A		S8JX-G30005CD
	DIN Rail-mounting *2		300 W	12 V	27 A		S8JX-G30012CD
				24 V	14A	No	S8JX-G30024CD
				48 V	7A		S8JX-G30048CD

<sup>\*1.</sup> The front-mounting bracket is included as standard with the product.

\*2. A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

# Ratings, Characteristics, and Functions

		Input specification	1	100 to 240 V input		
Item		Power ratings *1	15 W	35 W		
Efficiency			68% min.	73% min.		
	Voltage *2		100 to 240 VAC (allowable range:	85 to 264 VAC, 80 to 370 VDC *9)		
	Frequency *2		50/60 Hz (47 to 450 Hz)			
	Current #2	100 V input	0.4 A max. 1 A max.			
	Current *3	200 V input	0.25 A max. 0.6 A max.			
nput	Harmonic current emissions					
	1	100 V input	0.5 mA max.			
	Leakage current *3	200 V input	1 mA max.			
	Inrush current (for a	100 V input	20 A max.			
	cold start at 25°C) *3	200 V input	40 A max.			
	Voltage adjustment rar	nge <b>*</b> 5	-10% to 15% (with V. ADJ) (48-V i	models: ±10%)		
	Ripple *3		2% (p-p) max.			
	Input variation influence	ce control	0.4% max. with AC input voltage			
Output *4	Load variation influence	e	0.8% max. (0 to 100% load, rated in	input voltage)		
	Temperature variation	influence	0.05%/°C max. (at rated input and	output)		
	Startup time		500 ms max. (up to 90% of output	voltage at rated input and output)		
	Hold time *3		20 ms min.			
	Overload protection *6	3	105% to 175% of rated load current, voltage drop, intermittent, automatic reset			
	Overvoltage protection	1 *7	Yes			
Additional	Overheat protection		No			
functions	Parallel operation		No (However, backup operation is	possible; external diodes required.)		
	Series operation		Yes (For up to two Power Supplies			
	Protective circuit operation indicator		No	• •		
	Ambient operating tem	perature	Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).			
	Storage temperature		-25 to 65°C (with no icing or conde	ensation)		
	Ambient operating hun	nidity	25% to 85% (Storage humidity: 25	% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)			
	Insulation resistance		100 $M\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC			
	Vibration resistance		10 to 55 Hz, 0.375-mm single amp	litude for 2 h each in X, Y, and Z directions		
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions			
	Output indicator		Yes (Color: Green)			
	EMI	Conducted Emissions	Conforms to EN 55011 Group 1 Class A and based on FCC Class A *9			
	EMI	Radiated Emissions	Conforms to EN 55011 Group 1 Class A *9			
Other		Electrostatic Discharge	Conforms to EN61000-4-2			
		Radiated Electromagnetic Field	Conforms to EN61000-4-3			
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4			
	EMS	Surge	Conforms to EN61000-4-5			
		Conducted Disturbance	Conforms to EN61000-4-6			
		Voltage Dips/Short Interruptions				
			UL Listed: UL 508 (Listing), UL UR	: UL 60950-1 (Recognition)		
	Approved standards *	9	cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1			
			EN/VDE: EN50178 (= VDE 0160) Ov (Terminal block: Based on DIN 502	ver voltage category III, EN 60950-1 (= VDE 0805 Teil ' 274 (VDE 0660-514))		
	SEMI		SEMI F47-0200 (200-VAC input)			
	Weight *8		250 g max.			

<sup>\*1.</sup> When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 19.

<sup>\*2.</sup> Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

<sup>\*3.</sup> Rated input voltage: 100 or 200 VAC at 100% load.

**<sup>\*4.</sup>** Output characteristics: Specified at power supply output terminals.

<sup>\*5.</sup> If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

<sup>\*6.</sup> For details, refer to Overload Protection on page 19.

<sup>\*7.</sup> To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

<sup>\*8.</sup> The weight indicated is for Front-mounting, Open-frame Power Supply.

\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

		Input specification	100 to 24	10 V input	
Item		Power ratings *1	50 W	100 W	
		5 V Models	76% min.	76% min.	
F(C)		12 V Models	81% min.	81% min.	
Efficiency		24 V Models	83% min.	83% min.	
		48 V Models	82% min.	83% min.	
	Voltage *2		100 to 240 VAC (allowable range: 85 to 264	4 VAC, 80 to 370 VDC <b>*9</b> )	
	Frequency *2		50/60 Hz (47 to 450 Hz)		
	0	100 V input	1.4 A max.	2.5 A max.	
	Current *3	200 V input	0.8 A max.	1.5 A max.	
Input	Harmonic current emis	sions			
	100 V input		0.5 mA max.		
	Leakage current *3	200 V input	1 mA max.		
	Inrush current (for a	100 V input	20 A max.		
	cold start at 25°C) *3	200 V input	40 A max.		
	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (48-V models:	±10%)	
	Ripple *3		2% (p-p) max.		
	Input variation influence	ce	0.4% max. (with AC input voltage)		
Output *4	Load variation influence	e	0.8% max. (0 to 100% load, rated input volt	age)	
	Temperature variation	influence	0.05%/°C max. (at rated input and output)		
	Startup time		500 ms max. (up to 90% of output voltage a	at rated input and output)	
	Hold time *3		20 ms min.		
	Overload protection *6		105% to 175% of rated load current, voltage drop, intermittent, automatic reset		
	Overvoltage protection *7		Yes		
Additional	Overheat protection		No		
functions	Parallel operation		No (However, backup operation is possible; external diodes required.)		
<u> </u>	Series operation		Yes (For up to two Power Supplies; externa	al diodes required.)	
	Protective circuit operation indicator		No		
	Ambient operating tem	perature	Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).		
	Storage temperature		-25 to 65°C (with no icing or condensation)		
	Ambient operating hur	nidity	25% to 85% (Storage humidity: 25% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and 2.0 kVAC for 1 min. (between all inputs and 1.0 kVAC for 1 min. (between all outputs ar	PE terminals; detection current: 20 mA)	
	Insulation resistance		100 M $\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC		
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for	·	
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directi		
	Output indicator		Yes (Color: Green)		
		Conducted Emissions	Conforms to EN 55011 Group 1 Class A and based on FCC Class A <b>*9</b>		
	EMI	Radiated Emissions	Conforms to EN 55011 Group 1 Class A *9		
Other		Electrostatic Discharge	Conforms to EN61000-4-2		
		Radiated Electromagnetic Field	Conforms to EN61000-4-3		
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4		
	EMS	Surge	Conforms to EN61000-4-5		
		Conducted Disturbance	Conforms to EN61000-4-6		
		Voltage Dips/Short Interruptions			
			UL Listed: UL 508 (Listing), UL UR: UL 609	950-1 (Recognition)	
	Approved standards *	9	cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1	, ,	
			EN/VDE: EN50178 (= VDE 0160) Over voltag (Terminal block: Based on DIN 50274 (VDE	e category III, EN 60950-1 (= VDE 0805 Teil 1) E 0660-514))	
	SEMI		SEMI F47-0200 (200-VAC input)		
	Weight *8		300 g max.	550 g max.	
1. d \ \ \ / / / / / / / / / / / / / / / /	Land's consequented the		the averland protection may exercte at	stantan and the Decree Occurs	

**<sup>\*1.</sup>** When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.

<sup>\*2.</sup> Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

**<sup>\*3.</sup>** Rated input voltage: 100 or 200 VAC at 100% load.

**<sup>\*4.</sup>** Output characteristics: Specified at power supply output terminals.

<sup>\*5.</sup> If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

**<sup>\*6.</sup>** For details, refer to Overload Protection on page 19.

<sup>\*7.</sup> To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

**<sup>\*8.</sup>** The weight indicated is for Front-mounting, Open-frame Power Supply.

<sup>\*9.</sup> The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

			Input specification	100/200 V switchable	100 to	240 V input		
Item			Power ratings *1	150 W at 5 V	150 W at 12 V	150 W at 24 or 48 V		
		5 V Models		78% min.				
		12 V Models			79% min.			
Efficiency		24 V Models				86% min.		
48 V Models						85% min.		
	Voltage *2		Switchable between 100 to 120 VAC (allowable range: 85 to 132 VAC) and 200 to 240 VAC (allowable range: 170 to 264 VAC).	100 to 240 VAC (allowable range: 85 to 26	64 VAC, 80 to 370 VDC <b>*9</b> )			
	Frequency *2			50/60 Hz (47 to 450 Hz)				
		100 V input		3.5 A max.	3.6 A max.	3.5 A max.		
Input	Current *3	200 V input		2.1 A max.	2.2 A max.	2.1 A max.		
	Harmonic current emis	sions						
		100 V input		0.5 mA max.				
	Leakage current *3	200 V input		1 mA max.				
	Inrush current (for a	100 V input		20 A max.				
	cold start at 25°C) *3	200 V input		40 A max.				
	Voltage adjustment rar	•		-10% to 15% (with V. ADJ) (	48-V models: +10%)			
	Ripple *3	.90 .0		2% (p-p) max.	10 1 111000101 = 1070)			
	Input variation influence	e		0.4% max. (with AC input vo	Itage)			
Output *4	Load variation influence			0.8% max. (0 to 100% load,	• ,			
	Temperature variation influence			0.05%/°C max. (at rated input and output)				
	Startup time			500 ms max. (up to 90% of output voltage at rated input and output)				
	Hold time *3		20 ms min.					
Overload protection *6			105% to 175% of rated load current, voltage drop, automatic reset	105% to 175% of rated lo				
Additional functions	Overvoltage protection *7		Yes					
	Overheat protection		No					
	Parallel operation		No (However, backup operat	tion is possible; external did	odes required.)			
,	Series operation			Yes (For up to two Power Supplies; external diodes required.)				
,	Protective circuit opera	ation indicator		No	,	,		
	Ambient operating tem	perature		Refer to the derating curve in condensation).	n Engineering Data on page	e 16 (with no icing or		
	Storage temperature			–25 to 65°C (with no icing or condensation)				
·	Ambient operating hun	nidity		25% to 85% (Storage humidity: 25% to 90%)				
	Dielectric strength			3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)				
	Insulation resistance			100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC				
	Vibration resistance			10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions				
	Shock resistance			150 m/s², 3 times each in ±X, ±Y, ±Z directions				
	Output indicator			Yes (Color: Green)				
,	EMI	Conducted E	missions	Conforms to EN 55011 Group 1 Class A and based on FCC Class A *9				
041	EMI	Radiated Emi	ssions	Conforms to EN 55011 Grou	p 1 Class A <b>*9</b>			
Other		Electrostatic	Discharge	Conforms to EN61000-4-2				
		Radiated Elec	tromagnetic Field	Conforms to EN61000-4-3				
	FMC	Electrical Fas	t Transient/Burst	Conforms to EN61000-4-4				
	EMS	Surge		Conforms to EN61000-4-5				
		Conducted Di	isturbance	Conforms to EN61000-4-6				
	Voltage Dips/Short Interruptions		Conforms to EN61000-4-11					
	Approved standards *9		UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition)  cUL Listed: CSA C22.2 No.107.1  cUR: CSA C22.2 No. 60950-1  EN/VDE: EN50178 (= VDE 0160), Over voltage category III, EN 60950-1 (= VDE 0805 Teil (Terminal block: Based on DIN 50274 (VDE 0660-514))					
	SEMI				SEMI F47-0200 (200-VAC			
	Weight *8			800 g max.	700 g max.	600 g max.		
		t has a built in	DC-DC converter	_	•	d the Power Supply may no		

- C converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 19.
- \*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

  \*3. Rated input voltage: 100 or 200 VAC at 100% load.

  \*4. Output characteristics: Specified at power by output terminals.

- \*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
- **\*6.** For details, refer to Overload Protection on page 19.

- \*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.
  \*8. The weight indicated is for Front-mounting, Open-frame Power Supply.
  \*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).


		Input specification	100/200 V	(Selected)	
Item		Power ratings *1	300 W	600 W	
		5 V models	71% min.	72% min.	
Efficiency		12 V models	75% min.	78% min.	
Linciency		24 V models	82% min.	80% min.	
		48 V models	82% min.	80% min.	
	Voltage *2		100 to 120 VAC (allowable range: 85 to 13 200 to 240 VAC (allowable range: 170 to 2 (Switchable)		
	Frequency *2		50/60 Hz (47 to 450 Hz)		
	Current *3	100 V input	8 A max.	16 A max.(5V, 12V, 48V) 14 A max.(24V)	
Input	Surrone 40	200 V input	4.5 A max.	9 A max.(5V, 12V, 48V) 8 A max.(24V)	
,	Harmonic current emis	sions	-		
	Leakage current *3	100 V input	0.5 mA max.		
	Leakage Current 43	200 V input	1 mA max.		
	Inrush current (for a	100 V input	25 A max.	30 A max.	
	cold start at 25°C) *3	200 V input	50 A max.	60 A max.	
	Voltage adjustment ran	nge *5	-10% to 15% (with V. ADJ) (48-V models:	±10%)	
	Ripple *3		2.8% (p-p) max.(5V) <b>*6</b> 2% (p-p) max.(12V, 24V, 48V)	3.8% (p-p) max.(5V) <b>*6</b> 2% (p-p) max.(12V) <b>*6</b> 2% (p-p) max.(24V, 48V)	
Output *4	Input variation influence	ce	0.4% max.		
Output **	Load variation influence	ce	0.8% max. (0 to 100% load, rated input vol	tage)	
	Temperature variation	influence	0.05%/°C max.		
,	Startup time		650 ms max.	500 ms max.	
,	Hold time *3		20 ms min.		
	Overload protection *7		105% to 175% of rated load current, Inverted L voltage drop, the circuit will be shut OFF when the overload exceeds 5 s.(5V, 12V) *10 voltage drop, intermittent, automatic reset. (24V, 48V)	105% to 175% of rated load current, Inverted L voltage drop, the circuit will be shut OFF when the overload exceeds 5 s. \$10	
Additional functions	Overvoltage protection *8		Yes (5V, 12V) *10 Yes (24V, 48V) *10	Yes *10	
	Overheat protection		Yes (5V, 12V) *10 N0 (24V, 48V) *10	Yes <b>*</b> 10	
	Parallel operation		Yes (up to 5 units)		
	Series operation		Yes (For up to two Power Supplies; external diodes required.)		
	Protective circuit operation indicator		Yes (color: red) (5V, 12V) No (24V, 48V)	Yes (color: red)	
	Ambient operating tem	perature	Refer to the derating curve in Engineering Data on page 16 (with no icing or condensation		
	Storage temperature		-25 to 65°C (with no icing or condensation)		
	Ambient operating hun	nidity	25% to 85% (Storage humidity: 25% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 25 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 25 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 25 mA)		
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC		
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for		
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions		
	Output indicator		Yes (Color: Green)		
	EMI	Conducted Emissions *3	Conforms to EN 55011 Group 1 Class A ar	nd based on FCC Class A *11	
Other		Radiated Emissions	Conforms to EN 55011 Group 1 Class A *	11 *12	
Julei		Electrostatic Discharge	Conforms to EN61000-4-2		
		Radiated Electromagnetic Field	Conforms to EN61000-4-3		
	EMS	Electrical Fast Transient/Burst	Conforms to EN61000-4-4		
	EMS	Surge	Conforms to EN61000-4-5		
		Conducted Disturbance	Conforms to EN61000-4-6		
		Voltage Dips/Short Interruptions	Conforms to EN61000-4-11		
			UL UR: UL 508 (Recognition), UL 60950-1	(Recognition)	
	Approved standards 4	12	cUR: CSA C22.2 No. 60950-1		
	Approved standards *	13		ge category III, EN 60950-1 (= VDE 0805 Teil 1) E 0660-514))	
	Weight *9		1,800 g max. (5V, 12V) 1,600 g max. (24V, 48V)	2,500 g max.	

- **\*1.** When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.
- \*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
- \*3. Rated input voltage: 100 or 200 VAC at 100% load.
- **\*4.** Output characteristics: Specified at power supply output terminals.
- \*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
- \*6. Measurement methods are based on JEITA standard RC-9131A. Refer to Ripple Noise Voltage on page 55.
- \*7. For details, refer to Overload Protection on page 19.
- \*8. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.
- \*9. The weight indicated is for Front-mounting Power Supply.
- \*10.The protection-ON alarm indicator will light as soon as the output is interrupted. For resetting, turn OFF the input power, leave for more than three minutes, and then turn it back ON again.
- \*11.Noise values depend on the wiring methods and other factors. Insert noise filters and cores in the input and output lines.
  - 300 W, 5 V: Two E04SR401938 (manufactured by SEIWA) on the output line.
  - 300 W, 12 V: One E04SR401938 (manufactured by SEIWA) on the output line.
  - 600 W, 5 V or 12 V: One FN2450G-16-61 (manufactured by Schaffner) on the input line.
    - One E04RC613620 (manufactured by SEIWA) on the output line.
- \*12.For the 600-W, 5-V and 12-V models, class A compliance was met with an aluminum plate placed under the Power Supply.
- \*13. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).


# **Connections**

## **Block Diagrams**


S8JX-G01505 (15 W) S8JX-G01512 (15 W) S8JX-G01515 (15 W) S8JX-G01524 (15 W)

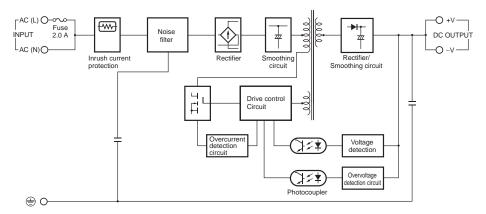


S8JX-G01548 (15 W)

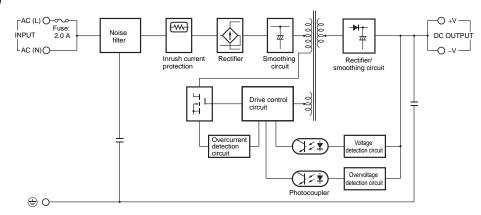


S8JX-G03505 (35 W) S8JX-G03512 (35 W) S8JX-G03515 (35 W) S8JX-G03524 (35 W)

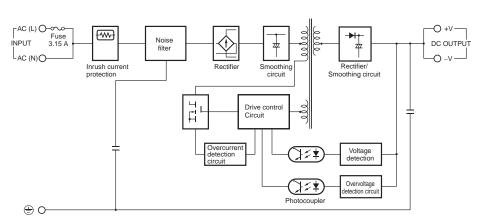


#### S8JX-G03548□□ (35 W)

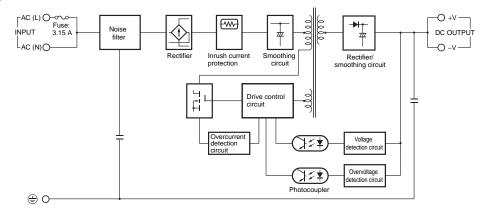


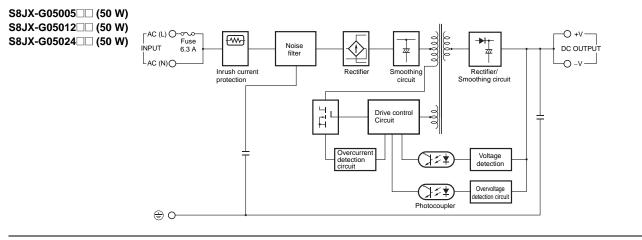


#### S8JX-G05048□□ (50 W)

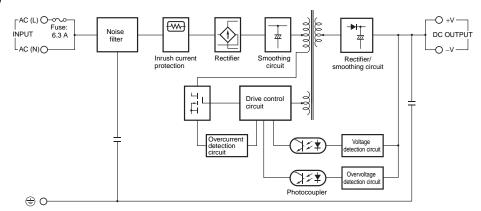

#### S8JX-G100 (100 W)

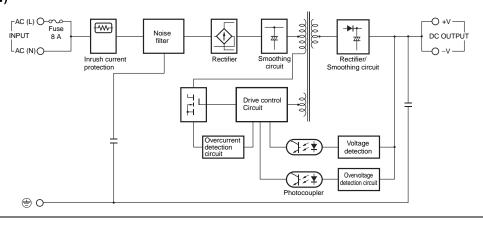


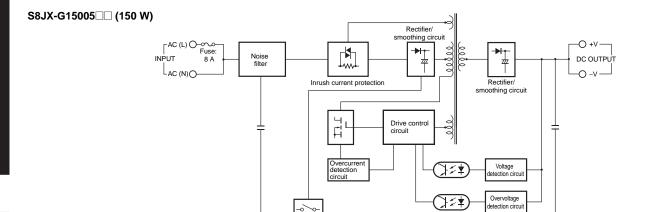


Input voltage switch 100/200 V switching

Note: Set the input voltage switch to "115V" for 100 to 120 VAC and to "230V" for 200 to 240 VAC.


S8JX-G15012 (150 W) S8JX-G15024 (150 W) S8JX-G15048 (150 W) ⊕ 0-

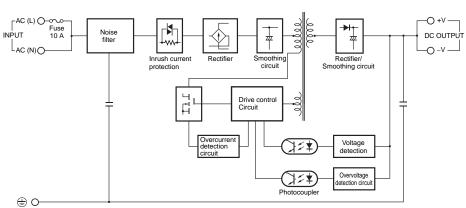

S8JX-G30005□□ (300 W) S8JX-G30012□□ (300 W)

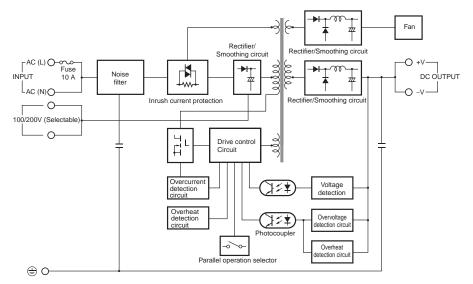


Note: Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC. Keep the terminals open if the input is 200 to 240 VAC.

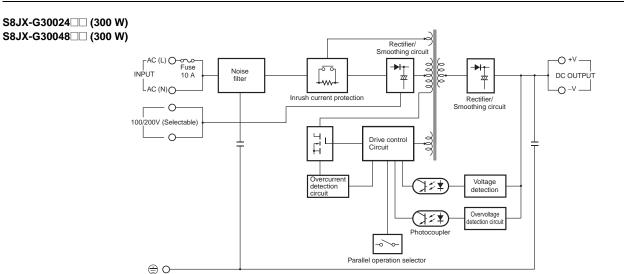


Note: Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC. Keep the terminals open if the input is 200 to 240 VAC.

S8JX-G60005□ (600 W) S8JX-G60012□ (600 W) S8JX-G60048□ (600 W)

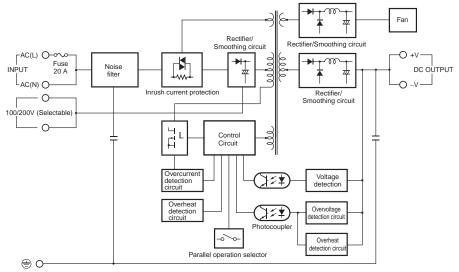

**Note:** Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC. Keep the terminals open if the input is 200 to 240 VAC.

#### S8JX-G60024□ (600 W)

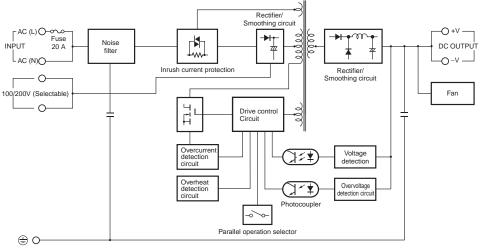


Note: Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC. Keep the terminals open if the input is 200 to 240 VAC.

## **Construction and Nomenclature**

## **Nomenclature**

#### 15-/35-/50-/100-/150-W Models

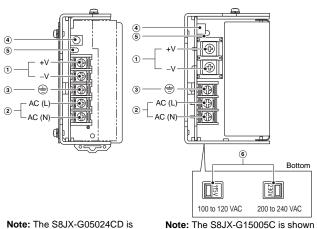


ote: The S8JX-G05024CD is shown above. Note: The S8JX-G15005C above.


No.	Name	Function
1	DC Output Terminals (-V), (+V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) ( )	Connect the ground line to these terminals. *2
4	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
6 Input voltage switch		Switches the internal circuits according to the input voltage. "115V": 100 to 120 VAC "230V": 200 to 240 VAC

- \*1. The fuse is located on the (L) side. It is NOT user-replaceable. For a DC power input, connect the low side to the positive (+) terminal.
- \*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

#### 300-W 5V, 12V Model

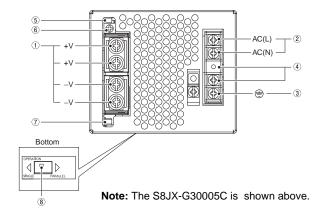


#### 300-W 24V, 48V Model

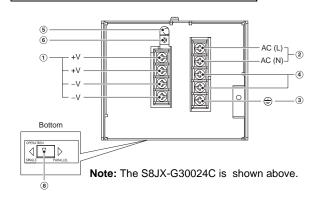

#### 300-W Model

No.	Name	Function
1	DC Output Terminals (+V), (-V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) ( )	Connect the ground line to these terminals. *2
4	Input Voltage Selector Terminals	Short-circuit the terminals if the input is 100 to 120 VAC and open the terminals if the input is 200 to 240 VAC.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
6	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
7	Protection-ON Alarm Indicator (ALM: Red)	The red indicator will be lit if the overvoltage or overheat protection circuit is triggered. This indicator will also be lit when overload is detected. \$3
8	Selector of Parallel Operation	Set the selector to PARALLEL if the Units are in parallel operation.

- **\*1.** The fuse is located on the (L) side. It is NOT user-replaceable.
- \*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.
- **\*3.** This is not applicable to 24-V and 48-V models.

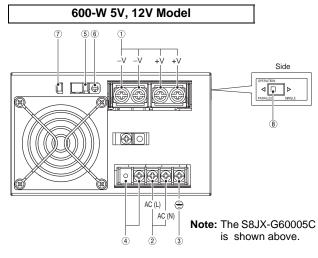


#### 600-W Model

	No.	Name	Function
	1	DC Output Terminals (+V), (-V)	Connect the load lines to these terminals.
	2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
	Input Voltage Selector Terminals		Connect the ground line to these terminals. *2
			Short-circuit the terminals if the input is 100 to 120 VAC and open the terminals if the input is 200 to 240 VAC.
	5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
	6	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
;	7	Protection-ON Alarm Indicator (ALM: Red)	The red indicator will be lit if the overvoltage or overheat protection circuit is triggered. This indicator will also be lit when overload is detected.
	8	Selector of Parallel Operation	Set the selector to PARALLEL if the Units are in parallel operation.

- **\*1.** The fuse is located on the (L) side. It is NOT user-replaceable. **\*2.** This is the protective earth terminal specified in the safety standards. Always ground this terminal.

#### 600-W 24V, 48V Model

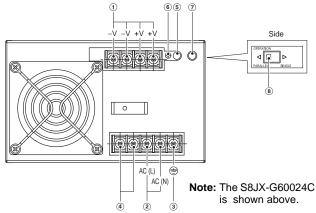

#### **Reference Values**


Reliability (MTBF)	S8JX-G15012□□ and S8JX-G15005□□	S8JX-G30005□□ and S8JX-G300012□□	S8JX-G6000□□□	Other models	
	240,000 hrs	200,000 hrs	170,000 hrs	250,000 hrs	
Definition	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices.  Therefore, it does not necessarily represent a life of the product.				
Life expectancy	10 yrs. min.				
Definition	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.				

# **Engineering Data**


#### **Derating Curves (Standard Mounting)**

#### 15-/35-/50-/100-/150-W Models

#### **Open-frame Power Supplies**

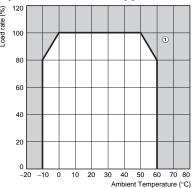

#### **Covered Power Supplies**

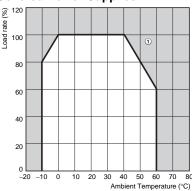

- **Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
  - 2. If there is a derating problem, use forced air-cooling.
  - 3. For Customers Using a DC Input

When using an input voltage of less than 100 VDC, reduce the load calculated with the above derating curve by at least the following coefficients.


35-W and 100-W (5-V or 12-V output) models: 0.8

50-W/150-W models: 0.85 (DC power cannot be input only to the S8JX-G15005□□.)


15-W and 100-W (24-V or 48-V output): 0.9

#### 300-/600-W 24V, 48V Models

#### **Single Unit Operation**

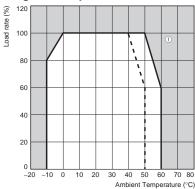

#### **Parallel Operation**

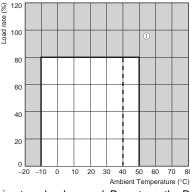


Solid line Front-mounting,
Bottom-mounting,
DIN Rail mounting,
Side mounting
(300W 5V, 12V/
600W 24V, 48V Models)

---- Dotted line Side mounting (300W 24V, 48V Models)


- **Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
  - 2. If there is a derating problem, use forced air-cooling.

#### 600-W 5V, 12V Models

#### **Single Unit Operation**

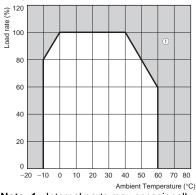

#### **Parallel Operation**

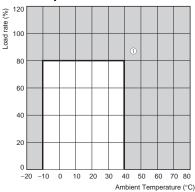

Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).


#### Mounting

#### 15-/35-/50-/100-/150-W Models

The following three mounting methods are possible.


- (A). Front-mounting: Refer to Mounting Bracket Provided with Front-mounting Power Supplies (A) on page 25.
- (B). Bottom-mounting
- ©. Side-mounting

Note: Additional mounting methods are also available using DIN Rail-mounting models.

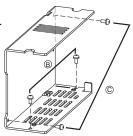



#### **Standard Mounting**
   
#### 15-/35-/50-/100-/150-W Models













- Note: 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.


20mm min


3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

#### 300-W 5V, 12V Model

 

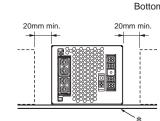


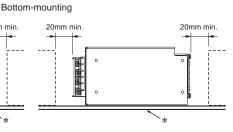

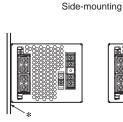





**DIN Rail mounting** 

 



- Note: 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-


#### 300-W 24V, 48V Model

 

 


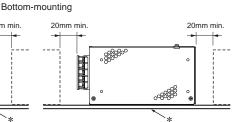

 

 


**DIN** Rail mounting

 



- Note: 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.


#### 600-W Model



 

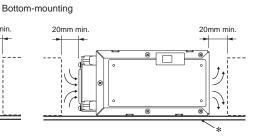

 

 

- **Note: 1.** Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - 2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - 3. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.


#### **Overload Protection**

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% to 175% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


- Note: 1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.
  - 2. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
  - 3. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

#### (Reference value)


#### 15-/35-/50-/100-/150-W (12-/24-/48-V) Models

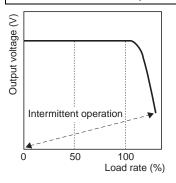


#### 150-W, 5-V Models

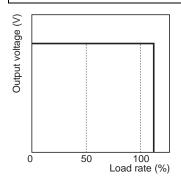

#### 300-W 24V, 48V Model

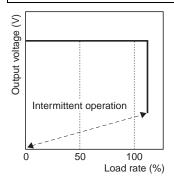

#### 300-W 5V, 12V/600-W Model

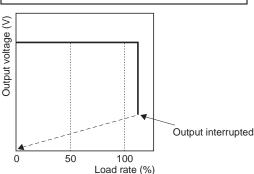

If an excessive current flows for 5 s or more, the output will be turned OFF and simultaneously the protection-ON alarm indicator will be lit. To reset the S8JX, turn OFF the power, leave the S8JX for at least three minutes, and then turn it ON again.

#### **Overvoltage Protection**


#### 15-/35-/50-/100-/150-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least seven minutes and then turning it back ON again.

#### 300-/600-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 120% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage (Except 300-W 24V, 48V models). Reset the input power by turning it OFF for at least three minute and then turning it back ON again.

#### (Reference value)

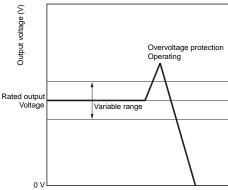


Note: Do not turn ON the power again until the cause of the overvoltage has been removed.

#### **Overheat Protection**

#### 300-W 5V, 12V/600-W Model

If the internal temperature rises excessively as a result of fan failure or any other reason, the overheat protection circuit will be triggered to shut OFF the output voltage and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

#### **Inrush Current, Startup Time, Output Hold Time**

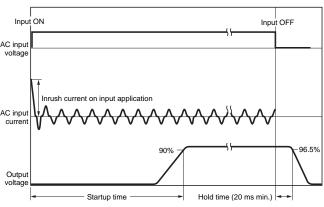

Note: A maximum startup time of 500 ms is required (650 ms for 300 W). Construct a system configuration that considers the startup time of other devices.


Dimensions (Unit: mm)


#### **Front-mounting Models**



 S8JX-G035□□C (35 W)





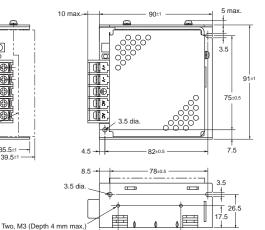



#### Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5 82±0.5
Bottom Mounting	Two, M3

 S8JX-G050□□ (50 W) S8JX-G050□□C (50 W)






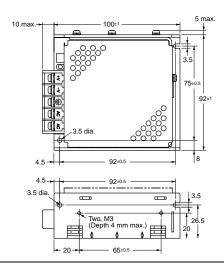

#### Panel mounting holes dimensions


	Surface screw mounting
Side Mounting	75±0.5 75±0.5
Bottom Mounting	Two, M3

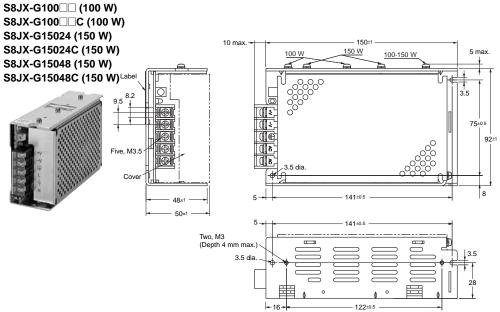


#### Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5
Bottom Mounting	Two, M3


#### S8JX-G15005 (150 W) S8JX-G15005C (150 W)

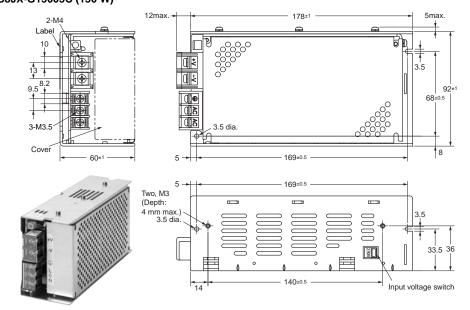

#### Panel mounting holes dimensions

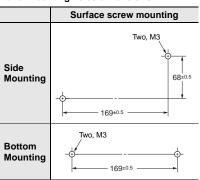



#### S8JX-G15012 (150 W) S8JX-G15012C (150 W)

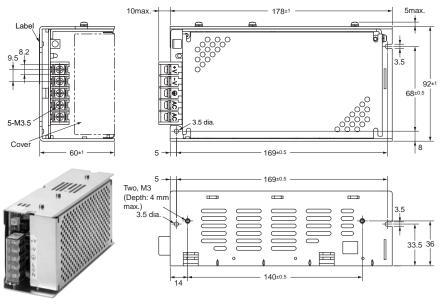


#### Panel mounting holes dimensions

	-						
	Surface screw mounting						
Side Mounting	Two, M3 68±0.5						
Bottom Mounting	Two, M3						

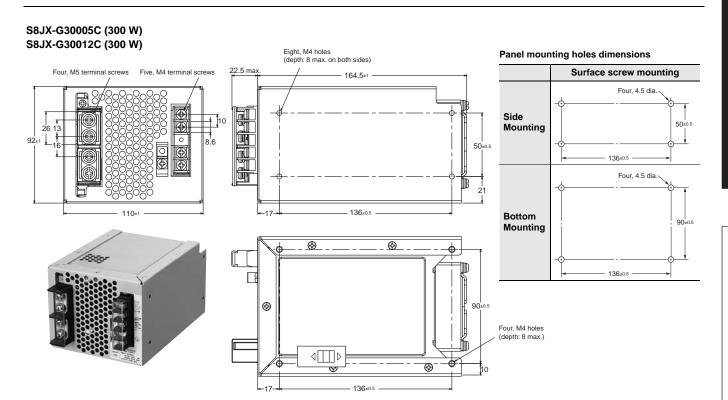


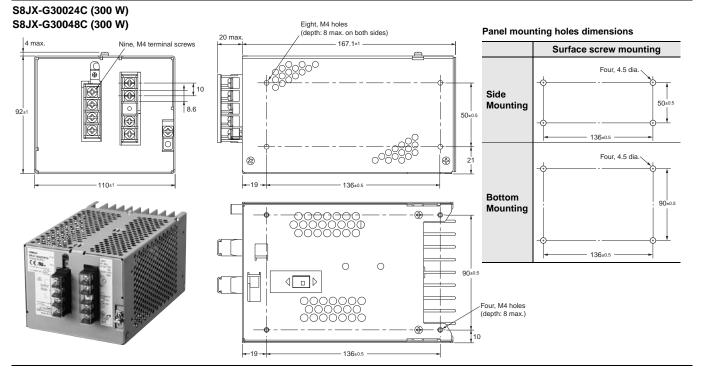

#### S8JX-G60005□ (600 W) S8JX-G60012□ (600 W)

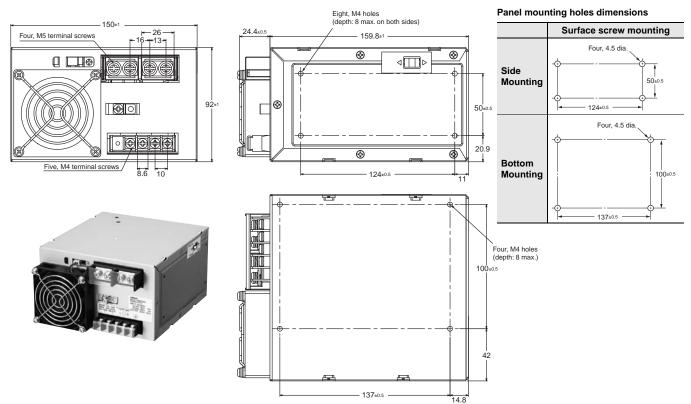

#### S8JX-G60024C (600 W) S8JX-G60048C (600 W)

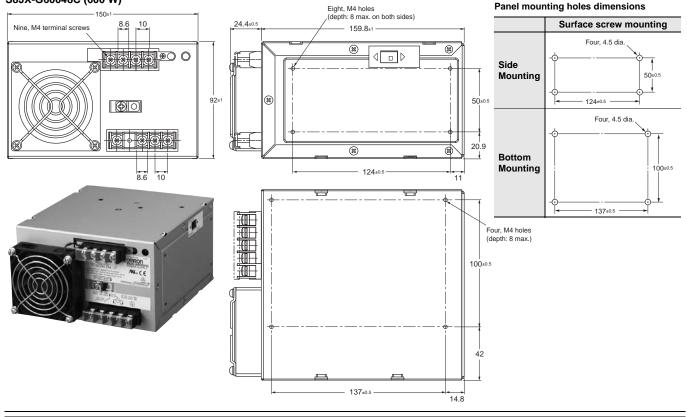

## Mounting Bracket Provided with Front-mounting Power Supplies (A)


15-/35-/50-/100-/150-W Models

# S82Y-J00F Front-mounting Bracket

# 


#### **Front-mounting Method**

Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

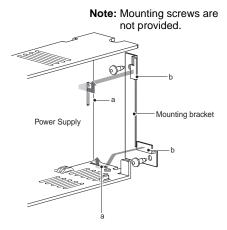


300-/600-W Models

#### Front-mounting Bracket (S82Y-J30F)

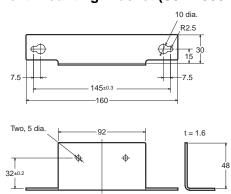


**Note:** Mounting Brackets are provided in a set, one for the right side and one for the left side.

#### Dimensions with Mounting Brackets

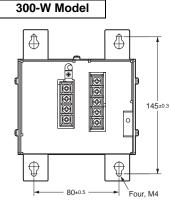


#### **Attaching the Mounting Brackets**

#### 300-W Model

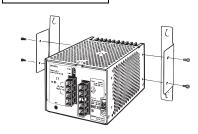


Note: To provide ventilation space, the body will shift forward by 21.6 mm from the mounting surface.

#### 600-W Model

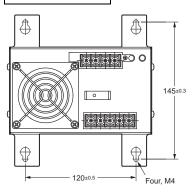

#### 600-W Model

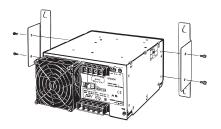

**Note:** To provide ventilation space, the body will shift forward by 23.6 mm from the mounting surface.

#### Separately purchasable mounting brackets (Please ask your dealer for details of delivery.)

For 15-W/30-W/50-W/100-W/150-W/300-W/600-W models (separately purchasable)

#### Bracket for changeover from S82J-series

The mounting-hole pitch of mounting brackets A - I below is identical to that of our product S82J. These brackets can be used for switchover with the S82J-series.


Models compatible with the S82J-series	Mounting Orientation	Products names	Model
50-W models		Mounting bracket A (For S8JX-G-series 50-W models)	S82Y-JX05B
100-W 24 V models	Underside mounting	Mounting bracket B (For S8JX-G-series 100-W 24 V models)	S82Y-JX10B
100-W 5 V, 12 V, 150-W 24 V models		Mounting bracket C (For S8JX-G-series 100-W 5 V, 12V, 150 W models)	S82Y-JX15B
100-W 5 V, 12 V, 150-W 24 V models	Front mounting	Mounting bracket D (For S8JX-G-series 100-W 5 V, 12 V, 150 W models)	S82Y-JX15F
25-W models	Underside mounting	Mounting bracket E (For S8JX-G-series 30-W models)	S82Y-JX03B
300-W models	Underside mounting	Mounting bracket F (For S8JX-G-series 300-W models)	S82Y-JX30B
300-W Models	Front mounting	Mounting bracket G (For S8JX-G-series 300-W models)	S82Y-JX30F
600-W models	Underside mounting	Mounting bracket H (For S8JX-G-series 600-W models)	S82Y-JX60B
	Front mounting	Mounting bracket I (For S8JX-G-series 600-W models)	S82Y-JX60F

Note: Mounting brackets (A, B, C, D, E, F, G, H, I) are compatible with S82J mounting holes.

#### **Mounting Bracket A** S82Y-JX05B 161 6.5 3.5 dia




Thickness = 2

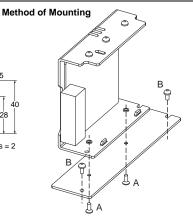


#### Screws used

- A: Accessories (2 locations) Be sure to use the accessory screws. Mounting screw tightening torque (recommended): 0.49 N \* m B: M3 (2 locations)

# **Mounting Bracket B S82Y-JX10B**

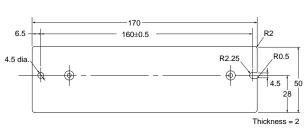

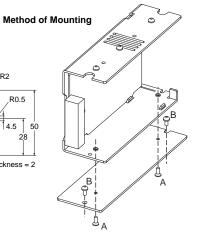


#### Screws used


- A: Accessories (2 locations)

  Be sure to use the accessory screws. Mounting screw tightening torque (recommended): 0.49 N • m
- B: M4 (2 locations)


#### **Mounting Bracket C** S82Y-JX15B

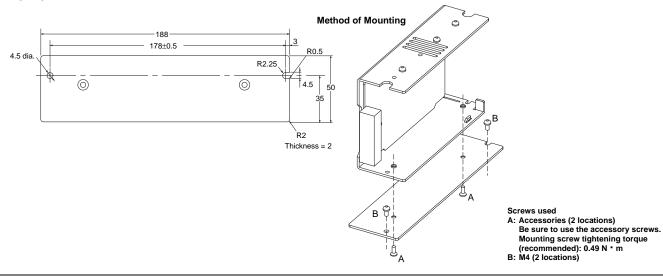

#### **Mounting Bracket D** S82Y-JX15F

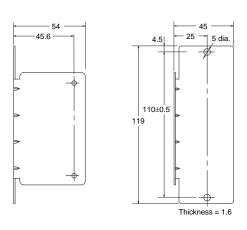


#### **Method of Mounting**

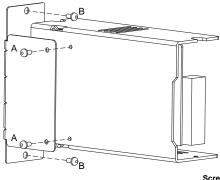


- A: Accessories (2 locations)
  Be sure to use the accessory screws
  Mounting screw tightening torque
  (recommended): 0.49 N m
  B: M4 (2 locations)

#### **Mounting Bracket E** S82Y-JX03B

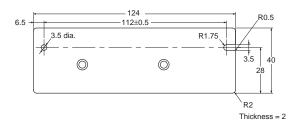


#### **Method of Mounting**

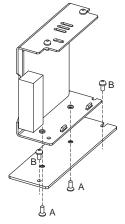

- Screws used A: Accessories (2 locations) Be sure to use the accessory screws. Mounting screw tightening torque (recommended): 0.49 N \* m
  B: M3 (2 locations)


# **Common Precautions**

#### **Mounting Bracket F** S82Y-JX30B

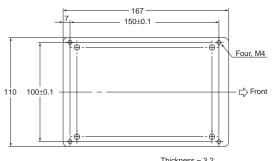

Thickness = 3.2


#### Method of Mounting

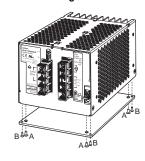


Screws used A: Accessories (4 locations) Be sure to use the accessory screws.


- M4 (4 locations)
  Screws of a length that will not project
- beyond the fixture (thickness: 3.2 mm) should be selected.

#### **Mounting Bracket G** S82Y-JX30F

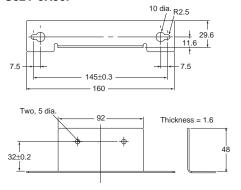

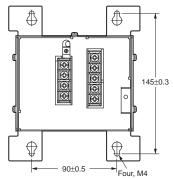


#### **Method of Mounting**

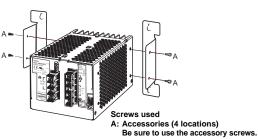


Note: For ventilation of the back surface, the body should be placed 21.6 mm in front of the mounting side.

#### **Mounting Bracket H** S82Y-JX60B

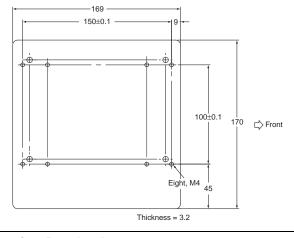



#### **Method of Mounting**

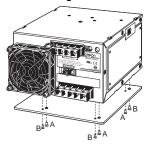


- Screws used
  A: Accessories (4 locations)
  Be sure to use the accessory screws.
  B: M4 (4 locations)
- Screws of a length that will not project beyond the fixture (thickness: 3.2 mm) should be selected. (Although there are 8 holes in the bracket body, only 4 of these are used.)

#### **Mounting Bracket I S82Y-JX60F**

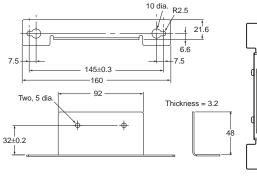

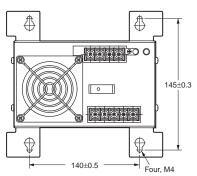

#### **Method of Mounting**

 

Screws used

A: Accessories (4 locations)


Be sure to use the accessory screws.


Note: For ventilation of the back surface, the body should be placed 23.6 mm in front of the mounting side.

#### **DIN Rail-mounting Models**






 


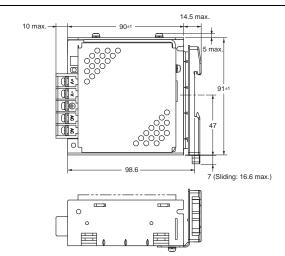

 S8JX-G050□□D (50 W) S8JX-G050□□CD (50 W)







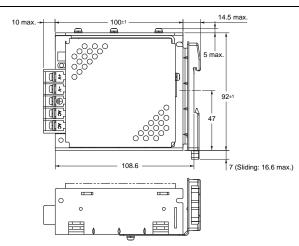



S8JX-G100 D (100 W)
S8JX-G100 CD (100 W)
S8JX-G15024D (150 W)
S8JX-G15024CD (150 W)
S8JX-G15048D (150 W)
S8JX-G15048CD (150 W)



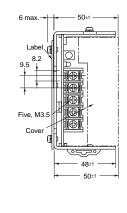


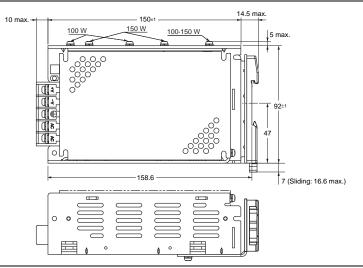

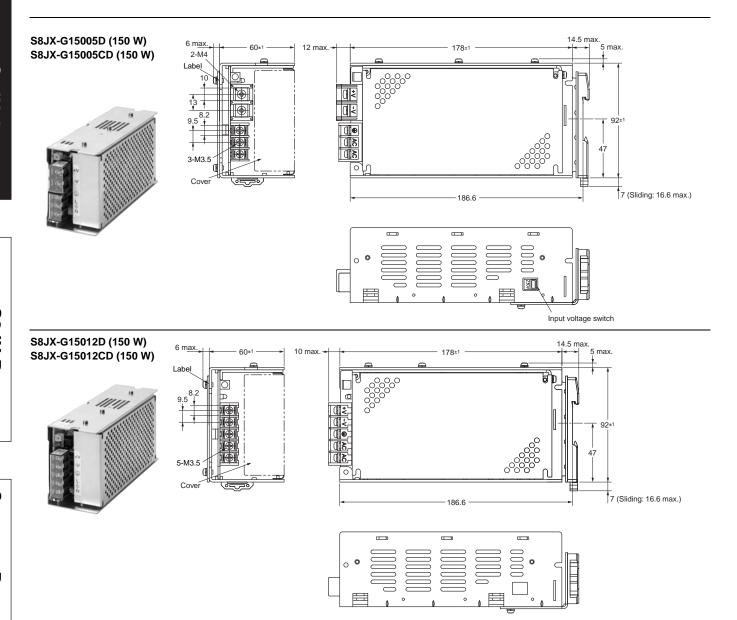

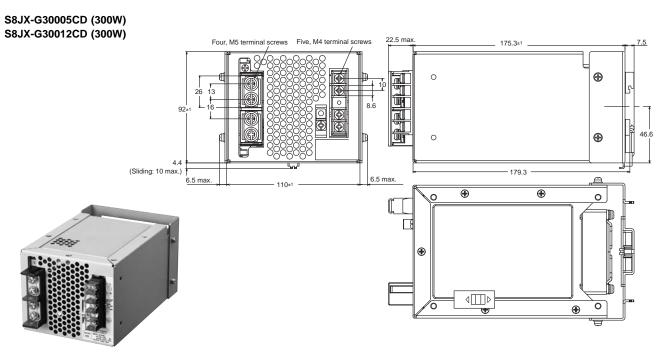



Note: Use a metal DIN Rail when mounting a 300-W model to a DIN Rail.

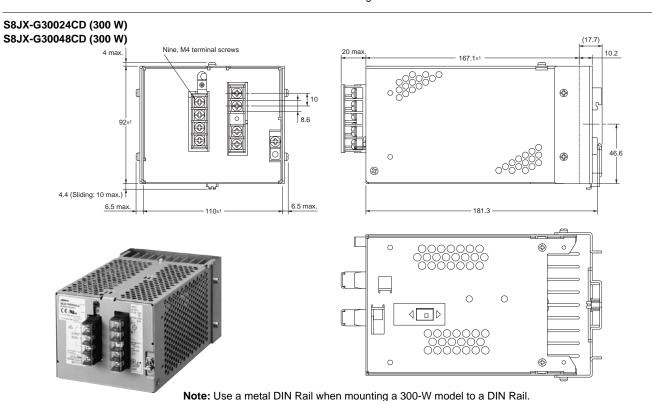

## **DIN Rail (Order Separately)**

  
# Mounting Rail (Material: Aluminum)






Model
PFP-100N
PFP-50N

# Mounting Rail (Material: Aluminum)

 


 

Model PFP-100N2

#### **End Plate**



 

Model PFP-M

- Note: 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.
  - 2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

#### **Terminal Cover (Order Separately)**

Terminal Cover model	Applicable Power Supply and applicable location			
S82Y-JX-C4P	S8JX-G-300W, 24-V or 48-V output			
3021-3X-C4F	S8JX-G-600W, 24-V or 48-V output			
S82Y-JX-C5P	S8JX-G-300W, input			
3021-JA-C3P	S8JX-G-600W, input			
	S8JX-G-15W			
	S8JX-G-30W			
S82Y-JTC1	S8JX-G-50W			
	S8JX-G-100W			
	S8JX-G-150W, 12-V, 24-V or 48-V model			

#### Replacement Fan (sold separately)

Model	
S82Y-JXFAN	
	_

**Common Precautions** 

## **Model Number Legend**

Note: Not all combinations are possible. Refer to List of Models in Ordering Information on page 34.

#### 50-/100-/150-W Models

# S8JX-P 1 2 3 4

1. Power Ratings

050: 50 W 100: 100 W 150: 150 W

2. Output Voltage

05: 5 V 12: 12 V 24: 24 V 48: 48 V 3. Configuration (50/100/150 W model)

None: Open-frame C: Covered

4. Configuration/mounting

None: Front-mounting D: DIN Rail-mounting

#### 300-/600-W Models

# S8JX-P 1 2 3

1. Power Ratings

300: 300 W 600: 600 W 2. Output Voltage

05: 5V 12: 12 V 24: 24 V 48: 48 V

3. Configuration/mounting (covered type)

C: Front-mounting
CD: DIN Rail-mounting
N: Without mounting bracket

Note: Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.

# **Ordering Information**

## **List of Models**

Note: For details on normal stock models, contact your nearest OMRON representative.

Configuration		Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
				5 V	10 A		S8JX-P05005
			50 W	12 V	4.2 A	1	S8JX-P05012
			50 W	24 V	2.1 A	1	S8JX-P05024
				48 V	1.1 A	1	S8JX-P05048
				5 V	20 A		S8JX-P10005
	Front mounting #44		100 W	12 V	8.5 A		S8JX-P10012
	Front-mounting *1		100 W	24 V	4.5 A		S8JX-P10024
				48 V	2.1 A	1	S8JX-P10048
			450.144	5 V	30 A	1	S8JX-P15005
				12 V	13 A	1	S8JX-P15012
			150 W	24 V	6.5 A	1	S8JX-P15024
pen-frame Power				48 V	3.3 A	1	S8JX-P15048
upplies				5 V	10 A	1	S8JX-P05005D
			50.14	12 V	4.2 A		S8JX-P05012D
			50 W	24 V	2.1 A		S8JX-P05024D
				48 V	1.1 A		S8JX-P05048D
				5 V	20 A		S8JX-P10005D
	D.11. D. 11		400114	12 V	8.5 A		S8JX-P10012D
	DIN Rail-mounting *2		100 W	24 V	4.5 A	1 1	S8JX-P10024D
				48 V	2.1 A	1	S8JX-P10048D
				5 V	30 A	1	S8JX-P15005D
			4=0.144	12 V	13 A	1	S8JX-P15012D
			150 W	24 V	6.5 A	No No	S8JX-P15024D
		100 to 240 VAC		48 V	3.3 A		S8JX-P15048D
		(free)		5 V	10 A		S8JX-P05005C
		(80 to 370 VDC *3)	== 111	12 V	4.2 A		S8JX-P05012C
			50 W	24 V	2.1 A		S8JX-P05024C
				48 V	1.1 A		S8JX-P05048C
				5 V	20 A		S8JX-P10005C
			100 W	12 V	8.5 A		S8JX-P10012C
	Front-mounting *1	150 W		24 V	4.5 A		S8JX-P10024C
				48 V	2.1 A		S8JX-P10048C
			150 W	5 V	30 A		S8JX-P15005C
				12 V	13 A		S8JX-P15012C
				24 V	6.5 A		S8JX-P15024C
overed Power				48 V	3.3 A		S8JX-P15048C
upplies				5 V	10 A		S8JX-P05005CD
				12 V	4.2 A		S8JX-P05012CD
			50 W	24 V	2.1 A		S8JX-P05024CD
				48 V	1.1 A		S8JX-P05048CD
				5 V	20 A	1 +	S8JX-P10005CD
				12 V	8.5 A	1	S8JX-P10012CD
	DIN Rail-mounting *2		100 W	24 V	4.5 A		S8JX-P10024CD
				48 V	2.1 A		S8JX-P10048CD
				5 V	30 A	† †	S8JX-P15005CD
				12 V	13 A	†	S8JX-P15012CD
			150 W	24 V	6.5 A		S8JX-P15024CD
				48 V	3.3 A		S8JX-P15048CD
			1	40 V	3.3 A		303A-F 13048CD

**<sup>\*1.</sup>** The front-mounting bracket is included as standard with the product.

**<sup>\*2.</sup>** A front-mounting bracket is not included with the product.

<sup>\*3.</sup> The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Config	guration	Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
				5 V	60 A		S8JX-P30005C
				12 V	27 A		S8JX-P30012C
			300 W	24 V	14 A peak current 16.5 A (200 VAC)		S8JX-P30024C
				48 V	7 A		S8JX-P30048C
	Front-mounting *1			5 V	120 A		S8JX-P60005C
				12 V	53 A		S8JX-P60012C
			600 W	24 V	27 A peak current 31 A (200 VAC)		S8JX-P60024C
				48 V	13 A	1	S8JX-P60048C
				5 V	60 A	1	S8JX-P30005CD
				12 V	27 A	1	S8JX-P30012CD
	DIN Rail-mounting *2	100 to 240 VAC (free)	300 W	24 V	14 A peak current 16.5 A (200 VAC)	Yes	\$8JX-P30024CD
Covered Power Sup-				48 V	7 A		S8JX-P30048CD
plies			600 W	5 V	120 A		S8JX-P60005CD
		(80 to 370 VDC *3)		12 V	53 A		S8JX-P60012CD
				24 V	27 A peak current 31 A (200 VAC)		S8JX-P60024CD
				48 V	13 A		S8JX-P60048CD
			300 W	5 V	60 A		S8JX-P30005N
				12 V	27 A		S8JX-P30012N
	Without mounting brackets *2			24 V	14 A peak current 16.5 A (200 VAC)		S8JX-P30024N
				48 V	7 A		S8JX-P30048N
				5 V	120 A	1	S8JX-P60005N
				12 V	53 A		S8JX-P60012N
			600 W	24 V	27 A peak current 31 A (200 VAC)		\$8JX-P60024N
				48 V	13 A		S8JX-P60048N

**<sup>\*1.</sup>** The front-mounting bracket is included as standard with the product.

<sup>\*2.</sup> A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

# Ratings, Characteristics, and Functions

Input specification			100 to 240 V input					
Item		Power ratings *1	50 W	100 W	150 W			
		5 V Models	73% min.	78% min.	79% min.			
Efficiency		12 V Models	76% min.	78% min.	78% min.			
Efficiency		24 V Models	77% min.	81% min.	81% min.			
		48 V Models	80% min.	81% min.	82% min.			
	Voltage *2		100 to 240 VAC (allowable r	ange: 85 to 264 VAC, 80 to 3	370 VDC <b>*9</b> )			
	Frequency *2	Frequency *2						
	0	100 V input	0.75 A max.	1.4 A max.	2.1 A max.			
	Current *3	200 V input	0.4 A max.	0.75 A max.	1.1 A max.			
Imm4	Power factor	Power factor						
nput	Harmonic current emis	ssions	Conforms to EN61000-3-2					
	1 1	100 V input	0.5 mA max.					
	Leakage current *3	200 V input	1 mA max.					
	Inrush current (for a	100 V input	17.5 A max.					
	cold start at 25°C) *3	200 V input	35 A max.					
	Voltage adjustment rai	nge *5	-10% to 15% (with V. ADJ) (	(48-V models: ±10%)				
	Dimeda de		2% (p-p) max.	· · · · · · · · · · · · · · · · · · ·				
	Ripple *3			hen the ambient temperature is	s less than 0°C (for only 5 V type)			
04	Input variation influen	ce	0.4% max. with AC input vol-	tage				
Output *4	Load variation influence	ce	0.8% max. (0 to 100% load,	rated input voltage)				
	Temperature variation	perature variation influence		ut and output)				
	Startup time		1,000 ms max.					
	Hold time *3		20 ms min.					
	Overload protection *	verload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset 105% to 160% of rated load current, voltage drop, automatic reset				
Additional	Overvoltage protection	ı <b>*</b> 7	Yes					
Additional functions	Overheat protection		No					
	Parallel operation	•		tion is possible; external dioc	les required.)			
	Series operation			upplies; external diodes requ				
	Protective circuit oper	ation indicator	No		•			
	Ambient operating ten	nperature	Refer to the derating curve in <i>Engineering Data</i> on page 42 (with no icing or condensation).					
	Storage temperature		-25 to 75°C (with no icing or condensation)					
	Ambient operating hur	nidity	25% to 85% (Storage humid	ity: 25% to 90%)				
	Dielectric strength	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)				
	Insulation resistance		100 M $\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC					
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions					
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions					
	Output indicator		Yes (Color: Green)					
	ЕМІ	Conducted Emissions	Conforms to EN 55011 Grou	ıp 1 Class B and based on F	CC Class B <b>*9</b>			
	CIVII	Radiated Emissions	Conforms to EN 55011 Group 1 Class B *9					
Other		Electrostatic Discharge	Conforms to EN61000-4-2					
		Radiated Electromagnetic Field	Conforms to EN61000-4-3 Conforms to EN61000-4-4					
	EMS	Electrical Fast Transient/Burst						
	LIVIO	Surge	Conforms to EN61000-4-5					
		Conducted Disturbance	Conforms to EN61000-4-6					
	Voltage Dips/Short Interruptions		Conforms to EN61000-4-11					
		Approved standards *9		UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition)				
	Approved standards *			cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1				
			EN/VDE: EN50178 (= VDE 0160) Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))					
	SEMI		SEMI F47-0706 (200-VAC input)					
Weight *8			370 g max.	550 g max.	590 g max.			

<sup>\*1.</sup> When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 44.
\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
\*3. Rated input voltage: 100 or 200 VAC at 100% load.
\*4. Output characteristics: Specified at power supply output terminals.
\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
\*6. For details, refer to Overload Protection on page 44.
\*7. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.
\*8. The weight indicated is for Front-mounting, Open-frame Power Supply.
\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

		Input specification	100 to 24	0 V input
Item		Power ratings *1	300 W	600 W
		5 V models	75% min.	76% min.
		12 V models	77% min.	76% min.
Efficiency		24 V models	79% min.	78% min.
		48 V models	78% min.	79% min.
	Voltage *2	10 1 111000	100 to 240 VAC (allowable range: 85 to 264	
	Frequency *2		50/60 Hz (47 to 63 Hz)	
		100 V input	4.5 A max.	8.7 A max.
	Current *3	200 V input	2.2 A max.	4.3 A max.
	Power factor		0.9 min.	
Input	Harmonic current emissions		Conforms to EN61000-3-2	
		100 V input	0.5 mA max.	
	Leakage current *3	200 V input	1 mA max.	
	Inrush current (for a	100 V input	17.5 A max.	
	cold start at 25°C) *3	200 V input	35 A max.	
	Voltage adjustment ran	nge *5	-10% to 15% (with V. ADJ) (5 V, 48 V mode	els: ±10%)
	Dinale W2	<del>-</del>	2% (p-p) max.	
	Ripple *3		3% (p-p) max. (for only 5 V type) <b>*13</b>	
Output v4	Input variation influence	e	0.4% max.	
Output *4	Load variation influence	e	0.8% max. (0 to 100% load, rated input volt	age)
	Temperature variation influence		0.05%/°C max.	
	Startup time		1,000 ms max.	
	Hold time *3		20 ms min.	
	Overload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset.	
	Overvoltage protection *7		Yes	
Additional	Overheat protection		Yes	
functions	Parallel operation		Yes (up to 5 Power Supplies)	
	Series operation		Yes (For up to two Power Supplies; external diodes required.)	
	Protective circuit operation indicator		Yes (color: red)	
	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 42 (with no icing or condensation).	
	Storage temperature		-25 to 75°C (with no icing or condensation)	
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)	
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 100 mA) 100 VAC for 1 min. (between all outputs and RC terminals; detection current: 100 mA) 500 VAC for 1 min. (between all outputs and ALM terminals; detection current: 20 mA)	
	Insulation resistance		100 M $\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC	
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions	
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions <b>*11</b>	
	Output indicator		Yes (Color: Green)	
	ЕМІ	Conducted Emissions *3	Conforms to EN 55011 Group 1 Class B an	d based on FCC Class B <b>*12</b>
Other	LITII	Radiated Emissions	Conforms to EN 55011 Group 1 Class B *1	2
		Electrostatic Discharge	Conforms to EN61000-4-2	
		Radiated Electromagnetic Field	Conforms to EN61000-4-3	
	EMS	Electrical Fast Transient/Burst	Conforms to EN61000-4-4	
		Surge	Conforms to EN61000-4-5	
		Conducted Disturbance	Conforms to EN61000-4-6	
	Voltage Dips/Short Interruptions		Conforms to EN61000-4-11	
	Approved standards *8		UL UR: UL 508 (Recognition), UL 60950-1	
			cUR: CSA C22.2 No.107.1, CSA C22.2 No. 60950-1	
			EN/VDE: EN50178 (= VDE 0160) Over voltage category III <b>*9</b> , EN 60950-1 (= VDE 0805 Teil 1) <b>*9</b> (Terminal block: Based on DIN 50274 (VDE 0660-514))	
	SEMI		SEMI F47-0706 (200-VAC input)	
	Weight			


- \*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 44.
- \*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
- \*3. Rated input voltage: 100 or 200 VAC at 100% load.
- **\*4.** Output characteristics: Specified at power supply output terminals.
- \*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
- \*6. For details, refer to Overload Protection on page 44.
- \*7. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.
- \*8. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

  \*9. Certification for 5V, 12V, and 48V of the 300-W model, and 5V, 12V, and 48V of the 600-W model, is scheduled to be obtained in June, 2012. **\*10.**The weight is of the type without a mounting bracket.
- **\*11.**S8JX-P600□□CD: 100 m/s<sup>2</sup>
- \*12. The noise value will vary depending on wiring methods and other characteristics.
  - 300-W/600-W models conform to Class B with an aluminum plate set under the product.
  - For the 300-W 5V and 600-W 5V and 12V models, insert a noise filter (TDK-Lambda RSEN-2016) in the input line.
- \*13.Measurement method conform to RC-9131A of the JEITA standards. For details, refer to "Ripple Noise Voltage" on page 55.


# **Connections**

### **Block Diagrams**


S8JX-P050 (50 W)

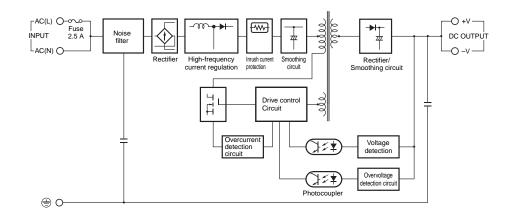


S8JX-P100 (100 W) S8JX-P150 (150 W)

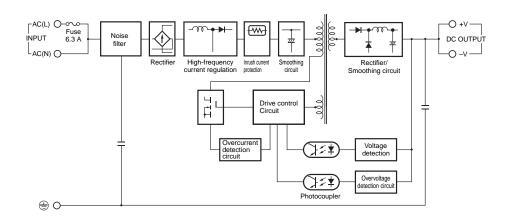

#### S8JX-P300 (300 W)

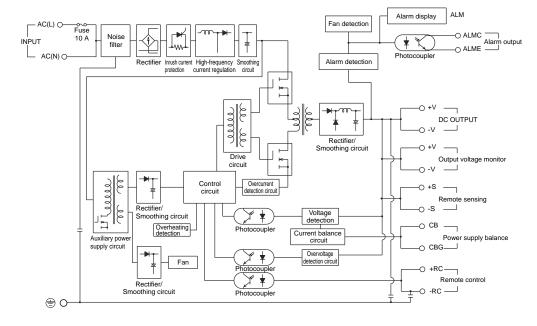


#### S8JX-P600□□□□ (600 W)

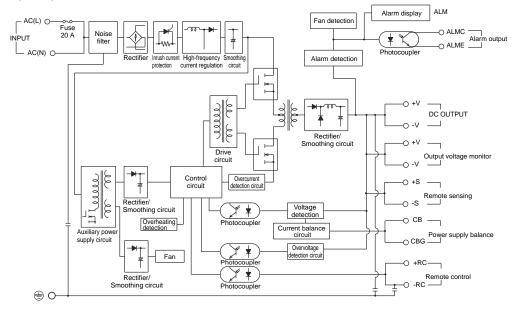



# **Construction and Nomenclature**

#### **Nomenclature**
 
#### 50-/100-/150-W Models

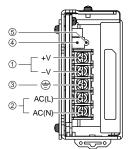




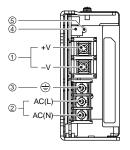

**Note:** The S8JX-P15005C is shown above.


- No. Name **Function** DC Output Connect the load lines to these terminals. 1 Terminals (-V), (+V) AC Input Terminals 2 Connect the input lines to these terminals. \*1 (L), (N) Protective Earth 3 Connect the ground line to these terminals. \*2 Terminal (PE) ( 🖶 ) Output Voltage It is possible to increase or decrease the output 4 Adjuster (V. ADJ) Output Indicator (DC ON: Green) 5 Lights green while a direct current (DC) output is ON.
- **\*1.** The fuse is located on the (L) side. It is NOT user-replaceable. For a DC power input, connect the low side to the positive (+) terminal.
- \*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

#### 300-W Models

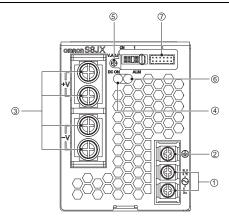

Note: The S8JX-P30024N is shown above.

# 600-W Models

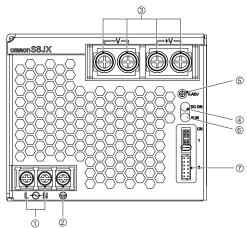

① ② **Note:** The S8JX-P60024N is shown above.

No.	Name	Function
1	Input Terminals (L), (N)	Connect the input lines to these terminals. *1
2	Protective Earth Terminal (PE) ( )	Connect the ground line to these terminals. <b>*</b> 2
3	DC Output Terminals (-V), (+V)	Connect the load lines to these terminals.
4	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
5	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
6	Alarm indicator (ALM: Red)	This lamp lights up at the time of output voltage deterioration or fan stoppage, and in standby mode by remote control function.
7	Signal output connector *3  11	1: Output voltage monitor terminal (+V) 2: Remote sensing terminal (+S) 3: Output voltage monitor terminal (-V) 4: Remote sensing terminal (-S) 5: Current balance terminal (CB) 6: Current balance ground terminal (CBG) 7: Remote control terminal (+RC) 8: Remote control terminal (-RC) 9: (Not connected) 10: (Not connected) 11: Alarm detection output terminal (ALMC) (Collector side)

- \*1. The fuse is located on the (L) side. Ensure that the (L) side is set to (+). \*2. This is a PE (Protective Earth) terminal defined in safety standards and
- must be grounded.\*3. Signal input/output connectors are included as standard and implemented in the CN1 before shipment.

In this connector, the circuits of 1-2, 3-4, and 7-8 are shorted. Removal of the connector may deteriorate the output stability and accuracy, so be sure to perform the connection of +S and -S terminals.

Never connect a load to the output voltage monitor terminal (+V, -V).

#### Reference Values

itticition values		
Reliability (MTBF)	50 W: 190,000 hrs 100 W: 160,000 hrs 150 W: 160,000 hrs 300 W: 160,000 hrs 600 W: 150,000 hrs	
Definition	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices. Therefore, it does not necessarily represent a life of the product.	
Life expectancy	10 yrs. min.	
Definition	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.	


12: Alarm detection output terminal (ALME) (Emitter side)

# **Engineering Data**

#### **Derating Curves (Standard Mounting)**

#### 50-/100-W Models


# Front-mounting, DIN Rail mounting, Bottom-mounting, Side-mounting

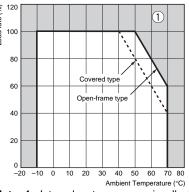


- Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
  - 2. If there is a derating problem, use forced air-cooling.
  - 3. (For Customers using 100-W type for a DC Input) When using an input voltage of less than 100 VDC, reduce the load calculated with the above derating curve by at least the following coefficients.

When using a voltage exceeding 340 VDC, the ambient temperature should be 60°C or less.

#### S8JX-P 100-W Models

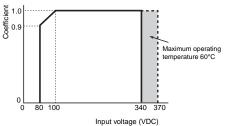


#### 300-/600-W Models

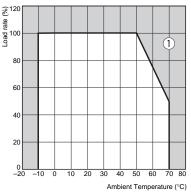


- Note: 1. Internal parts may occasionally deteriorate or be damaged.
  Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
  2. The ambient temperature is defined at a location 50 mm
  - The ambient temperature is defined at a location 50 mm forward from the center of the front surface of the product.
  - (For Customers using 300-/600-W type for a DC Input) Reduce the load calculated with the above derating curve by at least the following coefficients.

#### S8JX-P 300-/600-W Models

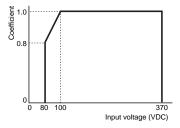


#### 150-W Models

#### Front-mounting, DIN Rail mounting, Bottom-mounting

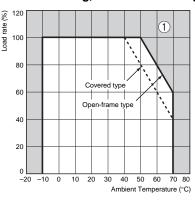


#### Horizontal-side-mounting

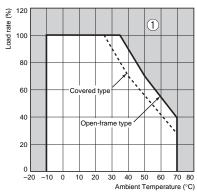

- Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
  - 2. If there is a derating problem, use forced air-cooling.
  - (For customers using 150-W type for a DC Input)
     When using an input voltage of less than 100 VDC, reduce
     the load calculated with the above derating curve by at least
     the following coefficients.

When using a voltage exceeding 340 VDC, the ambient temperature should be 60°C or less.

#### S8JX-P 150-W Models

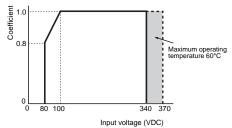


#### Mounting

#### 50-/100-/150-W Models


The following three mounting methods are possible.

- Front-mounting: Refer to Mounting Bracket Provided with Front-mounting Power Supplies 
   on page 52.
- ®. Bottom-mounting
- ©. Side-mounting


Note: Additional mounting methods are also available using DIN Rail-mounting models.

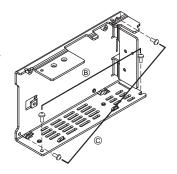

#### **Standard Mounting**

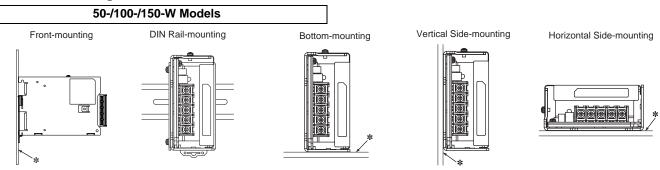

- **Note: 1.** Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - 2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - 3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

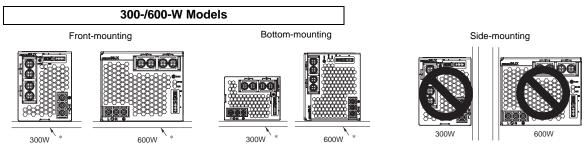


- **Note: 1.** Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - 2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - 3. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.

#### Remote sensing function

 Use this function when it is desirable to automatically compensate for voltage drops in the load line.

The remote sensing function is operated by connecting +S terminal (2 pin on CN) to +side of the load terminal and -S terminal (4 pin on CN) to -side of the load terminal.

When the remote sensing function is not used, using a connector provided as standard enables the connection between +S and +V terminals (1 pin on CN) and between -S and -V terminals (3 pin on CN) respectively.




- Note: 1. Use a two-core shield wire for connection line (\*1).
  - If the voltage drop on a load line (\*2) is large, the output voltage of the power supply may rise by the voltage drop amount and activate the overvoltage protection. Therefore, be sure to use as thick a wire as possible.
  - 3. The voltage drop in the load line must be 0.3 V or less.
  - 4. If the load line is long, be sure to use an electrolytic capacitor between the load terminals. As the used electrolytic capacitor may be heated by ripple current due to the connected load, be sure to use an electrolytic capacitor having an allowable ripple current exceeding the used ripple current.
  - Opening status of +S and -S terminals may deteriorate the output stability and accuracy. Therefore, be sure to connect +S and -S terminals.
  - Remove a connector provided as standard and prepare a harness separately.

#### **Remote control function**

 This function is to turn ON/OFF the output by an external signal using +RC terminal (7 pin on CN) and -RC terminal (8 pin on CN) while input voltage remains applied. To use this function, connect a switch or a transistor to +RC and -RC terminals.

When not in use, use the standard supplied connector to short-circuit +RC and -RC terminals.



Level	Output voltage	Built-in fan
Short or L (0-0.8 V)	ON	Rotation
Open or H (2.4-12 V)	OFF	Stop

Max. applied voltage: 12 V max., Counter voltage: -1 V max., Sink current: 3.5 mA

- Note: 1. If counter voltage is applied to remote control terminals, output voltage cannot be turned ON/OFF.

  Please remember this when wiring
  - Please remember this when wiring.

    2. Use a twist wire or a two-core shield wire for connection line.
  - 3. Remote control circuit is disconnected from input and output circuits.
  - Remove a connector provided as standard and prepare a harness separately.

#### Alarm detection function

 
When output voltage drops due to overcurrent protection, overvoltage protection, or overheat protection in operation or input voltage drop, when the built-in fan stops, or when the Power Supply goes standby by remote control, the alarm indicator (LED: red) lights up to indicate the output voltage trouble. In addition, the transistor outputs that outside.

Transistor output: 30 VDC max., 50 mA max.

Residual voltage when the function is ON: 2 V max., leakage current when the function is OFF: 0.1 mA max.

Detection voltage: approximately 80% of the output voltage setting value

When trouble is detected, the transistor output is turned OFF (nonconductive pins 11-12 on CN) and the LED (red) lights up.



- Note: 1. The alarm detection function monitors the voltage at the Power Supply output end. To check an accurate voltage, measure a voltage at the load end.
  - Remove the standard supplied connector and prepare a connector separately.


#### **Overload Protection**

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% to 160% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


- **Note: 1.** When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.
  - Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
  - Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

#### (Reference value)


#### 50-W Models

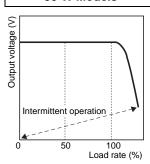

#### 100-/150-W Models

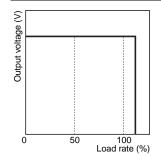

#### 300-/600-W Models

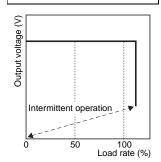

#### **Overvoltage Protection**


#### 50-/100-/150-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

#### 300-/600-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage and simultaneously the alarm indicator will be lit. Reset the input power by turning it OFF for at least three minute and then turning it back ON again.

#### (Reference value)

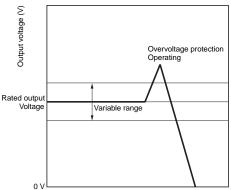


Note: Do not turn ON the power again until the cause of the overvoltage has been removed.

# Output peak current (300-W 24V, 600-W 24V Models)

The following conditions should be satisfied for the peak current value.

- t1 ≤ 10 s
- Ip ≤ rated peak current
- lave  $\leq$  rated current

Duty=
$$\frac{t1}{t1+t2}$$
 ×100 [%]  $\leq$  35% (180 to 240 VAC)

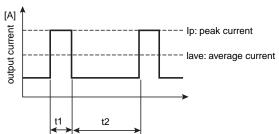

- Note: 1. Do not hold peak load current over 10 seconds. In addition, you should not use duty cycle under conditions beyond above figure.
  - It may cause damage in its power supply.


    2. Please derate peak load current depending on ambient temperature and mounting orientation.
  - Please keep the average current of peak load cycle from becoming more than the rated value.

#### **Overheat Protection**

#### 300-/600-W Models

If the internal temperature rises excessively as a result of fan failure or any other reason, the overheat protection circuit will be triggered to shut OFF the output voltage and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

#### Inrush Current, Startup Time, Output Hold Time

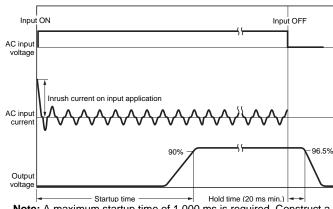


**Note:** A maximum startup time of 1,000 ms is required. Construct a system configuration that considers the startup time of other devices.


**Dimensions** (Unit: mm)


### **Front-mounting Models**

  S8JX-P050□□ (50 W) S8JX-P050□□C (50 W)






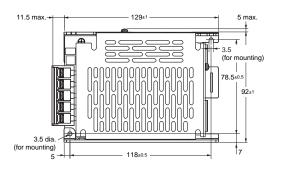




Two, M3 (Depth 4 mm max.)


#### Panel mounting holes dimensions

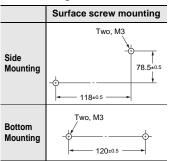


S8JX-P100□□ (100 W) S8JX-P100□□C (100 W) S8JX-P15012 (150 W) S8JX-P15012C (150 W) S8JX-P15024 (150 W) S8JX-P15024C (150 W) S8JX-P15048 (150 W) S8JX-P15048C (150 W)

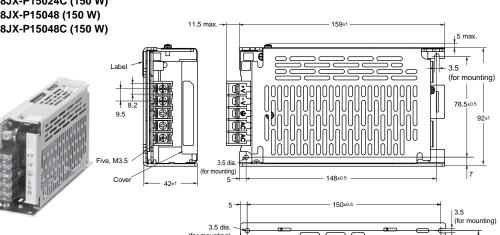



#### Panel mounting holes dimensions

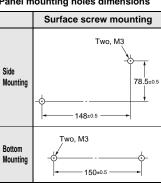


## S8JX-P15005 (150 W) S8JX-P15005C (150 W)

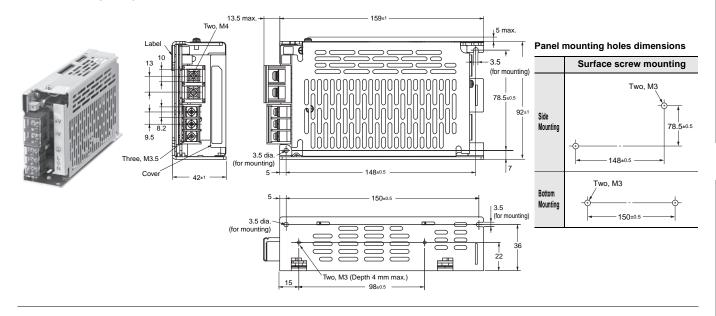


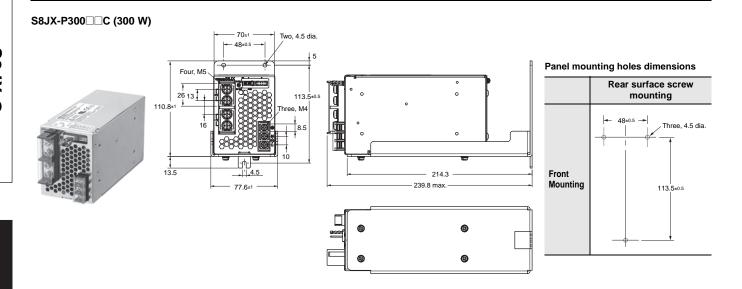

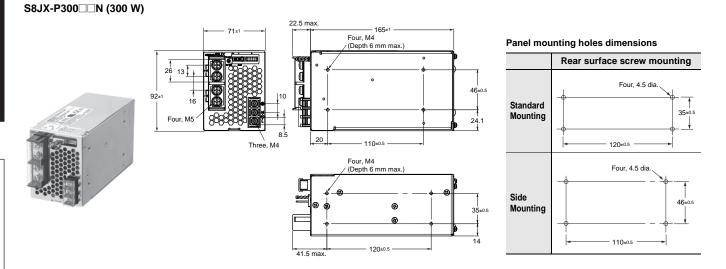

#### S8JX-P600□□C (600 W)

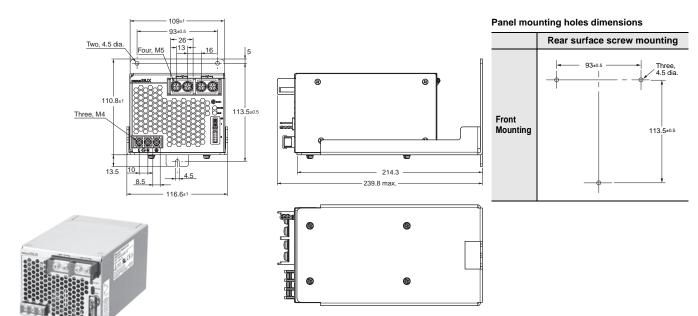


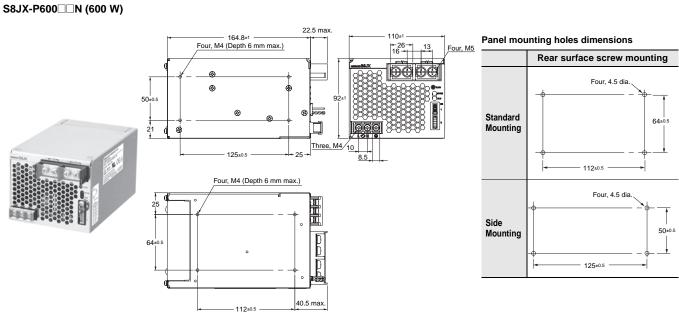


#### **DIN Rail-mounting Models**

 S8JX-P050□□D (50 W) S8JX-P050□□CD (50 W)







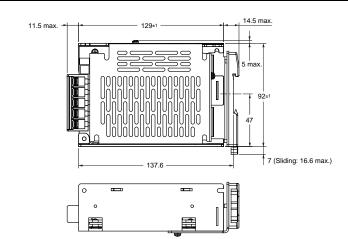

 S8JX-P100 D (100 W)
S8JX-P100 CD (100 W)
S8JX-P15012D (150 W)
S8JX-P15012CD (150 W)
S8JX-P15024D (150 W)
S8JX-P15024CD (150 W)
S8JX-P15048D (150 W)
S8JX-P15048CD (150 W)




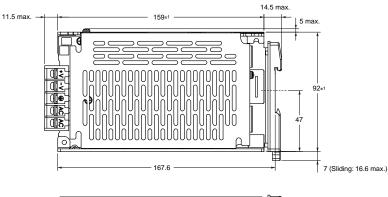




S8JX-P15005D (150 W) S8JX-P15005CD (150 W)



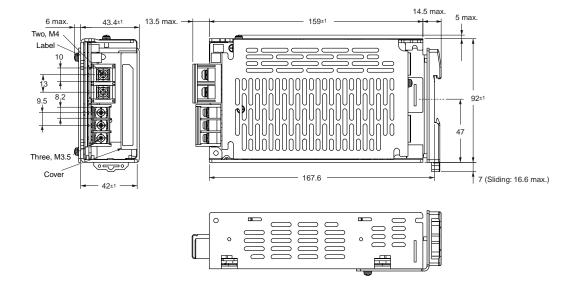

#### S8JX-P300□□CD (300 W)




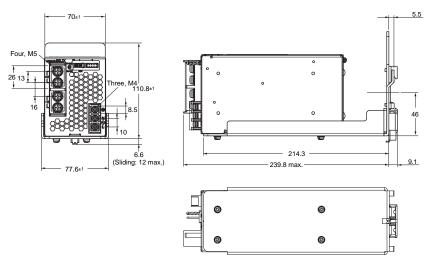

Note: Use a metal DIN Rail when mounting a 300-W model to a DIN Rail.

#### S8JX-P600□□CD (600 W)



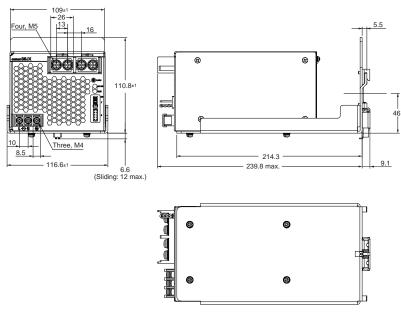

Note: Use a metal DIN Rail when mounting a 600-W model to a DIN Rail.


# Mounting Bracket Provided with Front-mounting Power Supplies (A)

# S82Y-J00F Front-mounting Bracket

# 

## **Front-mounting Method**

Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

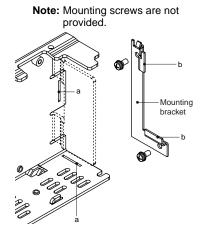


# **DIN Rail (Order Separately)**

# **Mounting Rail**

Material: Stainless steel

 (Material: Aluminum)







Model
PFP-100N
PFP-50N

# Mounting Rail (Material: Aluminum)



 


 

Model PFP-100N2

### **End Plate**



 

Model PFP-M

- Note: 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.
  - 2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

#### **Terminal Cover (Order Separately)**

Terminal Cover model	Applicable Power Supply and applicable location	
	S8JX-P50W	
S82Y-JTC1	S8JX-P100W	
	S8JX-P150W 12-V, 24-V or 48-V output	

#### Replacement Fan (sold separately)

Product	Model
Replacement fan unit for 300-W models	S82Y-JXP30FAN
Replacement fan unit for 600-W models	S82Y-JXP60FAN

# **Safety Precautions**

# Refer to Safety Precautions for All Power Supplies.

#### **⚠** CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product to touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque.

M3.5, M4:1.13 N·m.

(The DC output terminal of S8JX-G15005□□ and

S8JX-P15005:1.56 N·m.)

M5:2.25 N·m.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied. Always close the terminal cover after wiring.



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.



#### **Precautions for Safe Use**

#### Mounting

- Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the Product.
- The 300 W 24V, 48V models of S8JX-G series are designed to radiate heat by means of natural air-flow. Be sure to allow convection in the atmosphere around devices when mounting. Do not use in locations where the ambient temperature exceeds the range of the derating curve.
- The 300 W 5V, 12V, 600 W models of S8JX-G series, and 600 W models of S8JX-P series are designed to radiate heat by means of forced air-flow. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.
- The screws must not protrude beyond the following values inside the Power Supply when screw holes provided on the chassis are

 
15 W, 35 W, 50 W, 100 W, or 150 W: 4 mm 300 W or 600 W of S8JX-P series: 6 mm 300 W or 600 W of S8JX-G series: 8 mm


Mounting screw tightening torque (recommended value): 0.54 N·m.

- Front mounting is possible using provided mounting bracket.
- When cutting out holes for mounting, make sure that cuttings do not enter the interior of the Products.
- Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
- The internal parts may occasionally deteriorate and be broken due to adverse heat radiation. Do not loosen the screw on the side face of the main body.
- When mounting two or more Power Supplies side-by-side, allow at least 20 mm for S8JX-G series and 15 mm for S8JX-P series spacing between them.
- Provide a space of at least 20 mm back and forth for S8JX-G series, and 50 mm back and forth for S8JX-P series when mounting 300-W and 600-W models as well.
- Use the metal plate as the mounting panel.
- Minor fire may occasionally occur. Set the input voltage switch to the input voltage that is to be used (150-W, 5-V models of S8JX-G series only).


#### 15-/35-/50-/100-/150-W Models

Standard Mounting (Front-mounting and DIN Rail-mounting)




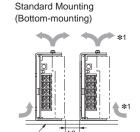

Standard Mounting (Horizontal Mounting)

 


#### S8JX-G Series 300-W 5V, 12V Model

 


#### S8JX-G Series 300-W 24V, 48V Model

Standard Mounting


(Front-mounting and DIN Rail-mounting)

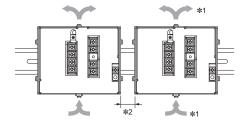

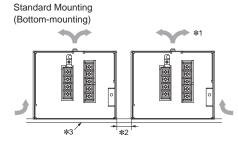


- \*1. Convection of air
- \*2.20 mm min. (15 mm min. for S8JX-P series)
- **\*3.** Use a metal plate as the mounting surface.


#### S8JX-P Series 300-W Models

 

#### S8JX-G Series 600-W Models

 

#### S8JX-P Series 600-W Models

 

\*1. Convection of air

\*3. Use a metal plate as the mounting surface.

#### Wiring

- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.
- Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.
- Do not apply more than 75 N force to the terminal block when tightening it.
- Be sure to remove the sheet covering the Product for machining before power-ON so that it does not interfere with heat dissipation.
- Use the following material for the wires to be connected to the S8JX to prevent smoking or ignition caused by abnormal loads.

#### **Recommended Wire Type**

15 W, 35 W		AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm²) UL-certified temperature of at least 75°C	
50W, 100W, 150 W (except for 5 V)		AWG12 to AWG16 (a cross section of 1.309 to 3.309 mm²) UL-certified temperature of at least 60°C or 60/75°C	
	Input side	AWG12 to AWG16 (a cross-section of 1.309 to 3.309 mm²) UL-certified temperature of at least 60°C o 60/75°C	
150 W at 5 V	Output side	AWG8 to AWG14 (a cross-section of 2.081 to 8.368 mm²) UL-certified temperature of at least 60°C or 60/75°C	
S8JX-G series 300W 5V, 12V	Input side	AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm²) UL-certified temperature of at least 60°C or 60/75°C	
600W 5V, 12V S8JX-P series 300 W, 600 W	Output side	AWG6 to AWG20 (a cross section of 0.517 to 13.30 mm²) UL-certified temperature of at least 60°C or 60/75°C	
S8JX-G series 300 W 24V, 48V, 600 W 24V, 48V		AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm²) UL-certified temperature of at least 60°C or 60/75°C	

\* The rated current for the output terminals on the S8JX-G30005□□, S8JX-G30012□□, S8JX-G60005□, S8JX-G60012□, S8JX-P300□□ and S8JX-P600□□ is 60A for each terminal. The rated current for the output terminals on the S8JX-G30024□□, S8JX-G30048□□, S8JX-G60024□, and S8JX-G60048□ is 20 A for each terminal. Use two terminals together if the current flow is higher than the rated terminal current.

# Method of Manufacturing Connector Harness for Signal I/O

For S8JX-P Series 300-/600-W models, PHD connectors manufactured by JST Mfg. Co., Ltd. should be used.

Connector used	S12B-PHDSS	Manufactured
Housing	PHDR-12VS	by JST Mfg. Co., Ltd.
Terminal	SPHD-001T-P0.5 or BPHD-001T-P0.5	

To ensure correct wiring, the following points should be borne in mind when manufacturing the connector. It is recommended that the JST Mfg. Co., Ltd. catalog be read for further details.

- Electric cable size AWG26 to AWG22 should be used.
- The electric cable sheath stripping length should be approximately 2.3 mm.
- Dedicated tool YC (Manufactured by JST Mfg. Co., Ltd.) should be used for crimping of terminals and wiring.
- Although UL12007 (Twisted wire) and other equivalent twisted wires can be used for electric cables, UL1061 with a small outer sheath shape and equivalent twisted wires should be used for AWG22.
- When accommodating crimped terminal wiring in the housing, insert the wiring as far as possible to the back of the housing in a single movement and check for an audible click. In addition, check that wiring inserted in the housing is properly locked in place.

#### **Installation Environment**

- Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.
- Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

#### **Ambient Operating and Storage Environments**

- Store the Power Supply at a temperature of -25 to 65°C (-25 to 75°C for S8JX-P series) and a humidity of 25% to 90%.
- The Internal parts may occasionally deteriorate or be damaged.
   Do not use the Power Supply outside the derating range (i.e., the area shown by shading ① in the derating curve diagram on page 42.)
- Use the Power Supply at a humidity of 25% to 85%.
- Do not use the Power Supply in locations subject to direct sunlight.
- Do not use locations where liquids, foreign matter, or corrosive gases may enter the interior of the Product.

#### Overload Protection

- Internal parts may possibly deteriorate or be damaged if a shortcircuited, overload or peak load state continues during operation.
- Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

#### **Charging a Battery**

 
When connecting a battery at the load, connect an overcurrent limiting circuit and overvoltage protection circuit.

#### **Output Voltage Adjuster (V.ADJ)**

- The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.
- After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

# Ripple Noise Voltage (S8JX-G Series 300 W 5 V and 600 W 5 V or 12 V Models)


The specified standard for the ripple voltage noise was measured with a measurement circuit that is based on JEITA standard RC-9131A.



### **DIN Rail-mounting**

To mount the Power Supply to a DIN Rail, pull down the rail stopper until you hear it clicks open, hook portion (A) of the Power Supply onto the DIN Rail, press the Power Supply in direction (B), and then push up the rail stopper to lock the Power Supply in place.


To dismount the Power Supply, pull down portion (C) with a flat-blade screwdriver and pull out the Power Supply.

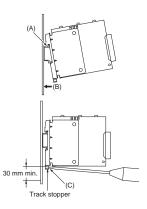


#### **Series Operation**

Two power supplies can be connected in series. The  $(\pm)$  voltage output can be accomplished with two Power Supplies.
  
#### Series Operation Correct







Note: 1. If the load is short-circuited, a reverse voltage will be generated inside the Power Supply. If this occurs the Power Supply may possibly deteriorate or be damaged. Always connect a diode as shown in the figure. Select a diode having the following ratings.

Туре	Schottky Barrier diode	
Dielectric strength (VRRM)	Twice the rated output voltage or above	
Forward current (IF)	Twice the rated output current or above	


Although Products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

### **Parallel Operation**

 
#### 15-/35-/50-/100-/150-W Models

The Product is not designed for parallel operation.

#### Parallel Operation Incorrect



 However, the following backup operation is possible. (Requires a mounting diode)



The same model should be used for power supplies A and B.


- Type: Schottky Barrier diode
- Withstand voltage (VRRM): Equivalent to or higher than the rated power supply output voltage
- Forward current (IF): Double the rated power supply output current or higher
- The output voltages of power supplies A and B output should be set higher only by a value equivalent to the drop in diode D<sub>1</sub> and D<sub>2</sub> forward voltages (V<sub>F</sub>).
- In addition, since power loss occurs resulting from power supply output current (IOut) × diode forward voltage (VF), the diode should be cooled to ensure that its temperature is kept at the value indicated in the catalog or lower.
- Since power loss occurs due to load power and the diode, care should be exercised to ensure that the rated power (Rated output voltage × rated output current) for one power supply is not exceeded.

#### S8JX-G Series 300-/600-W Models

 Parallel operation is possible under 80% of the rated value.

- To operate in parallel, set the switch to the "PARALLEL" side.
- The length and thickness of each wire connected to the load must be the same so that there is no difference in voltage drop value between the load and the output terminals of each Power Supply.
- It is desirable to set the same value on the voltage adjuster of each Power Supply.


# Parallel Operation Correct



#### S8JX-P Series 300-/600-W Models

Connecting CB terminal (5 pin on CN) and CBG terminal (6 pin on CN) enables the current balancing function and that allows the parallel operation at 80% or less of the total output capacity. Up to five Power Supplies can be connected.

 - Use 2-conductor shielded cable as a connection wire (\*1).
- Adjust the output voltage difference of each Power Supply to 100 mV or less or 1% or less of the rated output voltage, whichever is smaller, using the output voltage adjuster (V. ADJ).
- During parallel operation, load current may be biased to one side, resulting in damage to internal components.
- Parallel operation is used to increase static capacity. The output voltage may drop with sudden load fluctuations.
- There may be steps in the rising waveform of the output voltage during parallel operation.
- Remove the standard supplied connector and prepare a connector separately.



#### In Case There Is No Output Voltage

#### S8JX-G Series S8JX-P Series 50-/100-/150-W Models

The possible cause for no output voltage may be that the overcurrent or overvoltage protection has operated. The internal protection may operate if a large amount of surge voltage such as a lightening surge occurs while turning ON the Power Supply.

In case there is no output voltage, please check the following points before contacting us:

- Checking overcurrent protected status:
   Check whether the load is in overcurrent status or is short-circuited. Remove wires to load when checking.
- Checking overvoltage or internal protection:
   Turn the power supply OFF once, and leave it OFF for at least 7 minutes for S8JX-G series and 3 minutes for S8JX-P series.
   Then turn it ON again to see if this clears the condition.

#### S8JX-P Series 300-/600-W Models

There is a possibility that functions such as over-current protection, over-voltage protection or overheating protection are functioning. In addition, other possible causes include stoppage of the built-in fan and the remote control function (OFF). Please check the following 5 points and, if there is still no output voltage, contact your OMRON sales representative.

#### **Method of Checking Over-current Protection**

 Check (after removing load line) whether or not the load is in overcurrent status (including short circuits).

#### **Method of Checking Over-voltage Protection**

- Switch off the input power supply, and switch back on after at least 3 minutes have elapsed.
- Check whether or not the +S and -S terminals are open.

#### **Method of Check Overheating Protection**

 Switch off the input power supply and switch back on after allowing sufficient time for cooling.

#### Checking for Built-in Fan Stoppage

 Check whether or not the built-in fan has stopped. The fan is a replaceable component.


#### **Checking the Remote Control Function**

 Check whether or not the +RC and -RC terminals are in open status. Carry out the regulated connections.

#### Switching the AC Input Voltage between 100 and 200 VAC


#### S8JX-G Series 150-W, 5-V Models

The input voltage can be switched between 100 V and 200 V by using the input voltage switch. Make the setting shown in the following figure for the voltage that will be used. (The input voltage is factory-set to 200 V.)

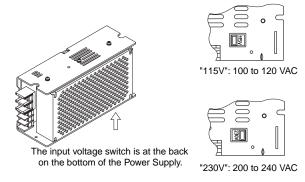

#### S8JX-G Series 300-/600-W Models

The input voltage can be switched between 100 and 200 V by shorting or opening the input voltage selection terminals. Set the required voltage as shown below. (The voltage is factory-set to 200 V.)

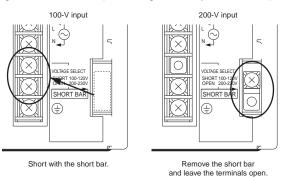

Note: A 300-W model is shown above.

#### **Fan Replacement**


#### S8JX-G Series 300-W 5V, 12V/600-W Model

The service life of the fan is approximately 50,000 hours (at 25°C). The service life varies, however, depending on the ambient temperature or other surrounding environmental conditions such as dust. As a preventive maintenance measure, replace the fan within approx. two years if it is used at an ambient temperature of 40°C. Purchase the S82Y-JX FAN Replacement Fan (sold separately) to replace the fan.



Fan (above), instruction sheet


Replace the fan as shown in the following illustration.

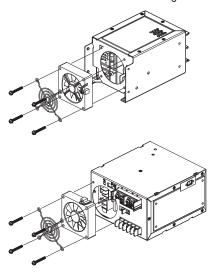

### S8JX-P Series 300-/600-W Models

- Please contact your OMRON sales representative regarding fan replacement. Fans will be replaced at cost. In addition, a replacement fan unit (Model S82Y-JXPDFAN) is available. Please use the curve below as a guideline for the timing of fan replacement.
- Fan replacements made by the customer fall outside the scope of safety standards.

Replacement should be implemented as shown below.

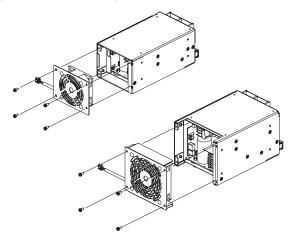

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

# Terms and Conditions of Sale

- Offer; Acceptance. These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms. Prices: Payment Terms. All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice. Discounts. Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.

- and (ii) Buyer has no past due amounts.

  Interest. Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the
- Orders. Omron will accept no order less than \$200 net billing.

  Governmental Approvals. Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
- Taxes. All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.

  Financial. If the financial position of Buyer at any time becomes unsatisfactory
- <u>Financial</u>. If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts. unpaid accounts
- Cancellation: Etc. Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.

  10. Force Majeure. Omron shall not be liable for any delay or failure in delivery
- resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.

  11. Shipping: Delivery. Unless otherwise expressly agreed in writing by Omron:
  a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship
- - except in "break down" situations.
    b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall
  - constitute delivery to Buyer; c. All sales and shipments of Products shall be FOB shipping point (unless oth-
- c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
   d. Delivery and shipping dates are estimates only; and
   e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.

  12. Claims. Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products. portation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
- Warranties. (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

  (b) <u>Limitations</u>. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABIL-

- ITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by tion, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See http://www.omron247.com or contact your Omron representative for published information.
- lished information.

  Limitation on Liability: Etc. OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
- Indemnities. Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
- rights of another party.

  <u>Property: Confidentiality.</u> Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
- prevent disclosure to any third party.

  <u>Export Controls.</u> Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (iii) sale of products to "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of
- "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of regulated technology or information.

  Miscellaneous. (a) Waiver. No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) Assignment. Buyer may not assign its rights hereunder without Omron's written consent. (c) Law. These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) Amendment. These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) Severability If any provior waived unless in writing signed by the parties. (e) <u>Severability</u> If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) Setoff. Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) <u>Definitions</u>. As used herein, "<u>including</u>" means "including without limitation"; and "<u>Omron Companies</u>" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

# Certain Precautions on Specifications and Use

- Suitability of Use. Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request. Omron will provide application of use of the Product. At Buyer's lequest, omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:

  (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.

  (ii) Use in consumer products or any use in significant quantities.

  (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject and industrial consumers and consumers are consumers and status of the consumers and consumers.
  - ment, and installations subject to separate industry or government regulations. (iv) Systems, machines and equipment that could present a risk to life or prop erty. Please know and observe all prohibitions of use applicable to this Prod-
  - NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO

- ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROP-ERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
- Programmable Products. Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof. Performance Data. Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requires ments. Actual performance is subject to the Omron's Warranty and Limitations
- Change in Specifications. Product specifications and accessories may be change in specifications. Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time
- to confirm actual specifications of purchased Product.

  <u>Errors and Omissions.</u> Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



#### **OMRON INDUSTRIAL AUTOMATION • THE AMERICAS HEADQUARTERS**

Schaumburg, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

**OMRON CANADA, INC. • HEAD OFFICE** 

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

**OMRON ELECTRONICS DE MEXICO • HEAD OFFICE** 

México DF • 52.55.59.01.43.00 • 001.800.556.6766 • mela@omron.com

**OMRON ELECTRONICS DE MEXICO • SALES OFFICE** 

Apodaca, N.L. • 52.81.11.56.99.20 • 001.800.556.6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

**OMRON ARGENTINA • SALES OFFICE** 

Cono Sur • 54.11.4783.5300

**OMRON CHILE • SALES OFFICE** 

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

**OMRON EUROPE B.V.** • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • Tel: +31 (0) 23 568 13 00 Fax: +31 (0) 23 568 13 88 • www.industrial.omron.eu