

Switching Power Supply

S8VM (15/30/50/100/150-W Models)

Featuring Omron's Widest Range of Power Supply with New Unique Undervoltage Alarm Function and Compact Size Contributing to Panel Downsizing

- Unique undervoltage alarm function assists in determining causes of application errors (S8VM-□□□24A□ only). **This feature is unique to the industry — no competitor.**
- Broad range of power (15w to 150w) with many different output voltages (15v, 12v, 15v, 24v).
- New screw terminal design prevents screws from falling out.
- Easily identifiable parts using color coded labels for output voltages.
- All models are Lead-Free to comply with RoHS directive.
- Finger protection terminals prevent electric shocks.
- DIN Rail mounting.
- 3-year warranty.



Note: 300- to 1,500-W models will be released in 2006.

Approved Standards:

- **UL:** UL508 (Listing), UL60950-1, UL1604 (Class 1, Division 2)
- **cUL:** CSA C22.2 No.14, No.60950-1, No.213 (Class 1, Division 2)
- **EN:** EN50178, EN60950-1
- **SELV:** EN60950-1
- **VDE:** Accordance to VDE0160/P100

Model Number Structure

■ Model Number Legend

Note: Not all combinations are possible. Please refer to the list of models in "Ordering Information" on page 2.

S8VM- □ □ □ □ □ □
1 2 3 4

1. Power Ratings

015: 15 W
030: 30 W
050: 50 W
100: 100 W
150: 150 W

2. Output voltage

05: 5 V
12: 12 V
15: 15 V
24: 24 V

3. Configuration/function

None: Open-frame typeStandard type
C: Covered typeStandard type
A: Covered typeUndervoltage alarm type (See note.)

4. Configuration

None Front-mounting type
D DIN Rail mounting bracket type

Note: The connector (housing and terminal) for the undervoltage alarm output are provided with the S8VM-05024A□, S8VM-10024A□ and S8VM-15024A□.

Ordering Information

Stock Note: Shaded models are normally stocked.

| Configuration | Power ratings | Input voltage | Output voltage | Output current | Front-mounting | | DIN Rail mounting bracket | |
|-----------------|---------------|----------------|----------------|----------------|----------------------------|-------------------------|-----------------------------|-------------------------|
| | | | | | Standard type | Undervoltage alarm type | Standard type | Undervoltage alarm type |
| Open-frame type | 15 W | 100 to 240 VAC | 5 V | 3 A | S8VM-01505 | — | S8VM-01505D | — |
| | | | 12 V | 1.3 A | S8VM-01512 | — | S8VM-01512D | — |
| | | | 15 V | 1 A | S8VM-01515 | — | S8VM-01515D | — |
| | | | 24 V | 0.65 A | S8VM-01524 | — | S8VM-01524D | — |
| | 30 W | | 5 V | 6 A | S8VM-03005 | — | S8VM-03005D | — |
| | | | 12 V | 2.5 A | S8VM-03012 | — | S8VM-03012D | — |
| | | | 15 V | 2 A | S8VM-03015 | — | S8VM-03015D | — |
| | | | 24 V | 1.3 A | S8VM-03024 | — | S8VM-03024D | — |
| | 50 W | | 5 V | 10 A | S8VM-05005 | — | S8VM-05005D | — |
| | | | 12 V | 4.3 A | S8VM-05012 | — | S8VM-05012D | — |
| | | | 15 V | 3.5 A | S8VM-05015 | — | S8VM-05015D | — |
| | | | 24 V | 2.2 A | S8VM-05024 | — | S8VM-05024D | — |
| | 100 W | | 5 V | 20 A | S8VM-10005 | — | S8VM-10005D | — |
| | | | 12 V | 8.5 A | S8VM-10012 | — | S8VM-10012D | — |
| | | | 15 V | 7 A | S8VM-10015 | — | S8VM-10015D | — |
| | | | 24 V | 4.5 A | S8VM-10024 | — | S8VM-10024D | — |
| | 150 W | | 5 V | 27 A | S8VM-15005 (See note.) | — | S8VM-15005D (See note.) | — |
| | | | 12 V | 12.5 A | S8VM-15012 | — | S8VM-15012D | — |
| | | | 15 V | 10 A | S8VM-15015 | — | S8VM-15015D | — |
| | | | 24 V | 6.5 A | S8VM-15024 | — | S8VM-15024D | — |
| Covered type | 15 W | 100 to 240 VAC | 5 V | 3 A | S8VM-01505C | — | S8VM-01505CD | — |
| | | | 12 V | 1.3 A | S8VM-01512C | — | S8VM-01512CD | — |
| | | | 15 V | 1 A | S8VM-01515C | — | S8VM-01515CD | — |
| | | | 24 V | 0.65 A | S8VM-01524C | S8VM-01524A | S8VM-01524CD | S8VM-01524AD |
| | 30 W | | 5 V | 6 A | S8VM-03005C | — | S8VM-03005CD | — |
| | | | 12 V | 2.5 A | S8VM-03012C | — | S8VM-03012CD | — |
| | | | 15 V | 2 A | S8VM-03015C | — | S8VM-03015CD | — |
| | | | 24 V | 1.3 A | S8VM-03024C | S8VM-03024A | S8VM-03024CD | S8VM-03024AD |
| | 50 W | | 5 V | 10 A | S8VM-05005C | — | S8VM-05005CD | — |
| | | | 12 V | 4.3 A | S8VM-05012C | — | S8VM-05012CD | — |
| | | | 15 V | 3.5 A | S8VM-05015C | — | S8VM-05015CD | — |
| | | | 24 V | 2.2 A | S8VM-05024C | S8VM-05024A | S8VM-05024CD | S8VM-05024AD |
| | 100 W | | 5 V | 20 A | S8VM-10005C | — | S8VM-10005CD | — |
| | | | 12 V | 8.5 A | S8VM-10012C | — | S8VM-10012CD | — |
| | | | 15 V | 7 A | S8VM-10015C | — | S8VM-10015CD | — |
| | | | 24 V | 4.5 A | S8VM-10024C | S8VM-10024A | S8VM-10024CD | S8VM-10024AD |
| | 150 W | | 5 V | 27 A | S8VM-15005C (See note.) | — | S8VM-15005CD (See note.) | — |
| | | | 12 V | 12.5 A | S8VM-15012C | — | S8VM-15012CD | — |
| | | | 15 V | 10 A | S8VM-15015C | — | S8VM-15015CD | — |
| | | | 24 V | 6.5 A | S8VM-15024C | S8VM-15024A | S8VM-15024CD | S8VM-15024AD |

Note: The output capacity of the S8VM-15005□□ is 135 W.

Specifications

■ Ratings/Characteristics

| Item | | Power ratings | 15 W | 30 W | 50 W | 100 W | 150 W |
|-----------------------------------------|------------------------------------------------|------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------|
| Efficiency | | 5-V models | 75% min. | 75% min. | 80% min. | 81% min. | 81% min. |
| | | 12-V models | 78% min. | 79% min. | 79% min. | 81% min. | 81% min. |
| | | 15-V models | 78% min. | 79% min. | 79% min. | 81% min. | 81% min. |
| | | 24-V models | 80% min. | 81% min. | 80% min. | 82% min. | 83% min. |
| Input | Voltage (See note 1.) | | 100 to 240 VAC (85 to 264 VAC) | | | | |
| | Frequency (See note 1.) | | 50/60 Hz (47 to 63Hz) | | | | |
| | Current | 100-V input | 0.5 A max. | 0.9 A max. | 0.8 A max. | 1.4 A max. | 2.0 A max. |
| | | 200-V input | 0.25 A max. | 0.45 A max. | 0.4 A max. | 0.7 A max. | 1.0 A max. |
| | Power factor | 100-V input | — | | | 0.98 min. | |
| | | 200-V input | — | | | 0.94 min. | |
| | Harmonic current emissions | | — | | | Conforms to EN 61000-3-2 | |
| | Leakage current | 100-V input | 0.4 mA max. (at rated output) | | | | |
| | | 200-V input | 0.75 mA max. (at rated output) | | | | |
| | Inrush current (See note 2.) | 100-V input | 17.5 A max. (for cold start at 25°C) | | | | |
| 200-V input | | 35 A max. (for cold start at 25°C) | | | | | |
| Output | Voltage adjustment range (See note 3.) | | -20% to 20% (with V. ADJ) (S8VM-□□□24A□: -10% to 20%) | | | | |
| | Ripple | | 3.2% (p-p) max. (5 V), 1.5% (p-p) max. (12 V), 1.2% (p-p) max. (15 V), 1.0% (p-p) max. (24 V), (at rated input/output voltage) | | 3.2% (p-p) max. (5 V), 1.5% (p-p) max. (12 V), 1.2% (p-p) max. (15 V), 0.75% (p-p) max. (24 V), (at rated input/output voltage) | | |
| | Input variation influence | | 0.4% max. (at 85 to 264 VAC input, 100%) | | | | |
| | Load variation influence (rated input voltage) | | 0.8% max. (with rated input, 0 to 100% load) | | | | |
| | Temperature variation influence | | 0.02%/°C max. | | | | |
| | Start up time (See note 2.) | | 1,100 ms max. (at rated input/output voltage) | | | 800 ms max. (at rated input/output voltage) | |
| | Hold time (See note 2.) | | 20 ms typ. (15 ms min.) (at rated input/output voltage) | | | | |
| | Additional functions | Overload protection (See note 2.) | | 105% to 160% of rated load current, voltage drop, intermittent, automatic reset | | 105% to 160% of rated load current, voltage drop (12 V, 15 V, and 24 V), voltage drop, intermittent (5 V), automatic reset | |
| Overvoltage protection (See note 2.) | | Yes (See note 4.) | | | | | |
| Undervoltage alarm indication | | Yes (color: yellow (DC LOW1), red (DC LOW2)) (S8VM-□□□24A□ only) | | | | | |
| Undervoltage alarm output | | No | | | Yes (S8VM-□□□24A□ only) (open collector output), 30 VDC max., 50 mA max.), Sinking type (NPN) | | |
| Series operation | | Yes | | | | | |
| Parallel operation | | No | | | | | |
| Remote sensing function | | No | | | | Yes | |


| Item | | Power ratings | 15 W | 30 W | 50 W | 100 W | 150 W |
|-------|----------------------------------|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|------------|------------|------------|
| Other | Operating ambient temperature | | Refer to the derating curve in <i>Engineering Data</i> . (with no icing or condensation) (See note 2.) | | | | |
| | Storage temperature | | -25 to 65°C | | | | |
| | Operating ambient humidity | | 30% to 85% (Storage humidity: 25% to 90%) | | | | |
| | Dielectric strength | | 3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE/FG terminals; detection current: 20 mA) 500 VAC for 1 min. (between all outputs and PE/FG terminals; detection current: 100 mA) 500 VAC for 1 min. (between all outputs (except the detection output terminals) and detection output terminals; detection current: 20 mA) (S8VM-□□□24A□ only) | | | | |
| | Insulation resistance | | 100 MΩ min. (between all outputs and all inputs, PE/FG terminals) at 500 VDC | | | | |
| | Vibration resistance | | 10 to 55 Hz, 0.375-mm single amplitude for 2 hours each in X, Y, and Z directions | | | | |
| | Shock resistance | | 150m/s ² , 3 times each in ±X, ±Y, ±Z directions | | | | |
| | Output indicator | | Yes (color: green) | | | | |
| | EMI | Conducted Emission | Conforms to EN61204-3 EN55011 Class B and based on FCC Class B (See note 5.) | | | | |
| | | Radiated Emission | Conforms to EN61204-3 EN55011 Class B (See note 6.) | | | | |
| | EMS | | Conforms to EN61204-3 High severity levels | | | | |
| | Approved standards (See note 7.) | | UL: UL508 (Listing), UL60950-1, UL1604 (Class I/Division 2) cUL: CSA C22.2 No.14, No.60950-1, No.213 (Class I/Division 2), EN: EN50178, EN60950-1 SELV (EN60950-1) According to VDE0160/P100 | | | | |
| | Weight (See note 8.) | | 180 g max. | 220 g max. | 290 g max. | 460 g max. | 530 g max. |

- Note:**
1. Do not use the Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
 2. Refer to the *Engineering Data* section on page 7 to 8 for details.
 3. If the V. ADJ adjuster is turned, the voltage will increase by more than +20% of the voltage adjustment range.
When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that the load is not damaged.
 4. To reset the protection, turn OFF the Power Supply for three minutes or longer and then turn the Power Supply back ON.
 5. Conducted emissions: The noise value is affected by factors such as the wiring method. The product conforms to Class B when the aluminum plate is laid under the product. For 15-W models, insert a clamp filter (ZCAT2436-1330 by TDK) in the output wire to reduce noise.
 6. Radiated emissions: The noise value is affected by factors such as the wiring method. The product conforms to Class B when the aluminum plate is laid under the product. For 150-W models, insert a clamp filter (ZCAT2017-0930 by TDK) in the input wire to reduce noise.
 7. UL1604 (Class I/Division 2) and CSA C22.2 No. 213 (Class I/Division 2) approval pending.
 8. The weight indicated is for front-mounting, open-frame models.


Connections

■ Block Diagrams


S8VM-015 (15 W)

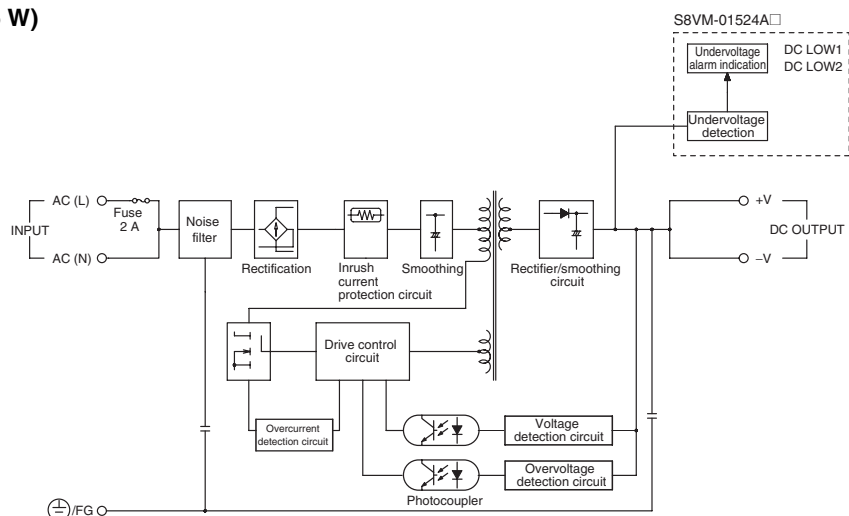


S8VM-030 (30 W)

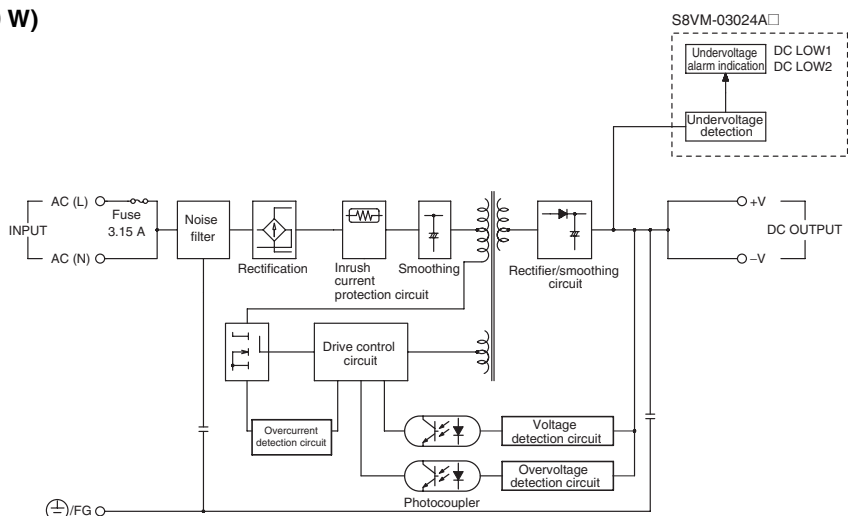


S8VM-050 (50 W)

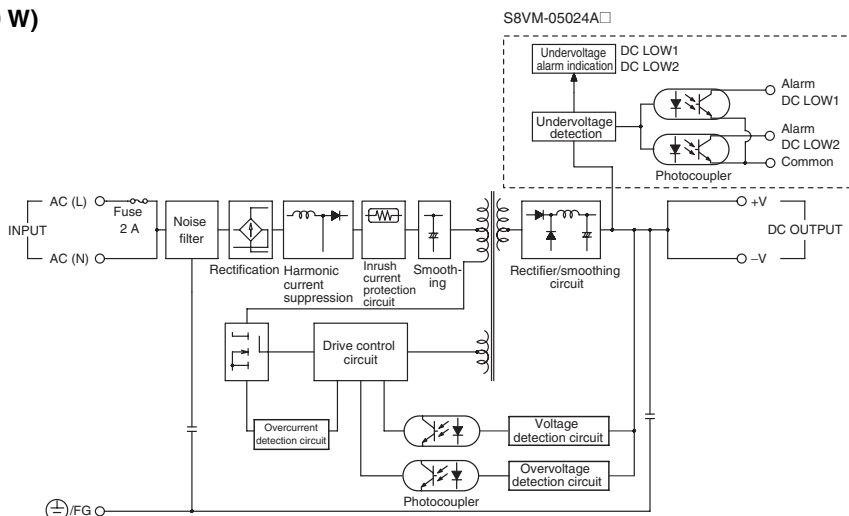

S8VM-100□□□□ (100 W)

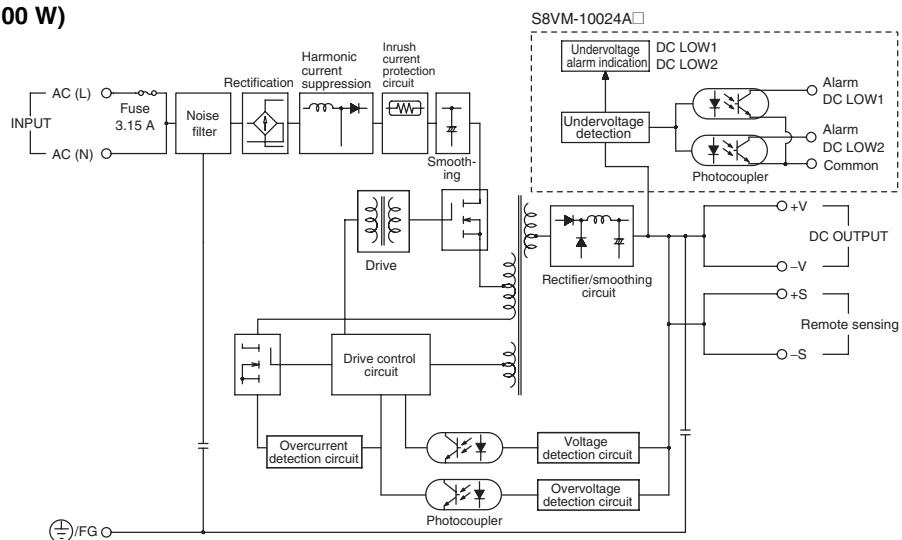

S8VM-150□□□□ (150 W)

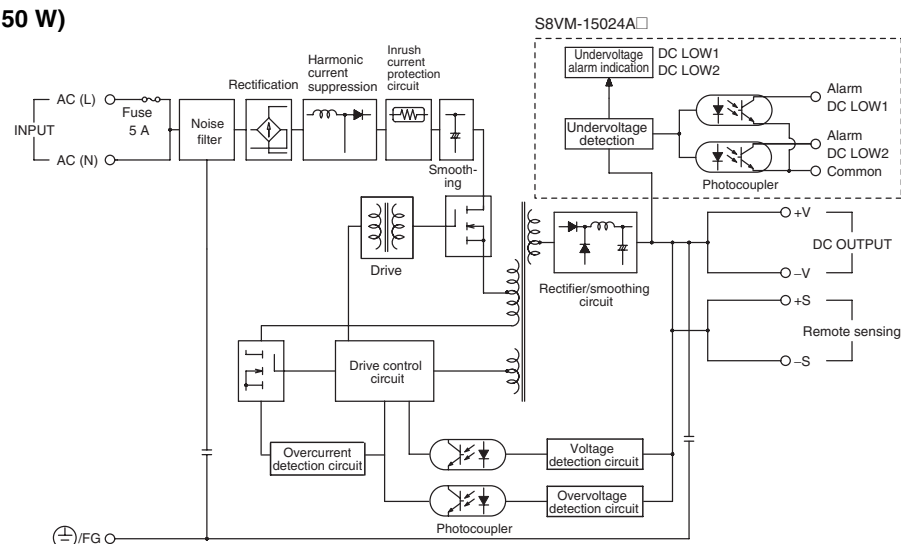

Construction and Nomenclature

Nomenclature


15-W, 30-W, 50-W Models

Open-frame types

S8VM-015□□/S8VM-015□□D
S8VM-030□□/S8VM-030□□D
S8VM-050□□/S8VM-050□□D

Covered types

S8VM-015□□C□/S8VM-01524A□
S8VM-030□□C□/S8VM-03024A□
S8VM-050□□C□/S8VM-05024A□

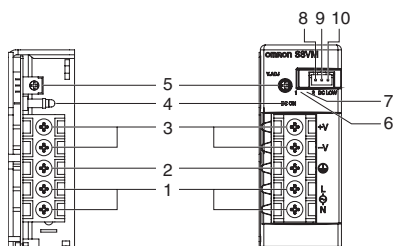


100-W Models

Open-frame types

S8VM-100□□/S8VM-100□□D

Covered types

S8VM-100□□C□/S8VM-10024A□

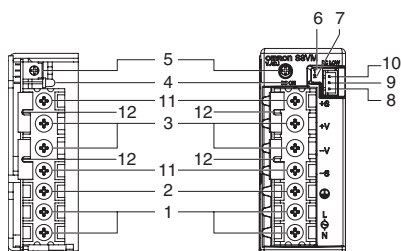


150-W Models

Open-frame types

S8VM-150□□/S8VM-150□□D

Covered-types

S8VM-150□□C□/S8VM-15024A□

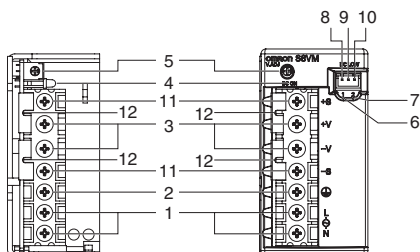

Output Color Label

This color label identifies the output voltage by color.




Green: 5 V
Blue: 12 V
Yellow: 15 V
White: 24 V

Color label identifying output voltage

| No. | Name | Function |
|-----|------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | AC input terminals (L). (N) | Connect the input lines to these terminals. (See note 1.) |
| 2 | PE terminal: Protective earthing terminal (S8VM-□□□□C□/S8VM-□□□□A□) FG terminal: Frame ground terminal S8VM-□□□□□/□□□□□D) | Connect the ground line to this terminal. (See note 2.) |
| 3 | DC output terminals (-V). (+V) | Connect the load lines to these terminals. |
| 4 | Output indicator (DC ON: Green) | Lights (green) while a direct current (DC) output is ON. |
| 5 | Output voltage adjuster (V. ADJ) | Use to adjust the voltage. |
| 6 | Undervoltage alarm indicator 1 (DC LOW1: Yellow) (See note 3.) | Lights only when a momentary drop in output voltage is detected. This status is maintained. |
| 7 | Undervoltage alarm indicator 2 (DC LOW2: Red) (See note 3.) | Lights only when the output voltage drops to approximately 20 V or lower. |
| 8 | Undervoltage alarm output terminal 1: (DC LOW1) (See note 4.) | Outputs only when a momentary drop in output voltage is detected. This status is maintained. (The transistor turns OFF when a voltage drop occurs.) |
| 9 | Undervoltage alarm output terminal 2: (DC LOW2) (See note 4.) | Outputs only when the output voltage drops to approximately 20 V or lower. (The transistor turns OFF when a voltage drop occurs.) |
| 10 | Common terminal for undervoltage alarm output (See note 4.) | Common terminal (emitter) for terminals 8 and 9 |
| 11 | Remote sensing terminals (See note 5.) | Correct the voltage drop in the load lines. |
| 12 | Short bars (See note 5.) | — |

Note: 1. The fuse is located on the (L) side. It is NOT user-replaceable.

2. Protective earthing connection is the panel mounting hole shown in the figure below.
(A protective earthing connection stipulated in safety standards is used. Connect the ground completely (S8VM-□□□□D only)
Ground terminal: M3 (Depth: 8 mm max.)/Ground wire: AWG 18

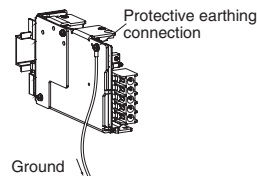


3. S8VM-□□□24A□ only
4. S8VM-05024A□, S8VM-10024A□, S8VM-15024A□ only. Housing and terminals for undervoltage detection output are also provided. For details, refer to "XH Connector Preparation" on page 21 under *Safety Precautions*.
5. When not using the remote sensing function, leave the short bar in the same state as when shipped.

Engineering Data

Derating Curve


S8VM-15W/30W

Standard mounting/Horizontal mounting/Face-up mounting

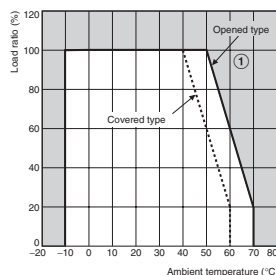


S8VM-50W

Standard mounting/Horizontal mounting

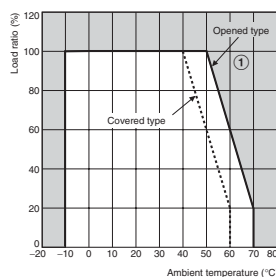


Face-up mounting

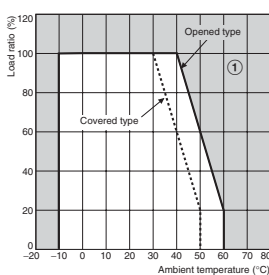


S8VM-100W

Standard mounting

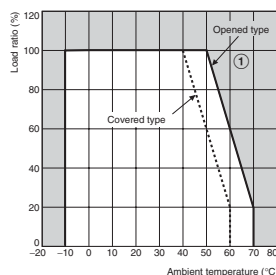


Horizontal mounting/Face-up mounting

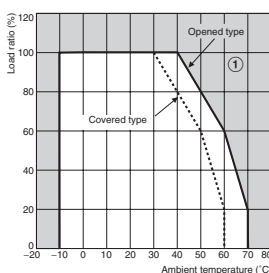


S8VM-150W


Standard mounting

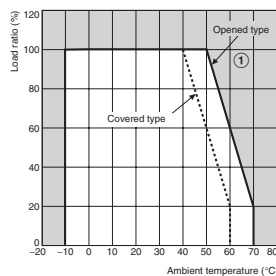

Horizontal mounting

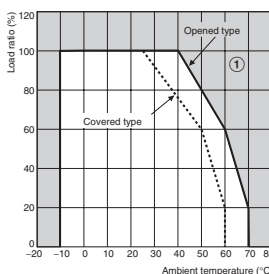

Face-up mounting

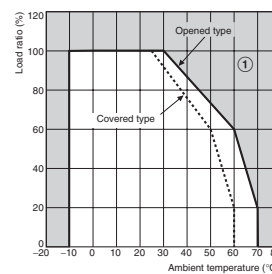

Note: 1. Internal parts may occasionally be deteriorated or damaged. Do not use the Power Supply in areas outside the derating curves (i.e., the area shown by shading ① in the above graphs).


2. If there is a derating problem, use forced air-cooling.

3. When mounting two or more Power Supplies side-by-side, allow at least 20 mm spacing between them. Multiple 100- and 150-W models cannot be used side by side. Be sure to install the Power Supplies as far away from heat-generating sources as possible.


4. When using 150-W models for a long period of time at an input voltage of 90 VAC or lower, reduce the load to 80% or less of the above derating curves.

■ Mounting


Standard mounting
(DIN Rail mounting bracket type)
Correct

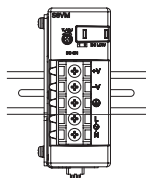


Standard mounting
(Front-mounting type)
Correct

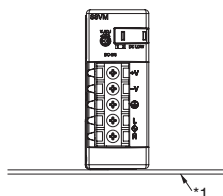

 
Horizontal mounting
(Front-mounting type)
Correct




Face-up mounting
(DIN Rail mounting bracket type)
Incorrect

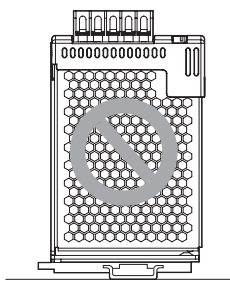


Face-up mounting
(Front-mounting type)
Correct

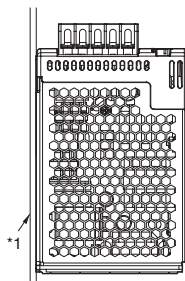

Face-down mounting
(DIN Rail mounting bracket type)
Incorrect

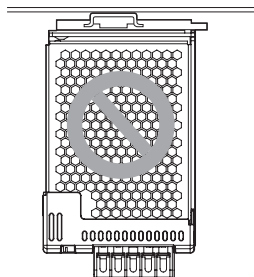

Face-down mounting
(Front-mounting type)
Incorrect

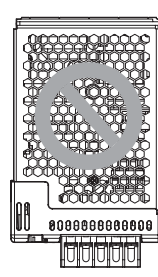


- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the product within the derating curve for the mounting direction that is used.
 2. Use the metal plate as the mounting panel (*1).
 3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.
 4. Mounting screw tightening torque (recommended value: 0.49 N·m)


■ Remote Sensing Function

(S8VM-100□□□□/150□□□□ only)


This function compensates a voltage drop on the load lines. To use this function, connect after removing the two short bars of the remote sensing terminal.

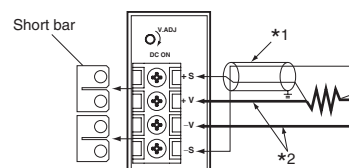

- Note:**
1. Use a 2-conductor shielded cable as a connection wire (*1).
 2. Use as thick a wire as possible since high voltage drops on the load lines (*2) may activate the overvoltage protection function.
 3. Use when the voltage drop is 0.3 V or lower.
 4. When the +S and -S terminals are opened with the short bar removed, the overvoltage protection function is activated and the output voltage will be cut off.
 5. If the load line is too long, use an electrolytic capacitor in the following 3 locations:
 - 1) Across the load terminals
 - 2) Between the +S terminal and + terminal
 - 3) Between the -S terminal and - terminal
 Select the capacity of the connected capacitor from between several tens to several hundreds of μF as a guide, and then determine the capacity when actually connecting the capacitor between terminals as shown below.

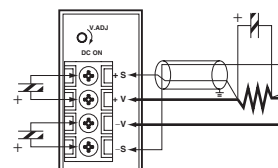

■ Inrush Current, Start Up Time, Output Hold Time

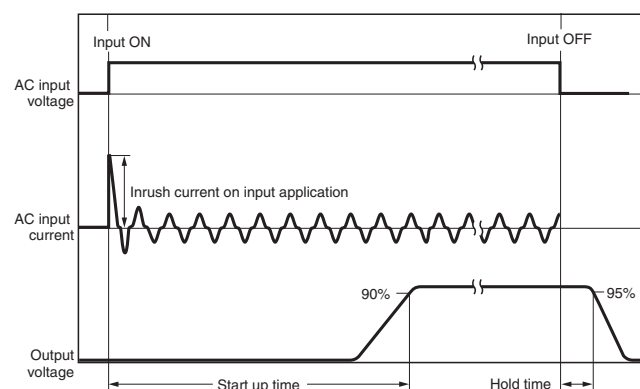

Reference Values


| Item | Value | Definition |
|--------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reliability (MTBF) | 135,000 hrs min. | MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates the reliability of a device. Therefore, it does not necessarily represent the life of the product. |
| Life expectancy | 10 yrs. min. | The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor. |

Overload Protection


The Power Supply is provided with an overload protection function that protects the Power Supply from possible damage by short-circuit and overcurrent.

When the output current rises above 105% min. of the rated current, the protection function is triggered, automatically decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


15/30W

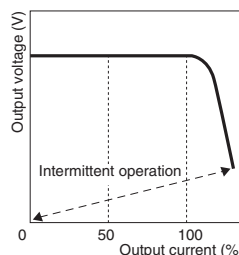

50/100/150W (5 V)

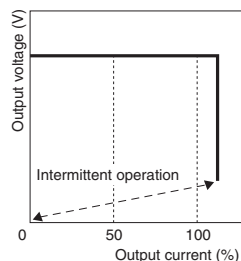

50/100/150W (12 V, 15 V, 24 V)

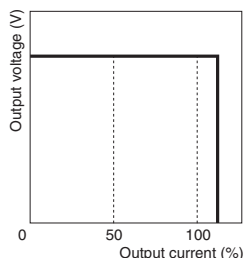


The values shown in the above diagrams are for reference only.

- Note:**
1. If the Power Supply has been short-circuited or supplied with an overcurrent longer than 30 seconds, the internal parts of the Power Supply may occasionally be deteriorated or damaged. Do not continue to use for longer than 30 seconds in this state.
 2. Internal parts may possibly be deteriorated or damaged if the Power Supply is used for applications with frequent in-rush current or overloading at the load end. Do not use the Power Supply for such applications.

Overvoltage Protection

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 140% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the Power Supply by turning it OFF for at least three minutes and then turning it back ON again.

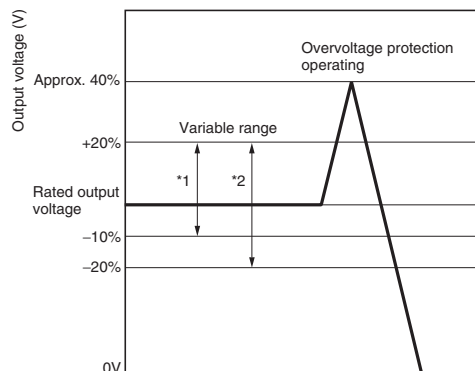

The values shown in the above diagram are for reference only.

*1 S8VM-□□□24A□

*2 Except for S8VM-□□□24A□

- Note:**
1. Do not turn ON the power again until the cause of the overvoltage has been removed.
 2. The overvoltage protection function will be activated when the output voltage adjuster (V.ADJ) is set to a value that exceeds +20% of the rated output voltage.

■ Undervoltage Alarm Function (Indication and Output)

(Only S8VM-□□□24A□)

If an output voltage drop is detected with an S8VM-□□□24A□ with undervoltage alarm function, the DC LOW indicator will light to notify of an output error. The transistor also sends an output externally to notify of the error (except for the S8VM-01524A□ and S8VM-03024A□).

Transistor Output: Open Collector (Sinking type (NPN))
30 VDC max., 50 mA max.


Leakage current when OFF: 0.1 mA or less
Residual voltage when ON: 2 V or less

S8VM-01524A□
S8VM-03024A□

S8VM-05024A□

S8VM-10024A□

S8VM-15024A□

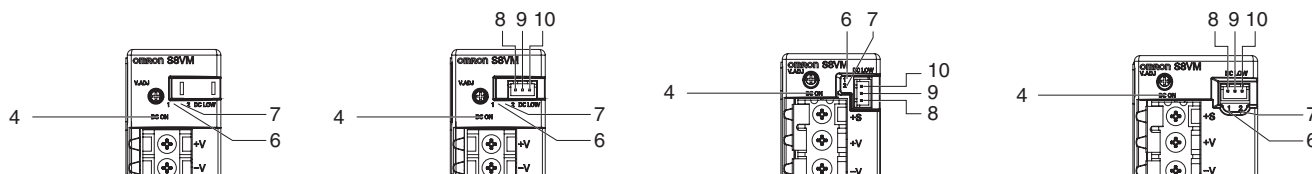

• Undervoltage Alarm Function 1 (DC LOW1)

Only a momentary voltage drop is detected. Detection voltage is automatically adjusted internally by detecting the output voltage (approx. 2.7 V lower than the voltage output at an output voltage of 24.0 V).

During detection, the transistor is OFF (with no continuity across 8 and 10) and the LED (6: Yellow) lights. (The Undervoltage Alarm Function 1 is used as a latch holding function.)

• Undervoltage Alarm Function 2 (DC LOW2)

Detection voltage is set to approx. 20.0 V. (from 18.0 to 21.6 V).

During detection, the transistor is OFF (with no continuity across 9 and 10) and the LED (7: Red) lights.

Note: 1. This function monitors the voltage at the Power Supply output terminals.

To check actual voltage, measure voltage on the load side.

2. Gradual voltage drop is not detected by the Undervoltage Alarm Function 1. (DC LOW1)
3. Once undervoltage is detected by Undervoltage Alarm Function 1 (DC LOW1), the transistor turns OFF and status of the LED (6: Yellow) light is maintained. To reset the function, turn OFF the Power Supply for 60 seconds or longer, and then turn it ON again.
4. If the output voltage remains at 15 V or lower for several seconds when using Undervoltage Alarm Function 1 (DC LOW 1), the output hold status for detection may be reset.

Probable Causes of Power Supply Errors and Troubleshooting Using Undervoltage Alarm Function


 

 
 
 
Check the following information if the Undervoltage Alarm Function operates.

Contact your OMRON representative if the Power Supply does not function normally after checking.

The symbols in the table are as follows:

●: Lit, ○: Not lit, ✕: Flashing

Note: Flashing: The output voltage is unstable, causing the LED to repeatedly turn ON and OFF.
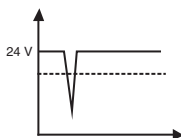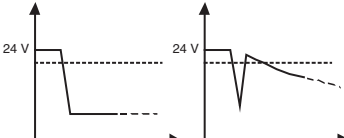
| | DC ON | | DC LOW1 | | DC LOW2 | | | Output voltage | Power Supply status diagnosis | |
|---|-----------------|------------------|-----------------------------------|---------------|-----------------------------------|---|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|--|
| | LED ④: Green | LED ⑥: Yellow | Transistor outputs (⑧ to ⑩) | LED ⑦: Red | Transistor outputs (⑨ to ⑩) | | | | | |
| 1 | ● | ○ | ON | ○ | ON | → | Normal (approx. 90% min. of rated output voltage) | Normal status | | |
| 2 | ● | ● | OFF | ○ | ON | → | Normal (approx. 90% min. of rated output voltage) | The output voltage has recovered to normal status following a previous sudden voltage drop. |  | |
| 3 | ● | ○ | ON | ● | OFF | → | Output drop (approx. 90% max. of rated output voltage) | The output voltage has dropped gradually and remains low. |  | |
| 4 | ● | ● | OFF | ● | OFF | → | Output drop (approx. 90% max. of rated output voltage) | The output voltage remains low following a previous sudden voltage drop. |  | |
| 5 | ● | ● | OFF | ✕ | ON ⇕ OFF | → | Output drop (approx. 80% of rated output voltage) | The output voltage remains low and is continuing to fluctuate following a previous sudden voltage drop. |  | |
| 6 | ● | ○ | ON | ✕ | ON ⇕ OFF | → | Output drop (approx. 80% of rated output voltage) | The output voltage has dropped gradually, remains low, and is continuing to fluctuate. |  | |
| 7 | ○ | ○ | OFF | ○ | OFF | → | No output | No output voltage is being output. | | |
| 8 | ✕ | ✕ | ON ⇕ OFF | ✕ | ON ⇕ OFF | → | Unstable output | The output voltage is unstable. |  | |


| Probable cause of error | Troubleshooting methods | |
|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| — | — | 1 |
| A momentary power failure has occurred in the input. | Check that the output voltage is normal and no problems have occurred in other devices. No problems will be caused by continuing to use the Power Supply as is. To clear DC LOW1 (LED display and transistor output status), turn OFF the input Power Supply, and wait at least 60 s before turning ON the input Power Supply again. | 2 |
| A momentary overload has occurred. | The load current has probably exceeded the rated current. Either reduce the connected load or replace the Power Supply with one that has a higher capacity. | |
| A momentary output voltage drop has occurred at startup due to the capacity of the capacitor on the load side. | A large inrush current has probably flowed to the load side at startup. Replace the Power Supply with one that has a higher capacity. | |
| The output voltage has returned to normal voltage following a rapid drop caused by using the output voltage adjuster (V.ADJ). | Turn OFF the input Power Supply, and wait at least 60 s before turning ON the input Power Supply again to clear the indicator status. | |
| Deterioration due to age (when the Power Supply has been used for several years) | The internal parts of the Power Supply may have deteriorated due to age. Replace the Power Supply. Also replace other Power Supplies that were purchased at the same time. | 3 |
| Overload (immediately following first use of the Power Supply or when increasing the load) | The load current has probably exceeded the rated current. Check the actual load current and Power Supply capacity. Continued use in overload status may damage the Power Supply. | |
| The output voltage dropped to -10% or lower of the rated voltage resulting from using the output voltage adjuster (V.ADJ) | Adjust the output voltage to the rated values using the output voltage adjuster (V.ADJ). | |
| A sudden overload occurred and the Unit remains in overload status. | An error has probably occurred in the load device. Turn OFF the input voltage, and check whether any errors have occurred in the load device. Continued use in overload status may damage the Power Supply. | 4 |
| The output voltage remains low after a rapid voltage drop caused by using the output voltage adjuster (V.ADJ). | Adjust the output voltage to the rated values using the output voltage adjuster (V.ADJ). To clear DC LOW1 (LED display and transistor output status), turn OFF the input Power Supply, and wait at least 60 s before turning ON the input Power Supply again. | |
| The overload status continues to fluctuate following a sudden overload. | An error has probably occurred in the load device. Turn OFF the input voltage, and check whether any errors have occurred in the load device. Continued use in overload status may damage the Power Supply. | 5 |
| Deterioration due to age (after using the Power Supply for several years) | The internal parts of the Power Supply may have deteriorated due to age. Replace the Power Supply. Also replace other Power Supplies that were purchased at the same time. | 6 |
| Overload (immediately following first use of the Power Supply or when increasing the load) | The load current has probably exceeded the rated current. Check the actual load current and Power Supply capacity. Continued use in overload status may damage the Power Supply. | |
| Power Supply interrupted or damaged. | Check whether the Power Supply's input voltage is being applied correctly. If there is no output even though the input voltage is applied correctly, the internal circuit is probably damaged. Return the Product to OMRON. | 7 |
| Overvoltage protection operation | Turn OFF the input Power Supply, and wait at least 3 min before turning ON the input again. If the same status recurs, the internal circuit is probably damaged. Return the Product to OMRON. | |
| The short bar has fallen off, or the +S and -S terminals are open. | Check whether the +S and -S terminals are open. If so, the overvoltage protection function is activated. Therefore, turn OFF the input power supply and wait at least three minutes before turning it ON again. (S8VM-10024A□/15024A□ models only) | |
| Output short-circuit | Remove the cause of the output short-circuit. | |
| Intermittent operation due to overload (S8VM-01524A□/03024A□ only) | The load current has probably exceeded the rated current. Check the actual load current and Power Supply capacity. Continued use in overload status may damage the Power Supply. | 8 |
| The Power Supply fails to start repeatedly due to the capacity of the capacitor on the load side. | A large inrush current has probably flowed to the load side at startup. Replace the Power Supply with one that has a higher capacity. | |
| The input turns ON and OFF repeatedly. | Check whether the Power Supply's input voltage is being applied correctly. | |
| The status repeatedly switches between normal operation and output short-circuit. | An error has probably occurred in the load device. Turn OFF the input voltage, and check whether any errors have occurred in the load device. | |

Dimensions

Note: All units are in millimeters unless otherwise indicated.

■ Front-mounting Models


S8VM-015□□
S8VM-015□□C
S8VM-01524A

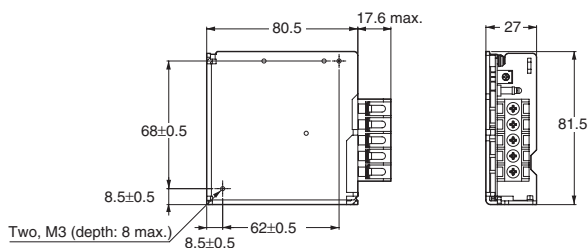

Mounting Holes



| | Surface screw mounting |
|-----------------|------------------------|
| Side Mounting | Two, 4 dia. |
| Bottom Mounting | Two, 4 dia. |

Note: The image is the S8VM-01524 Model.

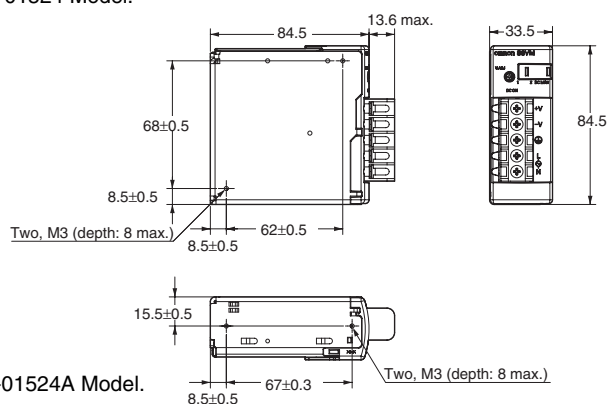

Note: The image is the S8VM-01524A Model.


S8VM-030□□
S8VM-030□□C
S8VM-03024A

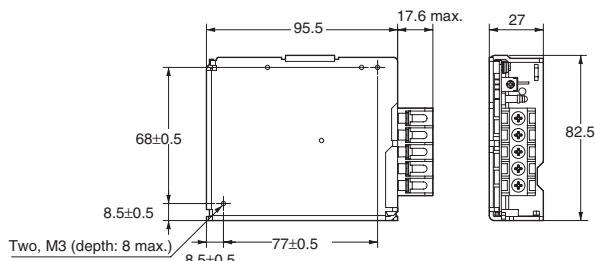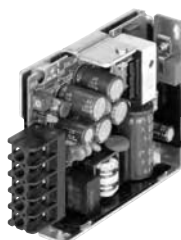

Mounting Holes


| | Surface screw mounting |
|-----------------|------------------------|
| Side Mounting | Two, 4 dia. |
| Bottom Mounting | Two, 4 dia. |

Note: The image is the S8VM-03024 Model.


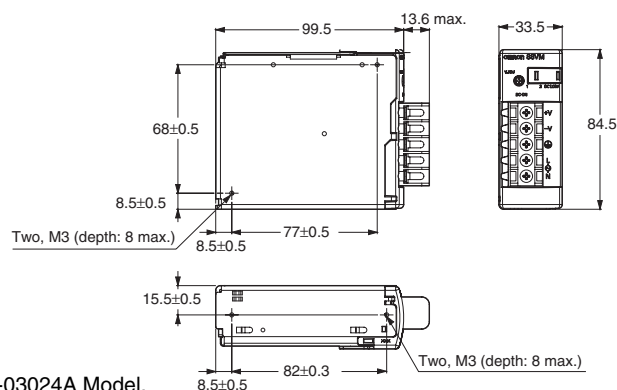


Note: The image is the S8VM-03024A Model.

S8VM-050□□
S8VM-050□□C
S8VM-05024A

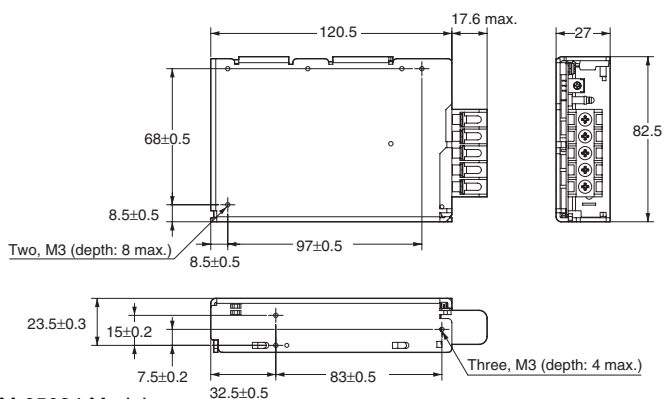

Note: The image is the S8VM-05024 Model.

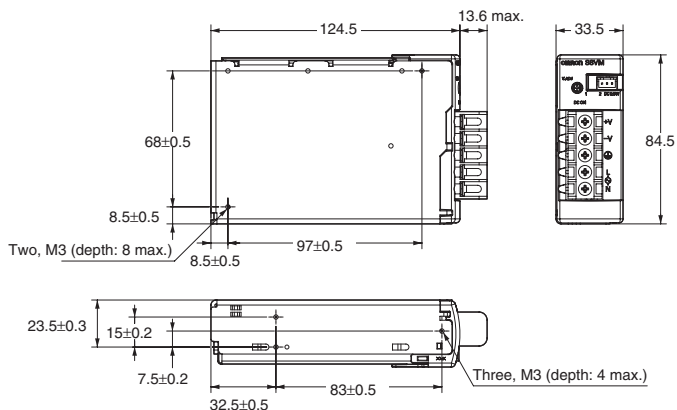
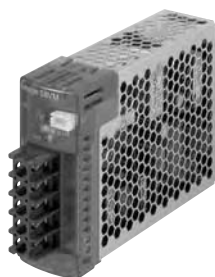


Note: The image is the S8VM-05024A Model.



Mounting Holes

| | Surface screw mounting |
|-----------------|----------------------------------------------|
| Side Mounting | Two, 4 dia. 68±0.5 97±0.5 |
| Bottom Mounting | Three, 4 dia. 15±0.2 7.5±0.2 83±0.5 |

S8VM-100□□
S8VM-100□□C
S8VM-10024A

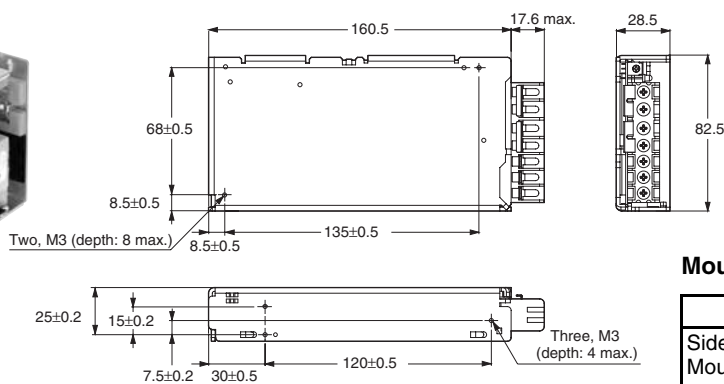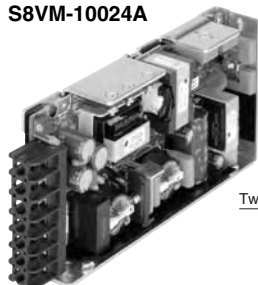

Note: The image is the S8VM-10024 Model.

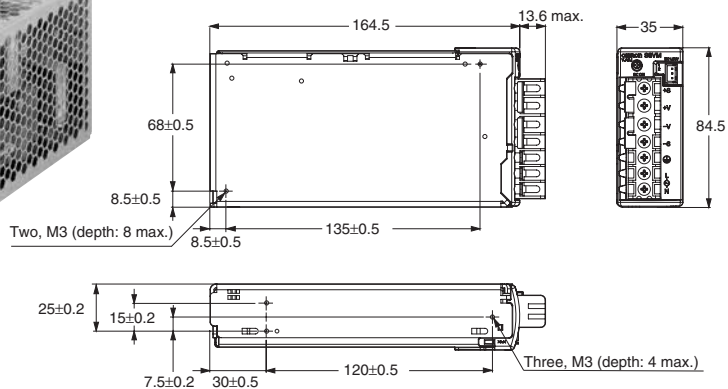
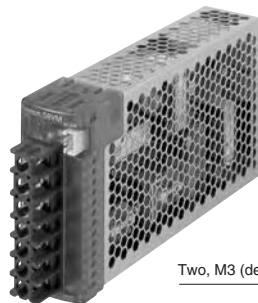


Note: The image is the S8VM-10024A Model.



Mounting Holes

| | Surface screw mounting |
|-----------------|-----------------------------------------------|
| Side Mounting | Two, 4 dia. 68±0.5 135±0.5 |
| Bottom Mounting | Three, 4 dia. 15±0.2 7.5±0.2 120±0.5 |

S8VM-150□□
S8VM-150□□C
S8VM-15024A

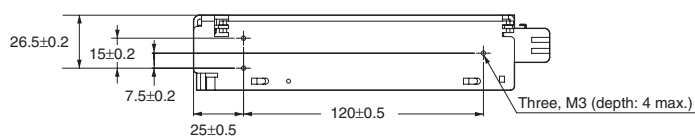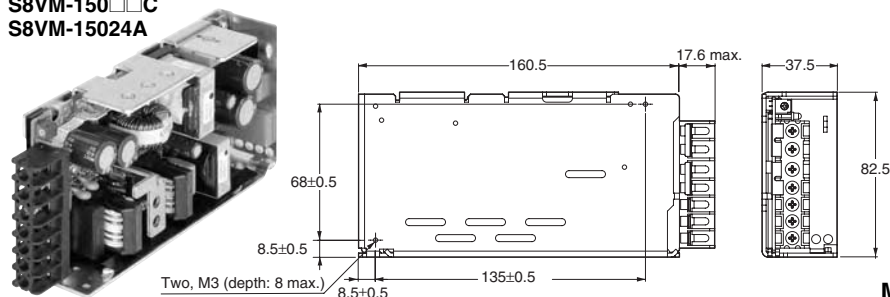

Note: The image is the S8VM-15024 Model.

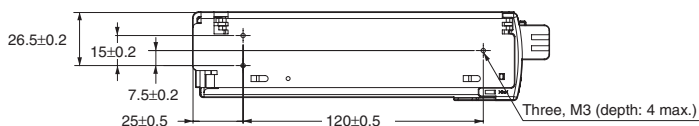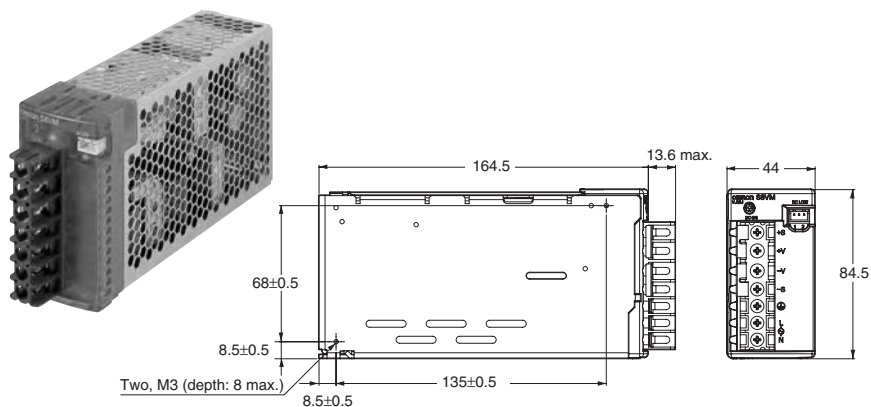


Note: The image is the S8VM-15024A Model.

Mounting Holes


| Surface screw mounting | |
|------------------------|----------------------|
| Side Mounting | <p>Two, 4 dia.</p> |
| Bottom Mounting | <p>Three, 4 dia.</p> |

■ DIN Rail Mounting Bracket Models

S8VM-015□□D
S8VM-015□□CD
S8VM-01524AD

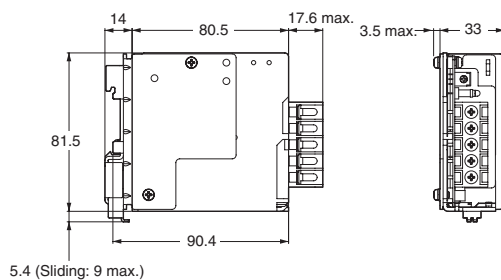


Note: The image is the S8VM-01524D Model.

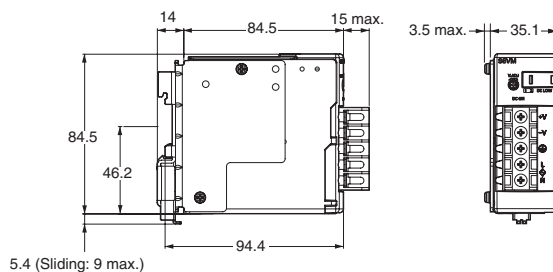


Note: The image is the S8VM-01524AD Model.

S8VM-030□□D
S8VM-030□□CD
S8VM-03024AD


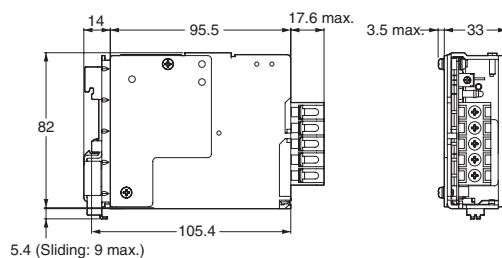


Note: The image is the S8VM-03024D Model.

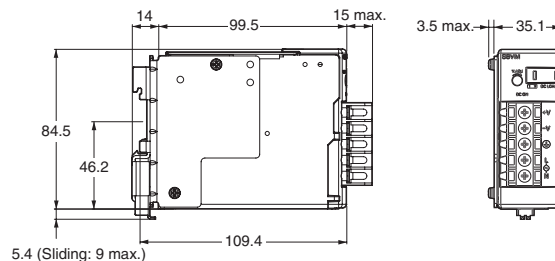


Note: The image is the S8VM-03024AD Model.

S8VM-050□□D
S8VM-050□□CD
S8VM-05024AD

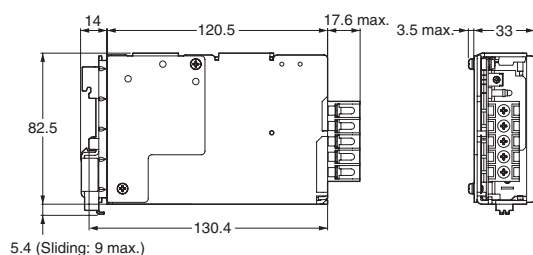
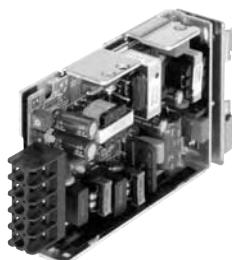


Note: The image is the S8VM-05024D Model.

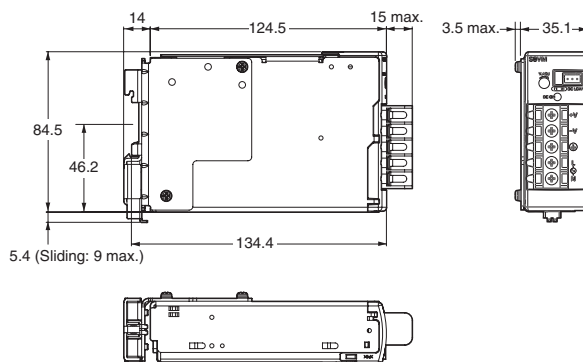


Note: The image is the S8VM-05024AD Model.

S8VM-100□□D
S8VM-100□□CD
S8VM-10024AD

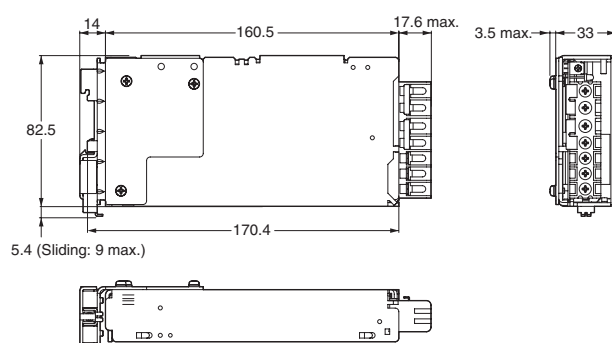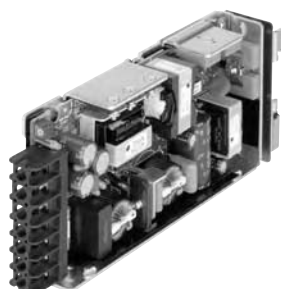


Note: The image is the S8VM-10024D Model.

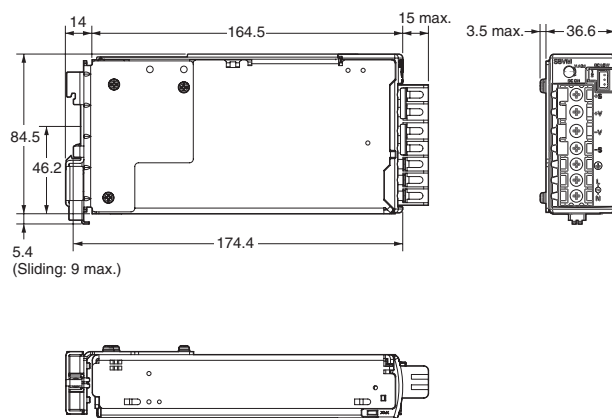


Note: The image is the S8VM-10024AD Model.

S8VM-150□□D
S8VM-150□□CD
S8VM-15024AD

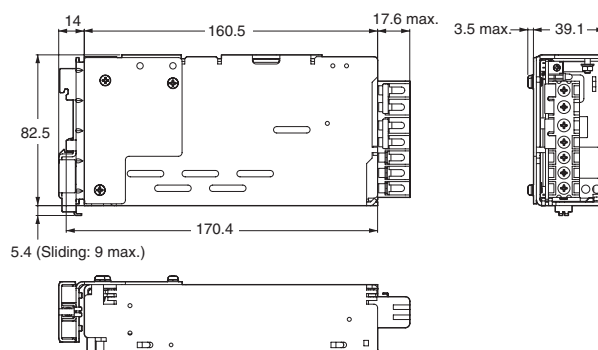

Note: The image is the S8VM-15024D Model.

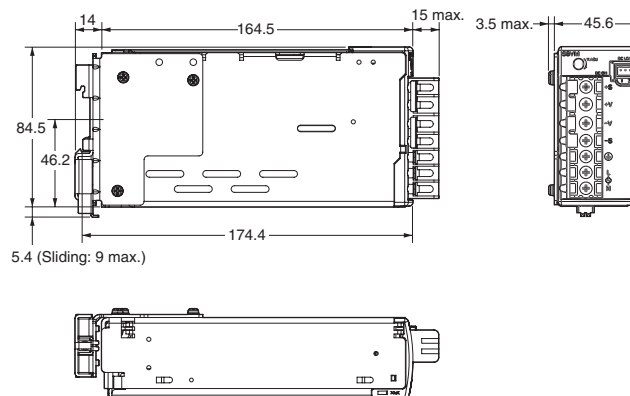



Note: The image is the S8VM-15024AD Model.

■ DIN Rail (Order Separately)

Note: All units are in millimeters unless otherwise indicated.



Mounting Rail (Material: Aluminum)

PFP-100N
PFP-50N

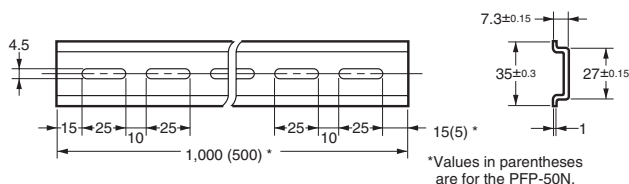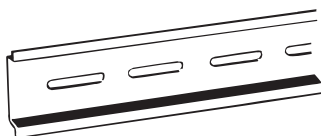

Mounting Rail (Material: Aluminum)

PFP-100N2

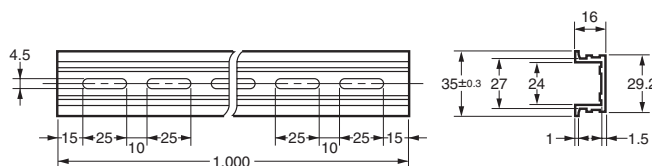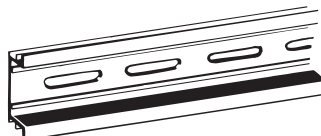

Safety Precautions

CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product or touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque of 1.6 N·m.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.




Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.




Precautions for Safe Use

Mounting


Standard mounting (DIN Rail mounting bracket type)

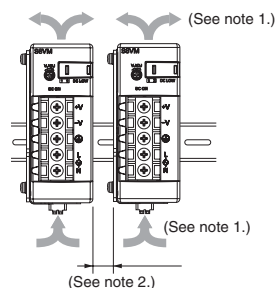


Standard mounting (Front-mounting type)

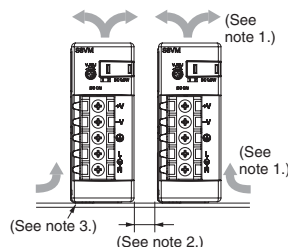

Horizontal mounting (Front-mounting type)

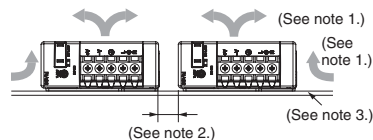

Face-up mounting (Front-mounting type)

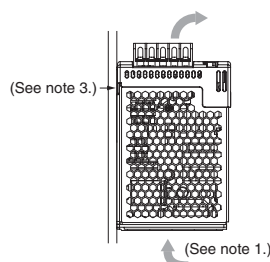

- Note:**
1. Convection of air
 2. 20 mm or more
 3. Use a metal plate as the mounting panel.

Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the Product.

Be sure to allow convection in the atmosphere around devices when mounting. Do not exceed the range of the derating curve.

Use the metal plate as the mounting panel.

When cutting out holes for mounting, make sure that cuttings do not enter the interior of the Product.

Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts.

Use the Product within the derating curve for the mounting direction that is used.

When mounting two or more Power Supplies side-by-side, allow at least 20 mm spacing between them, as shown in the above illustrations.

 
The internal parts may possibly be damaged if mounting screws are over inserted. Refer to *Dimensions* on page 14 for maximum depth of insertion inside the Power Supply.

Several Power Supplies cannot be connected. (Only S8VM-100□□□□/150□□□□) Keep the Power Supply as far away from heating elements as possible when installing.

S8VM-100□□□□/S8VM-150□□□□

Incorrect

Incorrect



Wiring

Connect the ground completely. A protective earthing connection stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.

Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.

Do not apply more than 100 N force to the terminal block when tightening it.

Be sure to remove the sheet covering the Product for machining before power-ON so that it does not interfere with heat dissipation.

Use the following material for the wires to be connected to the S8VM to prevent smoking or ignition caused by abnormal loads.

Over heating or fire can result from inadequately sized wiring materials when problems occur at the load. As a general rule, always select wire sizes suitable for at least 1.6 times the rated current.

Recommended Wire Types

| Model | | Recommended wire type |
|--------------|--------|-----------------------------------------------|
| S8VM-015□□□□ | (M3.5) | AWG24 to 14 (0.205 to 2.081 mm ²) |
| S8VM-030□□□□ | | |
| S8VM-050□□□□ | | |
| S8VM-100□□□□ | (M3.5) | AWG24 to 14 (0.205 to 2.081 mm ²) |
| S8VM-150□□□□ | | |
| S8VM-100□□□□ | (M4) | AWG24 to 12 (0.205 to 3.309 mm ²) |
| S8VM-150□□□□ | | |

Selection of Wires

Select wires for the Power Supply carefully. Refer to this table when selecting the wires.

| AWG No. | Cross-sectional area (mm ²) | Configuration (number of conductors/mm) | Voltage drop per 1 A (mV/meter) | Recommended maximum current (A) | |
|---------|-----------------------------------------|-----------------------------------------|---------------------------------|---------------------------------|-------------------------|
| | | | | UL1007 (300 V at 80°C) | UL1015 (600 V at 105°C) |
| 30 | 0.051 | 7/0.102 | 358 | 0.12 | — |
| 28 | 0.081 | 7/0.127 | 222 | 0.15 | 0.2 |
| 26 | 0.129 | 7/0.16 | 140 | 0.35 | 0.5 |
| 24 | 0.205 | 11/0.16 | 88.9 | 0.7 | 1.0 |
| 22 | 0.326 | 17/0.16 | 57.5 | 1.4 | 2.0 |
| 20 | 0.517 | 26/0.16 | 37.6 | 2.8 | 4.0 |
| 18 | 0.823 | 43/0.16 | 22.8 | 4.2 | 6.0 |
| 16 | 1.309 | 54/0.18 | 14.9 | 5.6 | 8.0 |
| 14 | 2.081 | 41/0.26 | 9.5 | — | 12.0 |
| 12 | 3.309 | 65/0.26 | 6.0 | — | 22.0 |
| 10 | 5.262 | 104/0.26 | 3.8 | — | 35.0 |

Recommended Maximum Current

The table is applicable to wires with 1 to 4 conductors. Keep the current value to within 80% of the values shown in this table when using wires having 5 or more conductors.

XH Connector Preparation

The following Products are provided with the S8VM-05024A□, S8VM-10024A□ and S8VM-15024A□ for the undervoltage alarm transistor output wiring.

| | | | |
|---------------------|--------------------------------|------------------------------|---------------------|
| Connector | S8VM-05024A□ | S8VM-10024A□ S8VM-15024A□ | Manufactured by JST |
| | S3B-XH-A-1 | BH3B-XH-2 | |
| | | | |
| Housing (provided) | XHP-3 | | |
| Terminal (provided) | BXH-001T-P0.6 or SXH-001T-P0.6 | | |

Be sure to prepare the connector according to the following instructions to ensure correct wiring. For details, refer to the JST catalog.

- Use a wire size of AWG22 to AWG28.
- The guideline for the length of sheath to be stripped from the wire is 2.1 to 2.6 mm.
- Use either a YC or YRS Crimping Tool (manufactured by JST) to crimp the terminal and wire.
- Be sure to insert the crimped terminal wires into the housing fully until a click is heard. Also, make sure that the wires attached to the housing are securely locked in place.

Installation Environment

Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.

Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

Operating Life

The life of a Power Supply is determined by the life of the electrolytic capacitors used inside. Here, Arrhenius Law applies, i.e., the life will be halved for each rise of 10°C or the life will be doubled for each drop of 10°C. The life of the Power Supply can thus be increased by reducing its internal temperature.

Ambient Operating and Storage Environments

Store the Power Supply at a temperature of -25 to 65°C and a humidity of 25% to 90%.

The Internal parts may occasionally be deteriorated or damaged. Do not use the Power Supply outside the derating range (i.e., under conditions indicated by the shaded area () in the derating curve diagrams on page 8.)

Use the Power Supply at a humidity of 30% to 85%.

Do not use the Power Supply in locations subject to direct sunlight.

Do not use the Power Supply in locations where liquids, foreign matter, or corrosive gases may enter the interior of the product.

Overcurrent Protection

If the Power Supply has been short-circuited or supplied with an overcurrent longer than 30 seconds, the internal parts of the Power Supply may occasionally be deteriorated or damaged. Do not continue to use longer than 30 seconds in this state.

Internal parts may possibly be deteriorated or damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

Charging the Battery

If a battery is to be connected as the load, install an overcurrent limiting circuit and an overvoltage protection circuit.

Dielectric Strength Test

If a high voltage is applied between an input and the case (PE/FG), it will pass through the LC of the built-in noise filter and energy will be stored. If the high voltages used for dielectric strength testing are turned ON and OFF with a switch, timer, or similar device, impulse voltage will be generated when the voltage is turned OFF and internal parts may possibly be damaged. To prevent the generation of impulse voltages, reduce the applied voltage slowly with a variable resistor on the test device or turn the voltage ON and OFF at the zero-cross point.

When performing the test, be sure to short-circuit all the output terminals to protect them from damage.

Insulation Test

When performing the test, be sure to short-circuit all the output terminals to protect them from damage.

Inrush Current

When two or more Power Supplies are connected to the same input, inrush current is added to the total current. Select fuses and circuit breakers giving sufficient consideration to the fusing or operating characteristics so that fuses will not burn and breakers will not break due to inrush current.

Output Voltage Adjuster (V.ADJ)

Default Setting: Set at the rated voltage

Adjustable Range: Adjustable with output voltage adjuster (V.ADJ) on the front panel of the Product from -20% to 20% of the rated output voltage (-10% to 20% of the rated voltage for S8VM-□□□24A□)

Turning clockwise increases the output voltage and turning counter-clockwise decreases the output voltage.

The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.

After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

The output voltage may increase beyond the allowable voltage range (up to +20% of the rated voltage) depending on the operation of the output voltage adjuster (V.ADJ). When adjusting the output voltage, check the output voltage of the Power Supply and be sure that the load is not damaged.

When increasing the output voltage to more than +20% of the rated value using the output voltage adjuster (V. ADJ), the over-voltage protection function may operate.


(S8VM-□□□24A□ Only)

Turn the output voltage adjuster (V.ADJ) slowly. When decreasing the output voltage quickly, or when adjusting the output voltage to less than -10% of the rated value, the undervoltage alarm function may operate.

DIN Rail Mounting

When mounting to a DIN Rail, lower the S8VM onto the Rail until the Rail stopper clicks into place, hook section A over the edge of the Rail and push in the direction of B.

To remove the S8VM from the DIN Rail, insert a screwdriver into section C and pull the S8VM away from the Rail.

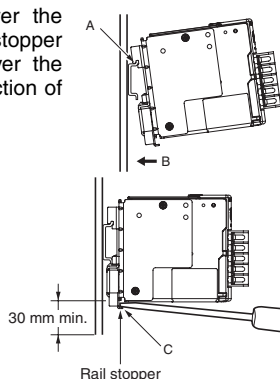


Series Operation


Two Power Supplies can be connected in series. The (±) voltage output can be accomplished with two Power Supplies.

Series Operation

15W/30W
Correct

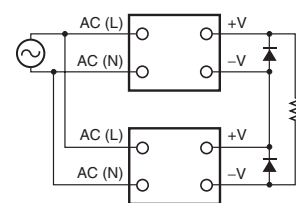


50W/100W/150W
Correct

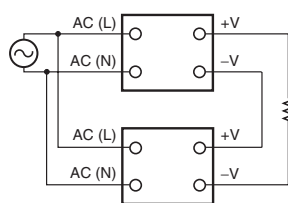

Output Voltage (±)

Correct

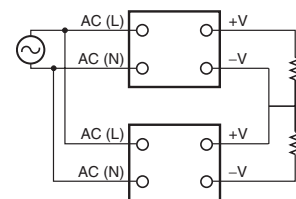


Note: 1. If the load is short-circuited, a reverse voltage may be applied inside the Power Supply unit, and this may possibly cause the deterioration or damage of the Power Supply unit. Connect the diode as shown in the figure. Use the following guidelines to select the diode to be connected.

| Type | Schottky Barrier diode |
|----------------------------|-----------------------------------------|
| Dielectric strength (VRRM) | Twice the rated output voltage or above |
| Forward current (If) | Twice the rated output current or above |

2. Though Products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

Parallel Operation

The product is not designed for parallel operation.

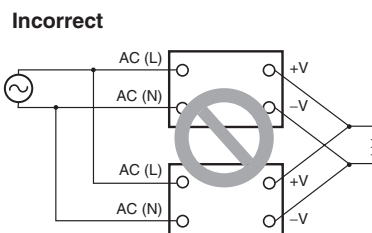

In Case There Is No Output Voltage

The possible cause for no output voltage may be that the overcurrent protection or overvoltage protection has operated. The internal protection circuit may operate if a large amount of surge voltage such as a lightning surge occurs while turning ON the Power Supply.

If there is no output voltage even after checking the following points please contact us.

Check the Overload Protected Status

Check whether the load is in overload status or is short-circuited. Remove wires load when checking.

Attempt to clear the overvoltage or internal protection function:

Turn the Power Supply OFF once, and leave it OFF for at least 3 minutes. Then turn it ON again to see if this clears the condition.

Check whether the +S terminal or -S terminal is opened with the short bar removed. (S8VM-100□□□□/S8VM-150□□□□ only)

Check if the output voltage has been adjusted to more than +20% of the rated value by output voltage adjuster. (V. ADJ).

Noise when the Input is Turned ON (50/100/150W)

A harmonic current suppression circuit is built into the Power Supply. This circuit can create noise when the input is turned ON, but it will last only until internal operation stabilizes and does not indicate any problem in the Product.

Warranty and Application Considerations

Read and Understand this Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Disclaimers

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON *Warranty and Limitations of Liability*.

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billings.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
 - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
 - d. Delivery and shipping dates are estimates only; and
 - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://oeweb.omron.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given: (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document. (ii) Use in consumer products or any use in significant quantities. (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations. (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product. NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Complete "Terms and Conditions of Sale" for product purchase and use are on Omron's website at www.omron.com/oei – under the "About Us" tab, in the Legal Matters section.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.



OMRON ELECTRONICS LLC

One Commerce Drive
Schaumburg, IL 60173

847-843-7900

For US technical support or other inquiries:

800-556-6766

OMRON CANADA, INC.

885 Milner Avenue
Toronto, Ontario M1B 5V8

416-286-6465

OMRON ON-LINE

Global - <http://www.omron.com>
USA - <http://www.omron.com/oei>
Canada - <http://www.omron.ca>

Cat. No. T031-E3-01

07/05

Specifications subject to change without notice

Printed in USA