

MITSUBISHI Low-Voltage Air Circuit Breakers series  
World Super AE

三菱低压空气断路器 World Super AE  
三菱低压气中遮断器 World Super AE

## MODEL **AE-SW**

## INSTRUCTION MANUAL 使用说明书 取扱説明書

**Types covered in this manual**  
**本手册适用于以下型号产品**  
**対象機種**

**AE630-SW AE1000-SW AE1250-SW AE1600-SW**  
**AE2000-SWA**  
**AE2000-SW AE2500-SW AE3200-SW**  
**AE4000-SWA**  
**AE4000-SW AE5000-SW AE6300-SW**

**IMPORTANT NOTE:** Before using these Series AE breakers, please read these instructions carefully, and make sure that all actual users also read them.

**重要注释:** 在使用 AE 断路器系列以前, 请务必仔细阅读本说明书, 并确保所有用户也阅读本说明。


ご使用の前に必ずこの取扱説明書をお読みください。  
この説明書は、最終ユーザまでお届けください。


**MITSUBISHI ELECTRIC CORPORATION**



## Safety precautions



- Before using this device, make sure to read this Instruction manual thoroughly. The cautionary items noted herein are of the utmost importance for the safe use of this device, and should always be strictly followed.
- Please make sure that the final user receives this Instruction manual.
- This Instruction manual is prepared for an electrical expert.

The following symbols have been used:

 <b>DANGER</b>	Failure to follow these instructions may result in dangerous conditions, which in turn could lead to severe personal injury or even death.
--	--

 <b>CAUTION</b>	Failure to follow these instructions may result in dangerous conditions, which could result in moderate to slight personal injury or damage to equipments and facilities.
--	---

	Warning for possible electrification under certain conditions.
	Warning for possible outbreak of a fire under certain conditions.

	This means prohibition. Never ignore this instruction.
	Be sure to follow these instructions without fail.

### **DANGER**

- Do not use this device on the conditions over ratings. Otherwise, ground-fault or short circuit fault could occur due to dielectric breakdown. Or explosion could occur due to a short circuit protection failure.
- Do not touch the terminals. There is a risk of electrical shock.

### **CAUTION**

- A qualified electrician should install this equipment.
- Inspection and maintenance should be performed by a qualified electrician and only after shutting off the electric power and verifying that there is no voltage present. Failure to do so could result in an electrical shock.
- Make sure to tighten the terminal screws to the torque specified in the instruction manual. Failure to do so could result in fire.
- Do not install in areas subject to high temperatures, high humidity, dust, corrosive gas, vibrations, or shocks, etc. To do so could result in malfunction or fire.
- Install so that trash, concrete dust, iron filings or rainwater cannot get into the circuit breaker unit interior. Failure to do so could result in malfunction or fire.
- When the circuit breaker trips automatically, always clear the source of the malfunction before closing the circuit breaker. Failure to do so could result in fire.
- Terminal screws should be tightened periodically. Failure to do so could result in fire.
- Use the breaker in 50/60 Hz. Failure to do so could result in malfunction or fire.
- Dispose of this product as industrial waste.

# Table of contents

• Safety precautions .....	2	• Cylinder lock (CYL) and Castell lock (CAL) .....	18
• External view .....	3	• Shutter lock (SST-LOCK) .....	19
• Internal construction .....	4	• Safety shutter name plate .....	19
• Outline dimensions and Weight .....	4	• Functions of electronic trip relay (ETR) parts .....	20
• Unpacking .....	5	• Characteristics setting of type WS relay .....	22
• Storage .....	5	• Characteristics setting of type WM relay .....	23
• Handling .....	6	• Characteristics setting of type WB relay .....	24
• Installation .....	7	• Characteristic setting of optional setting module ...	25
• Mount of drawout handle .....	8	• Setting the operation characteristics .....	27
• Attach the Inter-phase Barrier .....	8	• Wiring diagram .....	29
• Connection .....	9	• Technical note (Arc space, Reverse connection) ..	30
• Insert operation .....	11	• Technical note (Performance of withstand voltage) ...	30
• Drawout operation .....	13	• Technical note (Service conditions) .....	31
• Charging operation .....	15	• Guarantee .....	31
• Opening/Closing operation .....	16	• Inspection and Maintenance .....	32
• Door interlock (DI) .....	18	• Service Network .....	38

## External view

### < Fixed type >

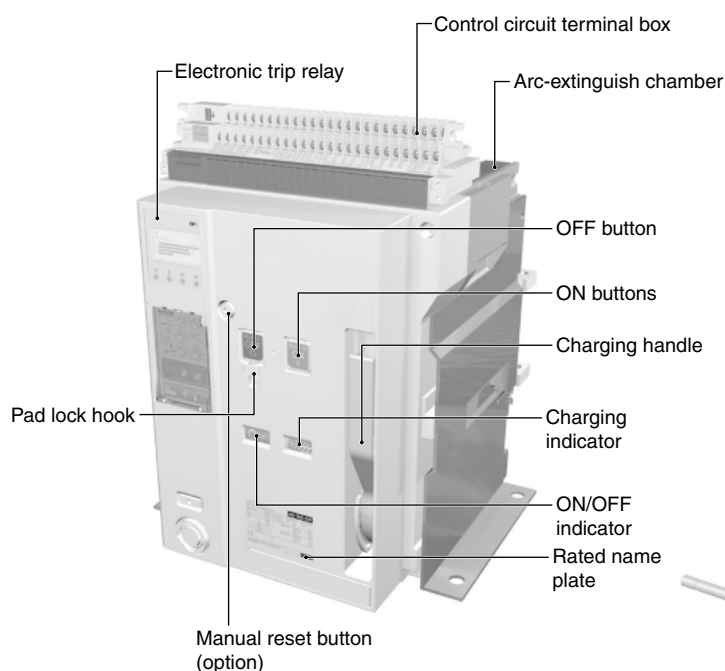


Fig. 3-1

### < Drawout type >

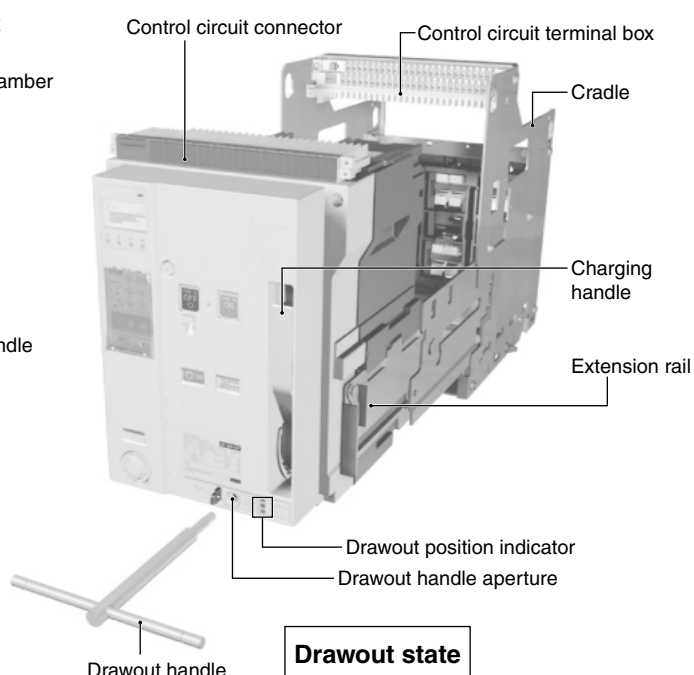


Fig. 3-2

Note: The fixed type is provided with lifting hooks (HP).

### < Drawout type >

AE4000-SW~  
AE6300-SW 3P



Fig. 3-3

## Internal construction

### AE-SW

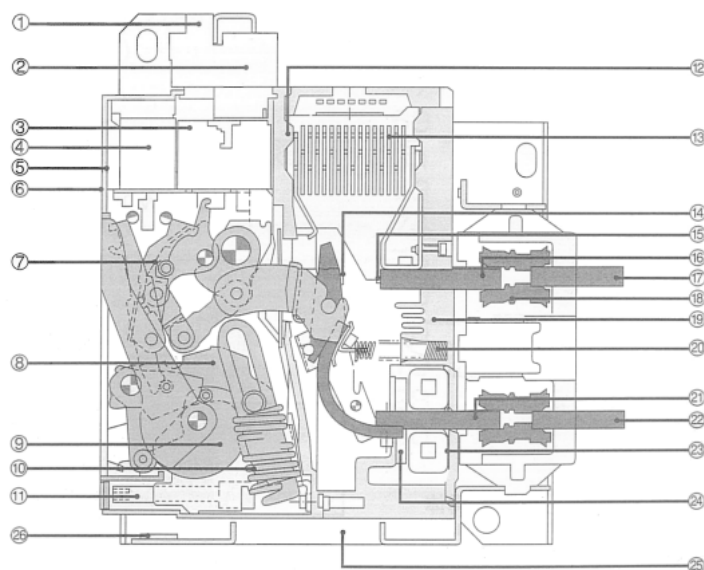


Fig. 4-1

- ① Control circuit terminal block
- ② Control circuit connector
- ③ Auxiliary switch
- ④ Shunt trip device, closing coil
- ⑤ Electronic trip relay
- ⑥ Front cover
- ⑦ Tripping mechanism
- ⑧ Closing mechanism
- ⑨ Charging mechanism
- ⑩ Closing spring
- ⑪ Drawout mechanism
- ⑫ Intermediate base
- ⑬ Arc-extinguishing chamber
- ⑭ Movable contact
- ⑮ Fixed contact
- ⑯ Conductor on the breaker
- ⑰ Conductor on the cradle
- ⑱ Main circuit junction
- ⑲ Base
- ⑳ Contact spring
- ㉑ Conductor on the breaker
- ㉒ Conductor on the cradle
- ㉓ Power supply CT
- ㉔ Current sensor coil
- ㉕ Cradle
- ㉖ Cradle name plate

## Outline dimensions and Weight

Table 4-1

Type			AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA
Dimension a × b × c × d (mm)	Fixed type	3P	340 × 410 × 290 × 40				340 × 410 × 290 × 108
		4P	425 × 410 × 290 × 40				425 × 410 × 290 × 108
	Drawout type	3P	300 × 430 × 375 × 61				300 × 430 × 375 × 104
		4P	385 × 430 × 375 × 61				385 × 430 × 375 × 104
Weight (kg)	Fixed type	3P	40	41		42	47
		4P	50	51		52	57
	Drawout type	3P	63	64		65	70
		4P	77	78		79	84
	Cradle only	3P	26				31
		4P	30				35

### ● Fixed type

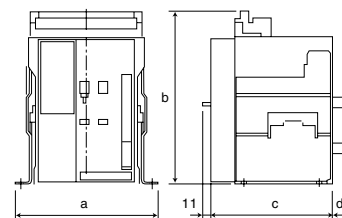


Fig. 4-2

Table 4-2

Type			AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA
Dimension a × b × c × d (mm)	Fixed type	3P	475 × 410 × 290 × 40			475 × 410 × 290 × 117
		4P	605 × 410 × 290 × 40			605 × 410 × 290 × 117
	Drawout type	3P	435 × 430 × 375 × 61			439 × 430 × 375 × 109
		4P	565 × 430 × 375 × 61			569 × 430 × 375 × 109
Weight (kg)	Fixed type	3P	60	61	63	81
		4P	72	73	75	99
	Drawout type	3P	92	93	95	108
		4P	113	114	116	136
	Cradle only	3P	35		36	49
		4P	43		44	61

### ● Drawout type

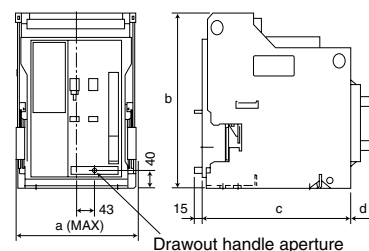


Fig. 4-3

Table 4-3

Type			AE4000-SW	AE5000-SW	AE6300-SW
Dimension a × b × c × d (mm)	Fixed type	3P	874 × 414 × 290 × 136		
		4P	1004 (1134) × 414 × 290 × 136		
	Drawout type	3P	875 × 480 × 375 × 123		
		4P	1005 (1135) × 480 × 375 × 123		
Weight (kg)	Fixed type	3P	160		
		4P	180 (200)		
	Drawout type	3P	233		240
		4P	256 (279)		263 (286)
	Cradle only	3P	118		125
		4P	133 (148)		140 (155)

( ) shows the value for 4P FN type, Neutral pole current capacity is 100% of the rated current.

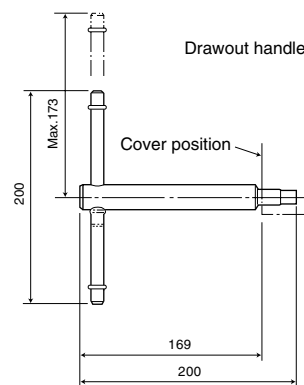


Fig. 4-4

## Unpacking

- ① Make sure that the packing case is free from any abnormality such as breaking and/or wetting.
- ② Referring to the rating nameplate, make sure that the delivered breaker is in conformity with your order. Serial No. is indicated on the rated name plate and the cradle name plate (Fig. 4-1 ㉔).

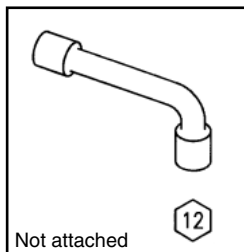


Fig. 5-1

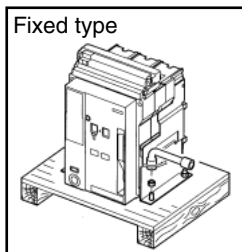


Fig. 5-2

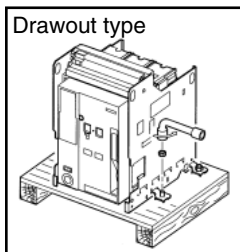


Fig. 5-3

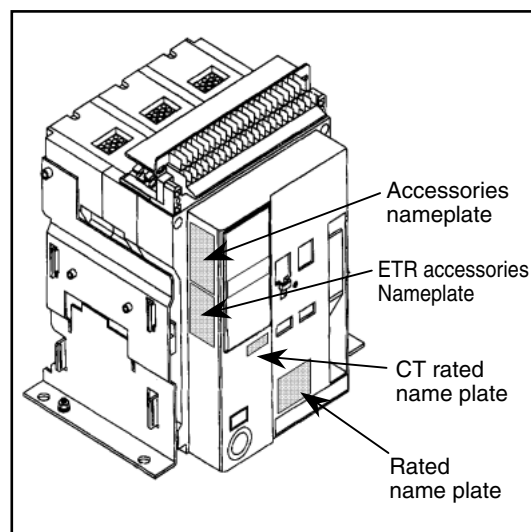


Fig. 5-4

## Storage

\* When you start using the breaker after storage and if its storage period is over 6 years, use it after lubrication as stated in "Grease lubricating procedure" for the maintenance manual.

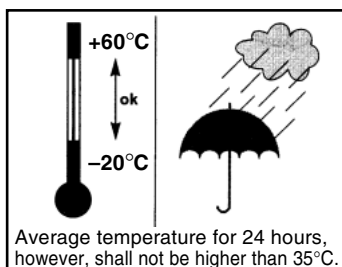


Fig. 5-5

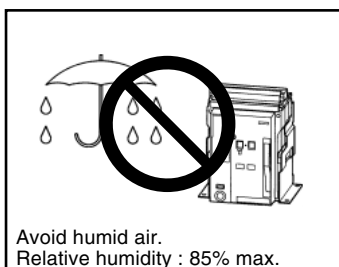


Fig. 5-6

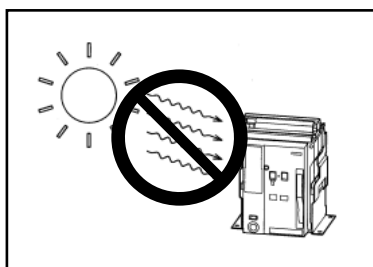


Fig. 5-7

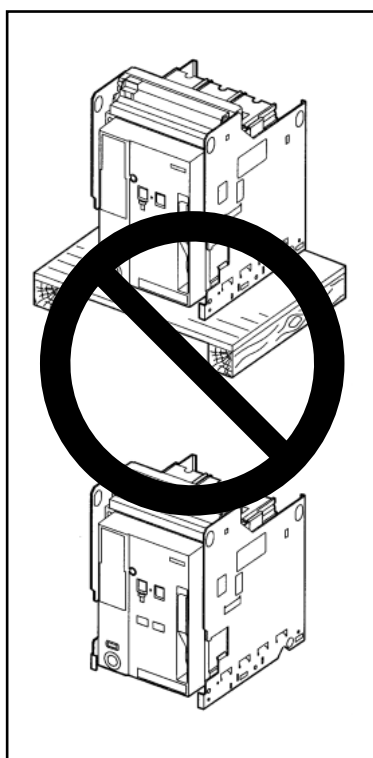


Fig. 5-8

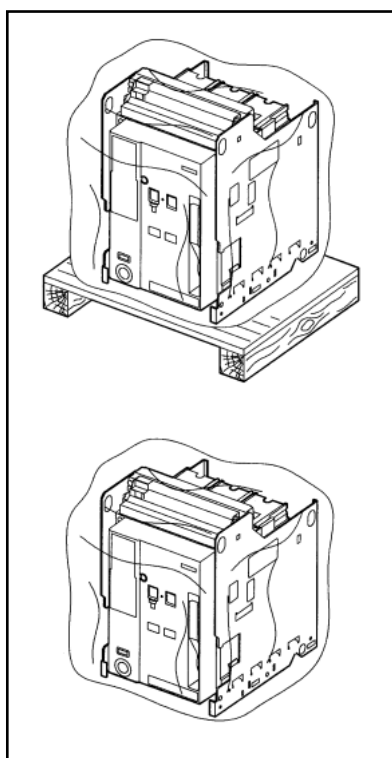


Fig. 5-9

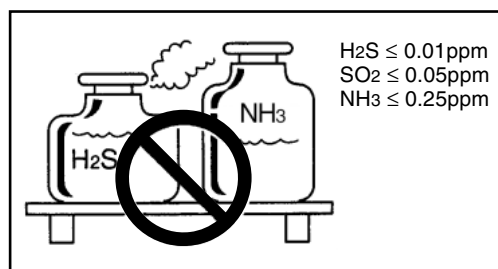


Fig. 5-10

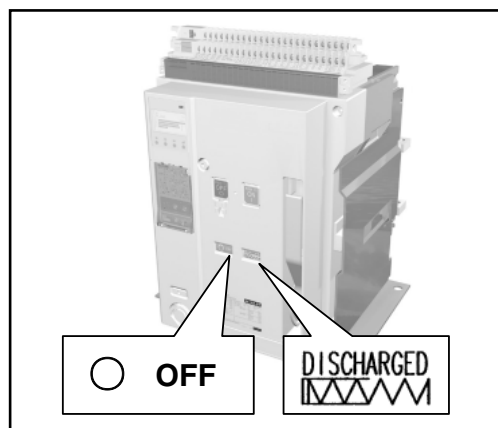


Fig. 5-11

## Handling

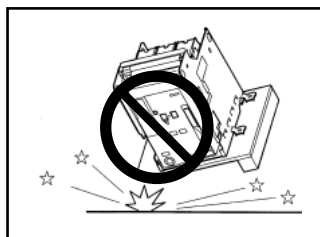


Fig. 6-1

Never drop the breaker when handling.


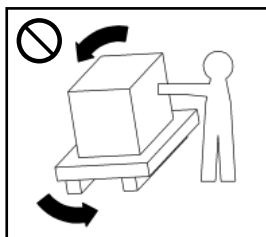


Fig. 6-2


Never roll the breaker when handling.

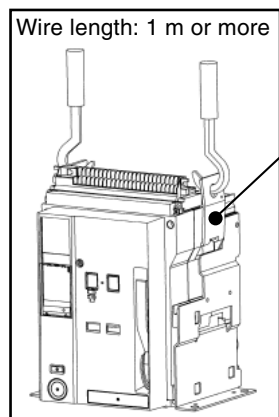

### Fixed type

Fig. 6-3

Lifting hooks (HP)

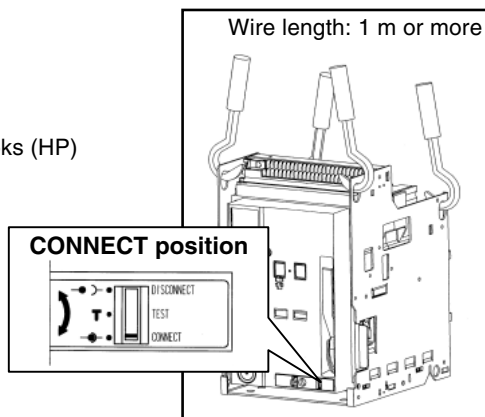

### Drawout type

Fig. 6-4

When the drawout breaker is lifted with the cradle, lift it when it is the "CONNECT" position.

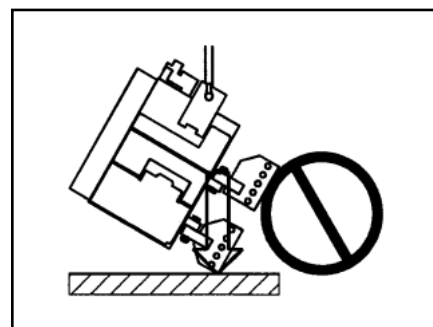


Fig. 6-5

When lifting and placing, be careful neither to drop nor to impact the breaker and the terminals for the center of gravity is by the terminal.

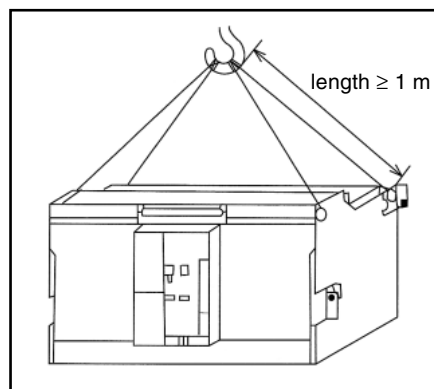


Fig. 6-6

To lift the breaker types AE4000-SW, AE5000-SW and AE6300-SW, be sure to use four ropes with a length of 1 m or more, or use the lifting truck, apply for further detail.

# Installation

## < Drawout type >

Tolerance on support flatness  $\leq 1$  mm


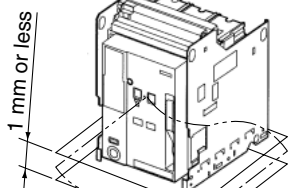


Fig. 7-1

! AE630-SW~AE4000-SWA

M12

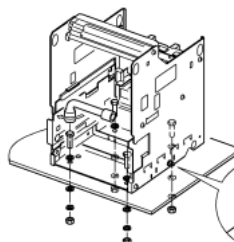

M8  
Earthing terminal

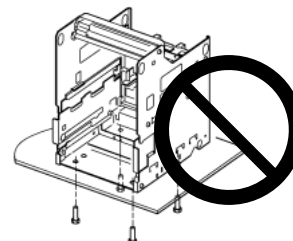


Fig. 7-2

In the case of AE4000 ~ 6300-SW, insert four M12 bolts from the bottom and two M12 bolts from the back to mount the cradle as shown in Fig. 7-3. In the case of 4P FN type, insert six M12 bolts from the bottom and two M12 bolts from the back to mount the cradle as shown in Fig. 7-4.

AE4000 ~ 6300-SW 3P & 4P (HN)

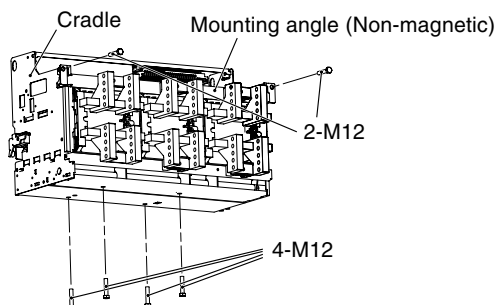


Fig. 7-3

AE4000 ~ 6300-SW 4P (FN)

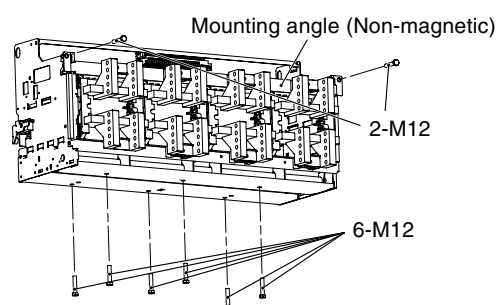


Fig. 7-4

Operate the drawout operation (CONNECT position to DRAWOUT position) according to instructions of drawout operation. (Refer to P.13 and 14.)

Lifting by lifting truck or lifting hooks


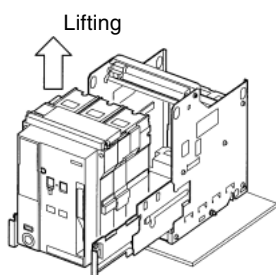


Fig. 7-5

! CAUTION

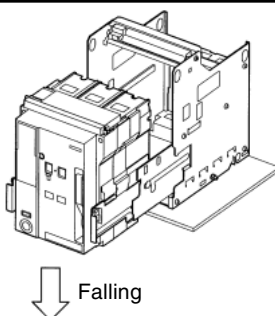

When the main body is drawn out, the center of gravity shifts to the front. If the cradle is not secured, take measures against overturning and dropping.

Fig. 7-6

! CAUTION



On AE4000-SWA, AE4000-SW ~ AE6300-SW, the center of gravity of the cradle is located at the terminal position. When the main body is removed from the cradle, the cradle may turn over backward. Take measures against overturning.

Fig. 7-7

## < Fixed type >

M12

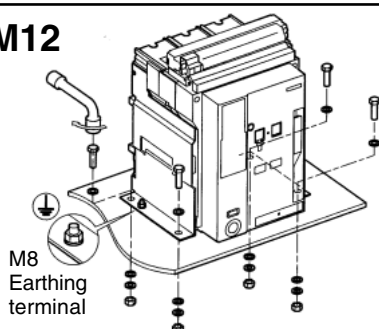


Fig. 7-8

## Mount of drawout handle

The drawout handle can be mounted on any of the left and right sides of the cradle.

### • Mounting on the left side

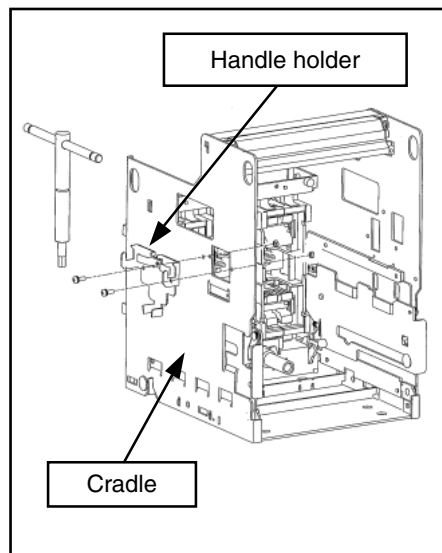


Fig. 8-1

### • Mounting on the right side


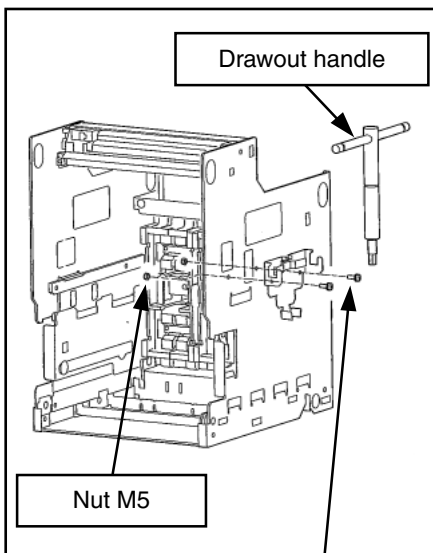


Fig. 8-2

Mtg. Screw M5 × 12  
2.8 ~ 3.6 N·m

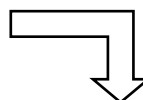

Note: The drawout handle cannot be mounted on the left side of the cradle when the cradle is provided with a mechanical inter lock (MI) or a door inter lock (DI). Mount the handle at an appropriate position in the panel.

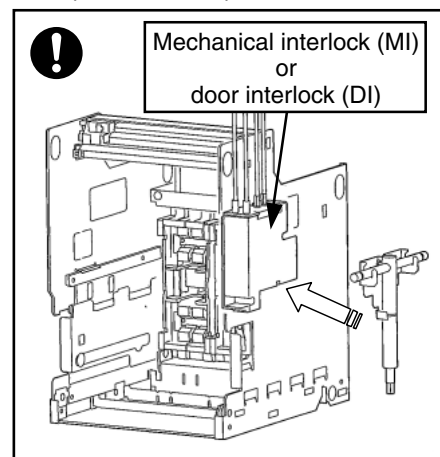


Fig. 8-3

## Attach the Inter-phase Barrier

Insert in the slot on the breaker.

### <Fixed type>

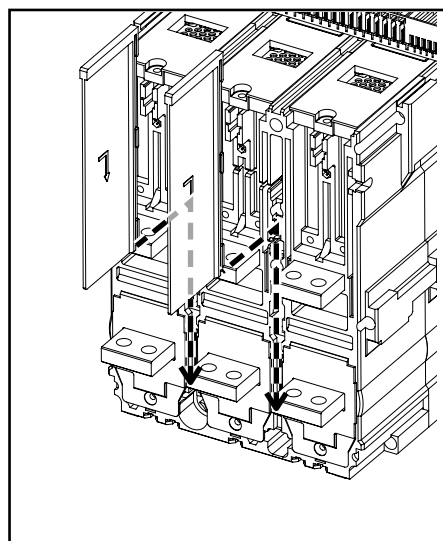


Fig. 8-4

### <Drawout type>

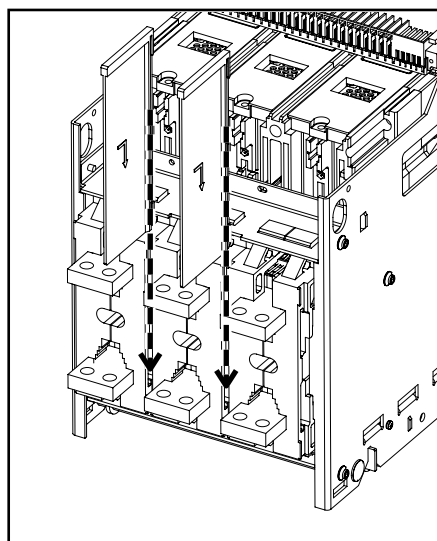


Fig. 8-5



## Connection

### ■ Main circuit

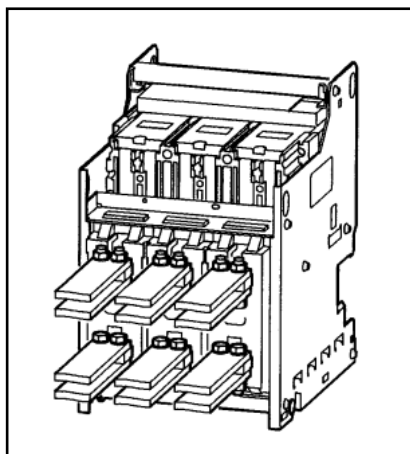


Fig. 9-1

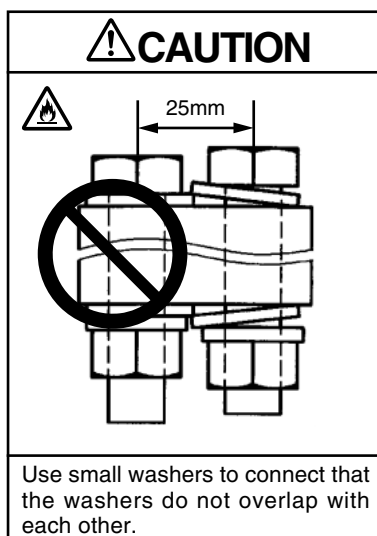


Fig. 9-2

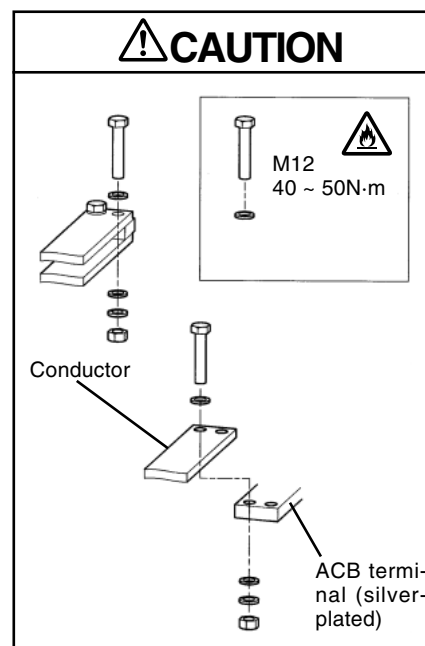


Fig. 9-3

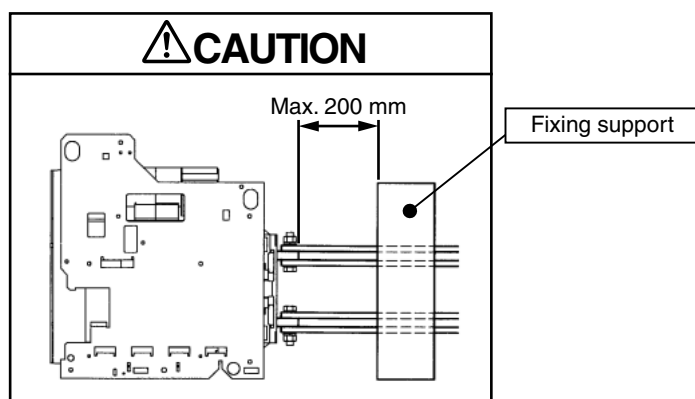


Fig. 9-4

### ■ Control circuit

#### ● Crimp-type terminal size

Recommended crimp-type terminals

Ex. 1.25 mm<sup>2</sup> ~ 2.0 mm<sup>2</sup> wires

N2-M3(RAP2-3.5) (JST)

FN2-M3(RBP2-3.5) (JST)

N2-YS3A(JST)

**!** If the screw is tightened with excessive torque, the terminal and the screw may be damaged. Tighten the screw to the specified torque.  
Screwdrivers should be used whose diameters are of size suited to the diameters of the cruciform grooves.  
Size of toolhead : PH2

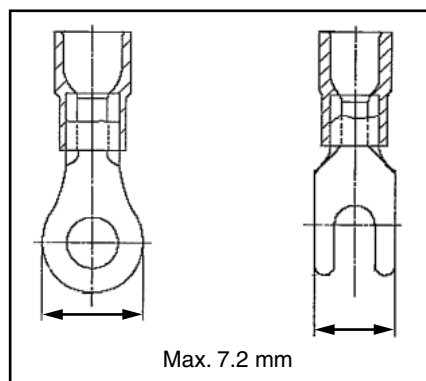


Fig. 9-5

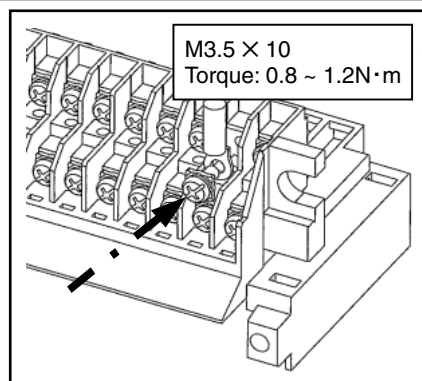


Fig. 9-6

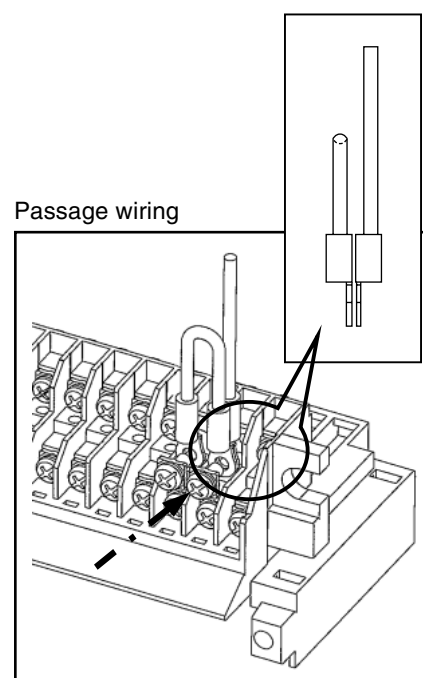


Fig. 9-7

Table 10-1 Electromagnetic force in N per 1 m conductor (3-phase short circulation)

(N)

Type Conductor distance (mm) Prospective fault current kA (pf)	AE630-SW ~ AE1600-SW	AE2000-SWA		AE2000-SW ~ AE3200-SW	AE4000-SWA				AE4000-SW ~ AE6300-SW
	85	3P		130	Drawout type		Fixed type		262
		115	105		3P	4P	3P	4P	
30 (0.2)	7,700	5,700	6,300	5,100	3,500	3,900	4,300	4,500	2,500
42 (0.2)	15,100	11,200	12,200	9,900	6,800	7,600	8,500	8,900	5,000
50 (0.2)	21,400	15,800	17,300	14,000	9,600	10,700	12,000	12,600	7,000
65 (0.2)	36,100	26,700	29,300	23,600	16,200	18,100	20,200	21,200	11,800
75 (0.2)	—	—	—	31,500	21,500	24,100	26,900	28,200	15,800
85 (0.2)	—	—	—	40,400	27,600	30,900	34,500	36,200	20,000
100 (0.2)	—	—	—	—	—	—	—	—	27,800
130 (0.2)	—	—	—	—	—	—	—	—	47,000

Table 10-2

<div> <div>!</div> <b>Conductor size (IEC60947-1)</b>  (40°C ambient temperature, open air) </div>				
Rated current max. (A)	Arrangement	Connecting conductors (Copper bus bar)		
		Quantity	Conductor size (mm)	
630	Vertical	2	40 × 5	
1000	Vertical	2	60 × 5	
1250	Vertical	2	80 × 5	
1600	Vertical	2	100 × 5	
2000	Vertical	3		
2500	Vertical	4		
3200	Vertical	3		
4000 (AE4000-SWA) Fixed type	Vertical	3	150 × 10	
4000 (AE4000-SWA) Drawout type	Vertical	4		
4000 (AE4000-SW)	Vertical	4	100 × 10	
5000	Vertical	4	150 × 10	
6300	Vertical	4	200 × 10	

Note: Table 10-2 shows conductor size based on IEC 60947-1 in ambient temperature 40°C and open air. And the examination circuit is as Fig. 10-1

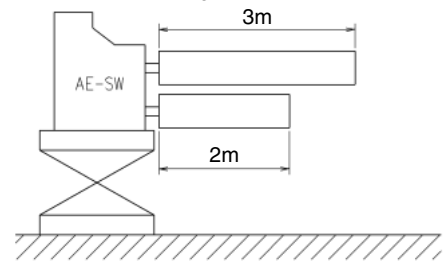


Fig. 10-1

# Insert operation

## DISCONNECT → CONNECT position

- ① Release the lock levers, and pull the extension rails forward.

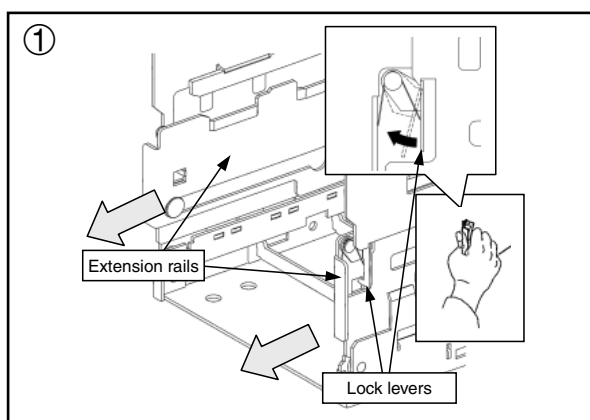


Fig. 11-1

- ② Place the breaker on the extension rails, using a lifter or ropes. Mount the concave of the breaker in the rail protruding portion. (Fig. 11-5)

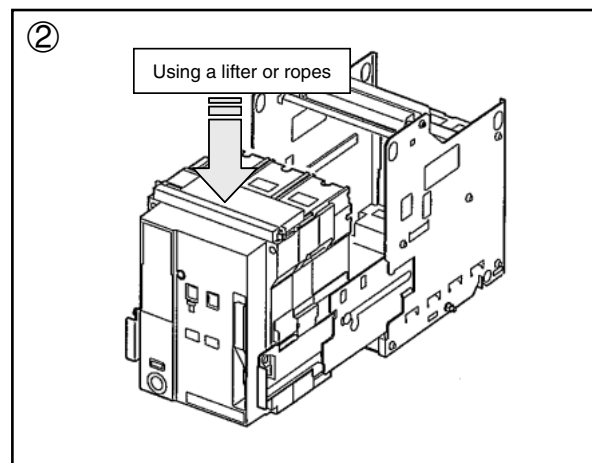


Fig. 11-2

- ③ Slowly push the breaker in unit it does not move. To insert the breaker, push each side equally. Otherwise (in the case of inserting slantwise) the breaker can not move smoothly. When ACB is installed at a high position, please do the Drawout / Insert operation by two people.

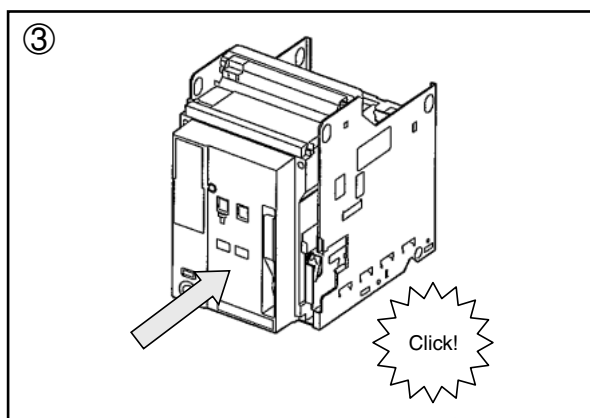


Fig. 11-3

- ④ Keeping the OFF button pushed, insert the drawout handle. Make sure that the drawout position indicator shows "DISCONNECT" (Fig. 11-7).


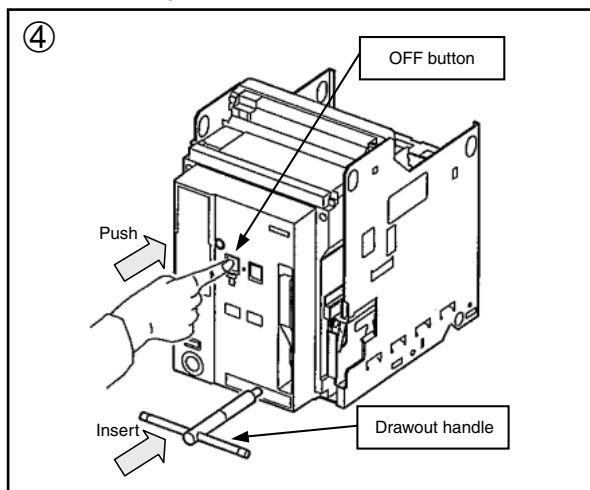


Fig. 11-6

## CAUTION

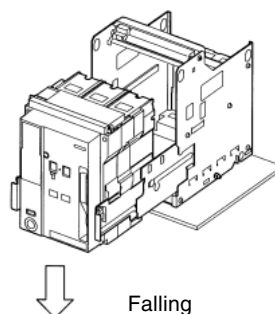

If the breaker main body is put on the rails with the cradle unsecured, the center of gravity shifts to the front. Take measures against overturning.

Fig. 11-4



Concave of the breaker

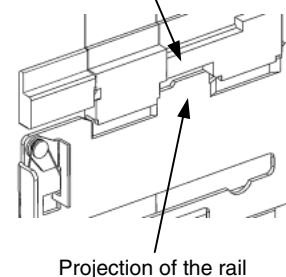


Fig. 11-5

## CAUTION



Shut finger

Take care not to shut finger between extension rails and switch board when the breaker is insert.

DISCONNECT position

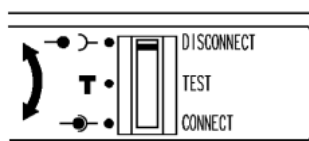


Fig. 11-7



(Prohibition)

Do not insert the drawout handle unless the OFF button is pushed. There is a possibility of damaging.

- ⑤ Push the lock plate in fully until it is latched to release the lock.



**(Note:)**

- (a) If the lock plate is not fully released, turn the drawout handle to right and left a little.
- (b) Be sure to push the lock plate in fully to release position, otherwise the drawout position indicator may not function collectoly.

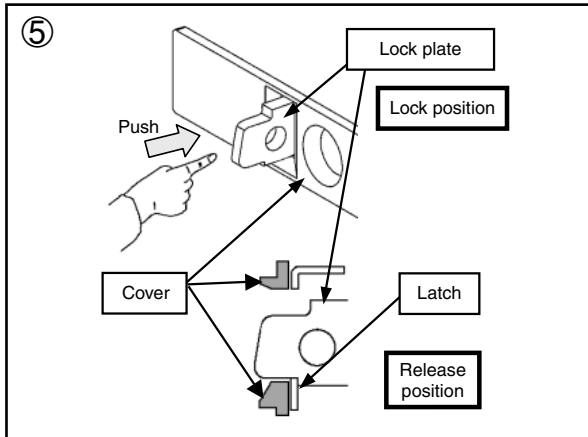


Fig. 12-1

- ⑦ When the breaker is inserted to the test position, the drawout position indicator shows TEST position, and the lock plate automatically protrudes to lock the drawout handle.

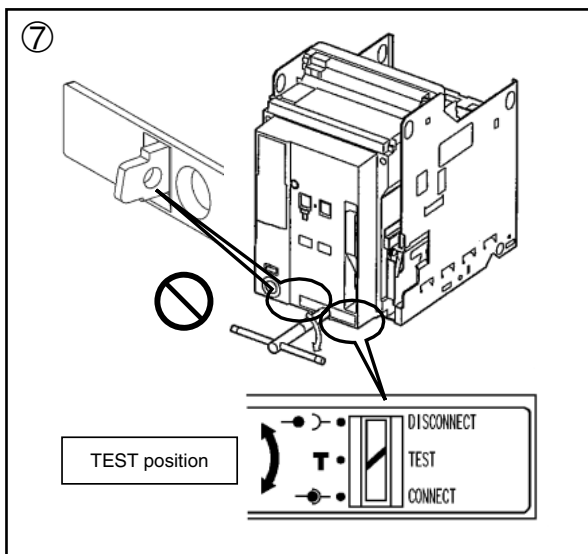


Fig. 12-3

- ⑨ For the AE4000 ~ 6300-SW series (See Fig. 12-5), shall be sure to tighten the screws on both sides to secure the breaker.

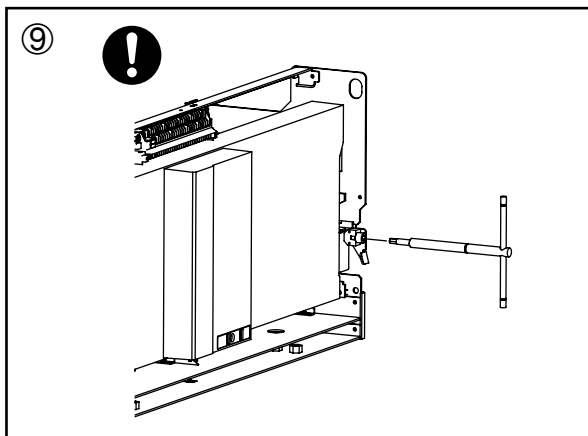


Fig. 12-5

- ⑥ After releasing the lock plate, turn the drawout handle clockwise. Operating torque is less than 30 N·m.



**(Note:)**

- (a) Do not try to pull the unit out while inserting it as doing so may not accurately display the position. If the unit is pulled out in the middle of the inserting process, pull it out to the circuit disconnecting position and then insert it again.

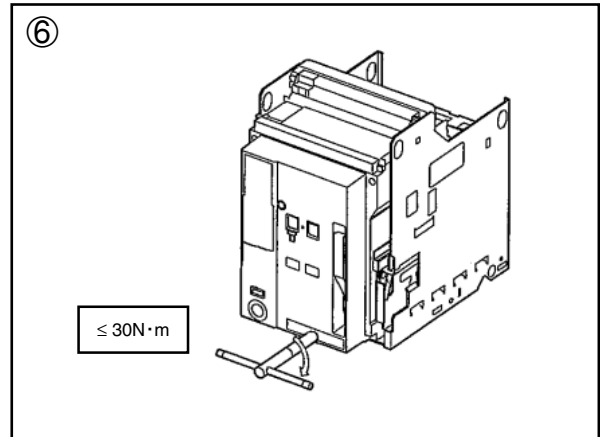


Fig. 12-2

- ⑧ Then, push the lock plate to turn the handle clockwise. When the breaker is inserted to the connect position, the lock plate automatically protrudes to indicate that the breaker has been inserted completely. The drawout position indicator shows CONNECT position.

**⚠ CAUTION**

Insert the breaker until the lock plate protrudes. If it does not protruding, the breaker may not be connected completely.



**(Note:)**

- (a) After insertion is completed, do not turn the drawout handle further.
- (b) The drawout position indicator shows the position (CONNECT or TEST) of the breaker at the time when the lock plate protrudes. When the lock plate is in the released state, the indicator shows the reference position.
- (c) It is impossible to close the breaker when inserting the drawout handle.

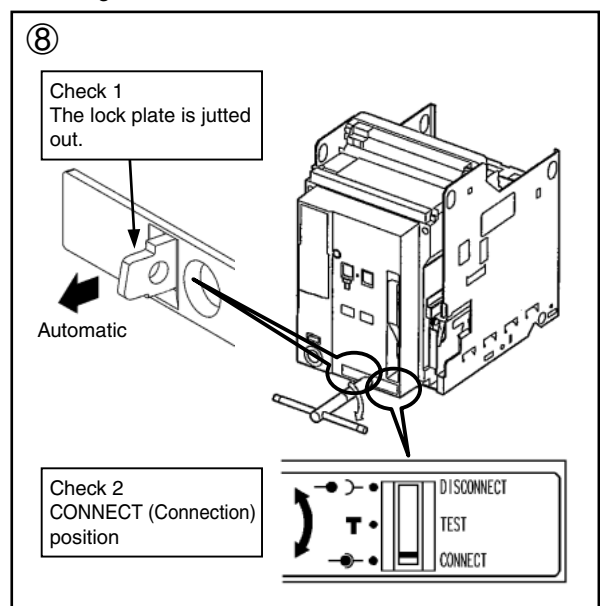


Fig. 12-4

# Drawout operation

## CONNECT → DISCONNECT position

- ① Remove two fixing bolts (M12) for the types AE4000 ~ 6300-SW. (See Fig. 13-1)

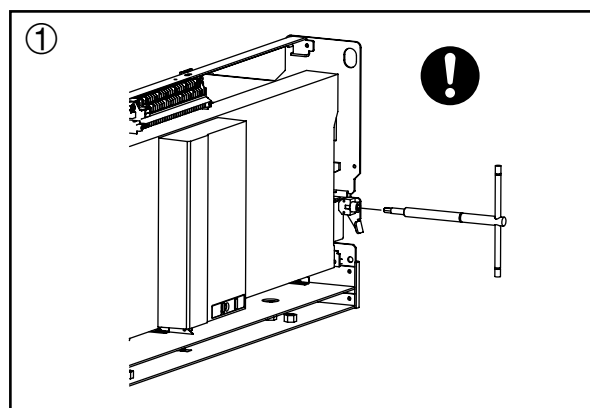


Fig. 13-1

- ② Keeping the OFF button pushed, insert the drawout handle.

CONNECT position

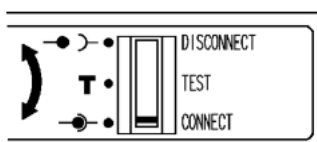


Fig. 13-2



### (Prohibition)

Do not insert the drawout handle unless the OFF button is pushed.

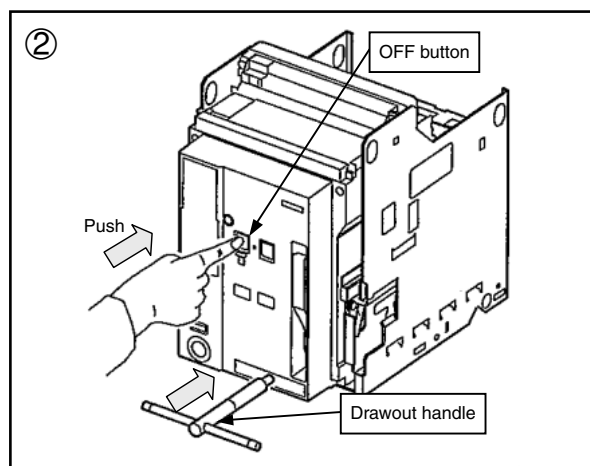


Fig. 13-3

- ③ Push the lock plate in fully until it is latched to release the lock.



### (Note:)

- (a) If the lock plate is not fully released, turn the drawout handle to right and left a little.
- (b) Be sure to push the lock plate in fully to the release position, otherwise the drawout position indicator may not function correctly.

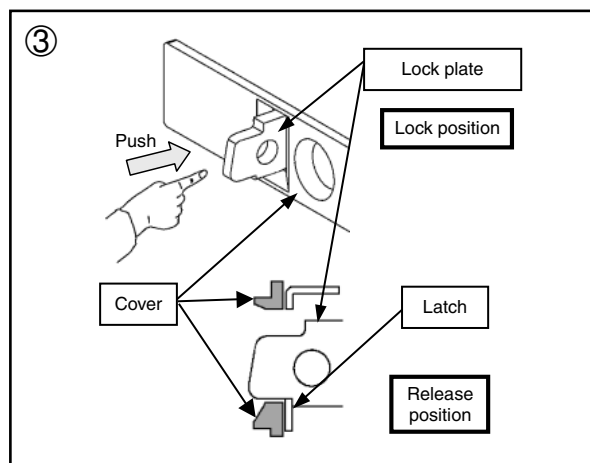


Fig. 13-4

- ④ After releasing the lock plate, turn the drawout handle counterclockwise. Operating torque is less than 30 N·m.



### (Note:)

- (a) In the middle of drawout operation, do not turn the drawout handle insert operation. The drawout position indicator may not function correctly. In this case, pull the unit out to the circuit disconnecting position and insert it to the circuit connecting position. Then drawout it again.

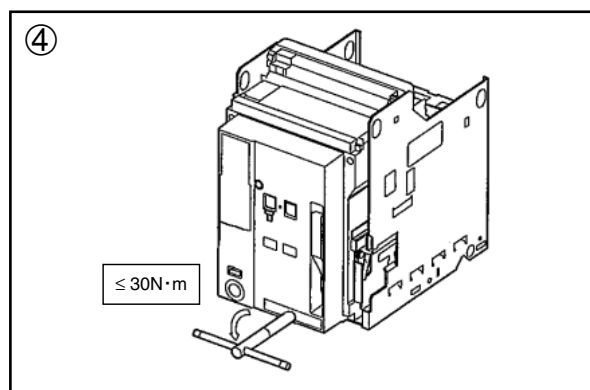


Fig. 13-5

- ⑤ When the breaker is drawn out to the test position, the drawout position indicator shows TEST position, and the lock plate automatically protrudes to lock the drawout handle.

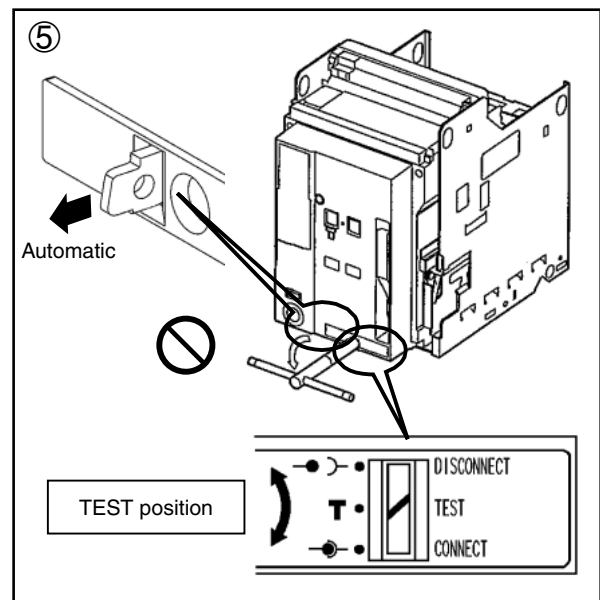


Fig. 14-1

- ⑥ Then, push in the lock plate, turn the drawout handle counterclockwise to change the displayed extraction position to the DISCONNECT position until the drawout position indicator shows disconnect position. The handle operation is completed. The breaker can be drawn out by hand.



**(Note:)**

- (a) The lock plate may project before the breaker moves to the DISCONNECT position. Push the lock plate in and continue to operate the handle.
- (b) If the lock plate is not fully released, turn the drawout handle to right and left a little.
- (c) When the breaker is drawn out to the DISCONNECT position, the drawout handle is idly rotated and the lock plate does not protrude.


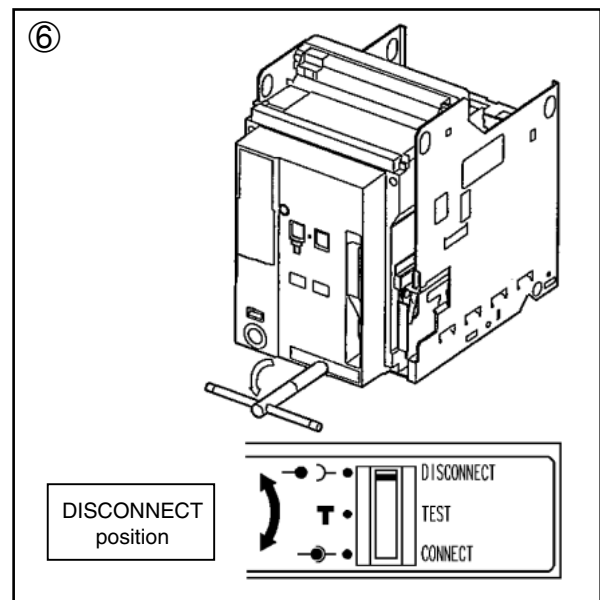


Fig. 14-2

- ⑦ To remove the breaker main body from the cradle, pull the lock levers toward you to unlock the main body, pull the rails toward you, and draw out the breaker.

**⚠ CAUTION**

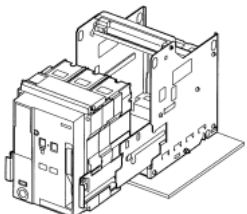


Falling

When the main body is drawn out, the center of gravity shifts to the front. If the cradle is not secured, take measures against overturning and falling.

Fig. 14-3

**⚠ CAUTION**



Shut finger

Take care not to shut finger between extension rails and switch board when the breaker is drawn out.

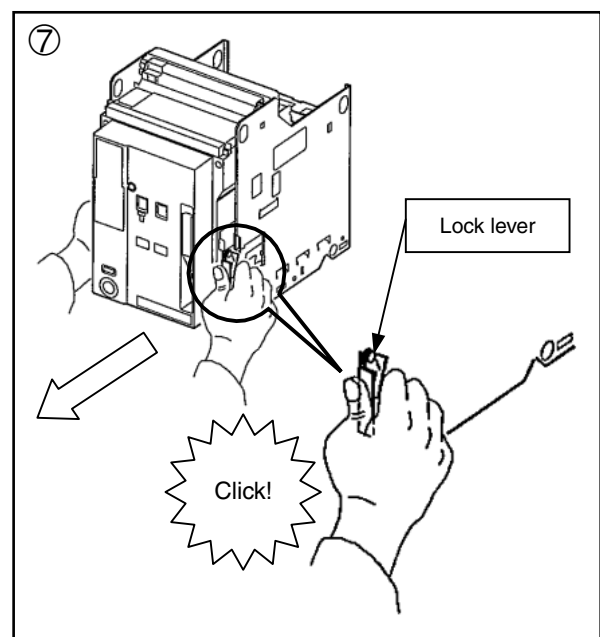


Fig. 14-4

- ⑧ To drawout the breaker, pull each side equally. Otherwise (in the case of drawing slantwise) the breaker can not move smoothly. When ACB is installed at a high position, please do the Drawout / Insert operation by two people.



**(Note:)**

Since the center of gravity is by the terminal, the Cradle support is required to prevent from falling. (See Fig. 15-1)


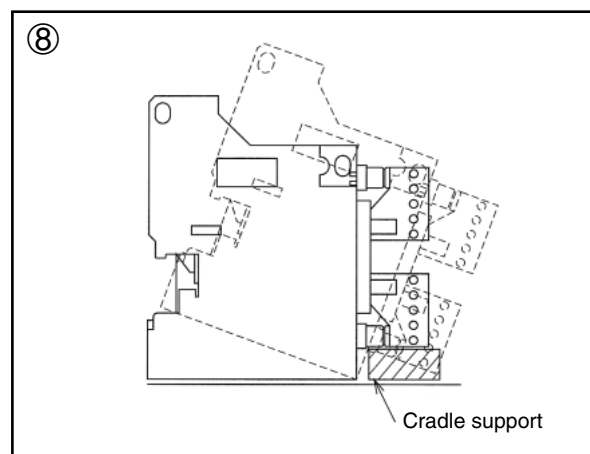


Fig. 15-1

## Charging operation

### < Manual charging >

Press the charging handle down at full stroke 7 or 8 times until a click sounds. (It is completion when a charging handle becomes light.) Then, the closing spring will be fully charged. The charging indicator will show CHARGED. The operating load is 30 N·m or less.

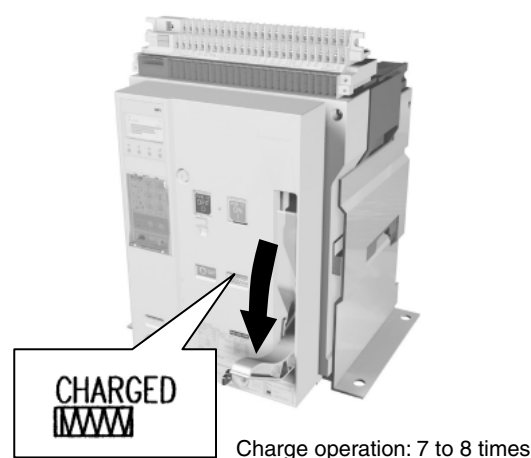

Charge operation: 7 to 8 times

Fig. 15-2

### < Motor charging >

The closing spring is electrically charged. This is an "ON charge method", in which the spring is automatically charged when the breaker is closed.

- Manual charging operation is also possible using the charging handle.
- Although the charging motor has a short time rating it can be continuously operated for up to ten times.
- Since the charging complete switch is separate from the motor charging circuit, the sequence can be arranged as required.

Table 15-1 Motor charging rating

Rated voltage (V)	Applicable voltage range (V)	Applied voltage (V)	Inrush current (peak) (A)	Steady current (A)	Charging time	Criterion for power requirement (VA)
24 DC	18-26.4	24	22	6	5 sec or less	500
48 DC	36-52.8	48	14	3		700
100-125 AC/DC	85-137.5	100	10 (10)	3 (4)		1000
		125	12 (12)	3 (4)		700
200-250 AC/DC		200	5 (7)	1 (2)		1000
	170-275	250	6 (8)	1 (2)		

Note 1: Contents in parentheses show the case of AE4000-SWA 4-pole, AE4000-SW, AE5000-SW and AE6300-SW. 24 V DC and 48 V DC products of AE4000-SWA 4-pole, AE4000-SW, AE5000-SW and AE6300-SW cannot be manufactured.

Note 2: Operating power supply capacity of the motor charging should be prepared not to be lower than an applicable voltage range during charging.

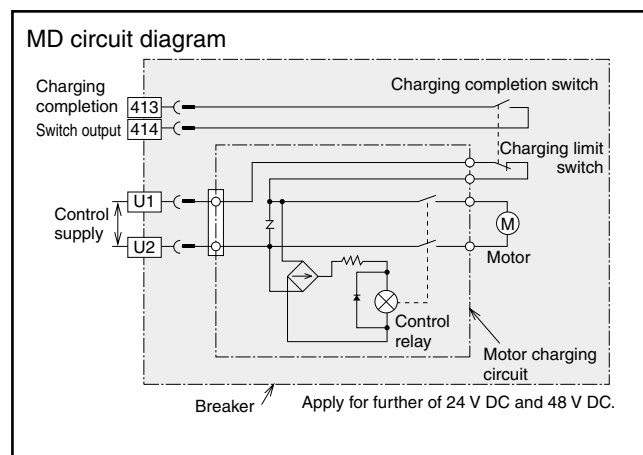


Fig. 15-3

## Opening/Closing operation

### < Conditions of ON operation >

ON operation will be possible, when all the following conditions have fulfilled.

- The breaker is OFF condition.
- The closing spring is charged.  
The charging indicator shows "CHARGED".
- The state without OFF operations.
  - Without SHT operation
  - Without mechanical lock (Padlock, Cylinder lock, Mechanical interlock etc.)
  - UVT controller power is supplied and no operation with trip terminals.

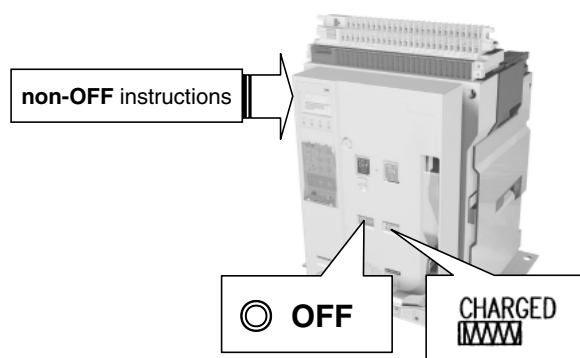


Fig. 16-1

### Manual operation

#### < Closing >

Push the ON button, the breaker will close. The ON/OFF indicator will show "ON", and the charging indicator will show "DISCHARGED". Operating force is less than 50N.



#### (Note:)

When the OFF lock device (Padlock, cylinder lock, castell lock etc.) is used, the closing operation should be made after the lock is released.

Opening and closing of the drawout type breaker must be carried out in either the CONNECT or the TEST position.

If an under voltage trip device (UVT) is provided, its rated voltage should be applied before attempting to close and open the breaker.

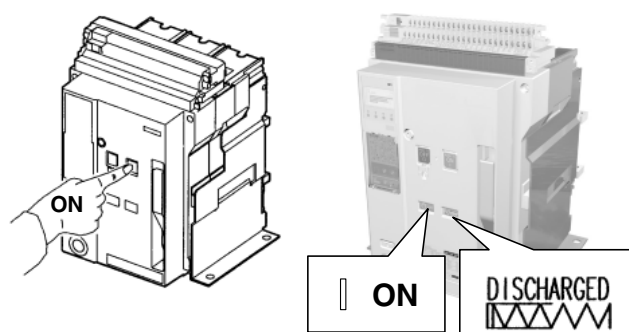


Fig. 16-2

#### < Opening >

Push the OFF button, the breaker will be opened and the ON/OFF indicator will show "OFF". Operating force is less than 50N.

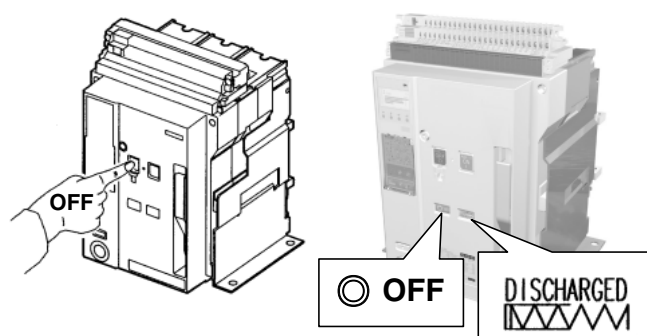


Fig. 16-3



## Electrical operation

### < Closing >

Remote closing can be made by energizing the closing coil (CC). Apply the rated voltage to the control terminals **A1**, **A2**, and the breaker closes.

The unit comprises an anti-pumping circuit which allows only one action without first de-energizing then re-energizing.

To re-close the breaker, once turn off power (between **A1** and **A2**) to the closing coil, and re-apply the rated voltage to them. When the breaker has an under-voltage trip device (UVT), the breaker cannot be closed if power is not applied. (After power is applied to the UVT, it takes a waiting time of 1.5 sec until the breaker can be closed.)

### < Opening >


The use of a shunt trip device (SHT) or an under-voltage trip device (UVT) enables to electrically trip the breaker.

When an SHT is used, apply the rated voltage to **C1** and **C2** on the control circuit terminal block.

When a UVT is used, open the trip terminals **DT1** and **DT2** on the control circuit terminal block. (A short-circuiting bar has been fitted before shipment. Remove the bar before using the terminals.)

Or turn off an applied voltage to **D1** and **D2**.


### Control supply

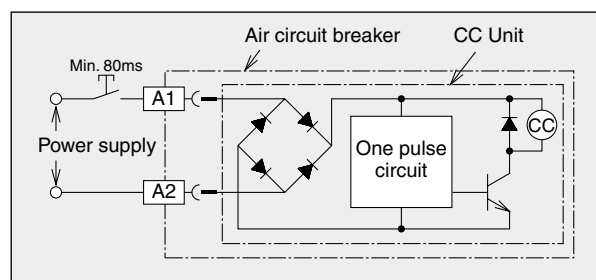

Note: 24 to 48 V DC does not have rectifier circuit.

Fig. 17-1


### SHT circuit diagram

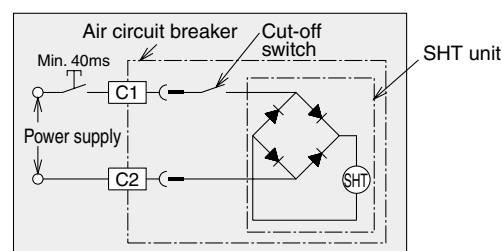

Note: 24 to 48 V DC does not have rectifier circuit.

Fig. 17-2


### UVT circuit diagram (for 100-120 V AC, 200-240 V AC or DC voltage)

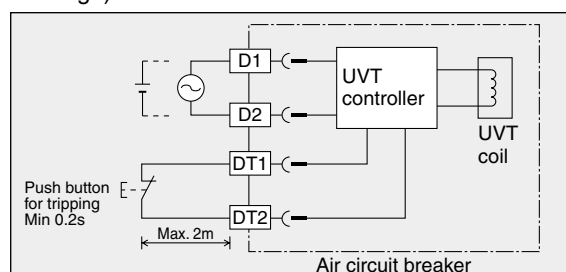

Note: Use a pushbutton for tripping having power ratings of 150 V DC and 0.5 A or more.

Fig. 17-3

### UVT circuit diagram (for 380-460 V AC)

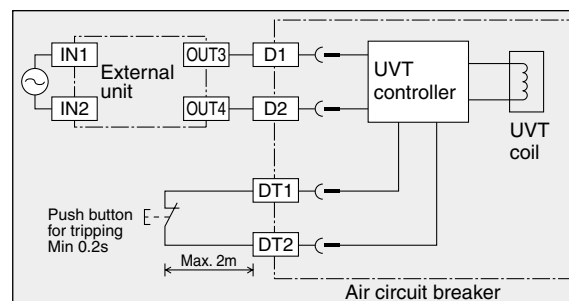

Note: Use a pushbutton for tripping having power ratings of 150 V DC and 0.5 A or more. The external transformer dedicated for AE-SW is used. Only one UVT controller can be connected to one external unit.

Fig. 17-4

## Door interlock (DI)

### < Procedures for releasing door interlock >

- ① Even when the breaker is on, the interlock can be manually released.  
For this purpose, make a hole 7 or more in diameter in the panel door. (See the following figure.)

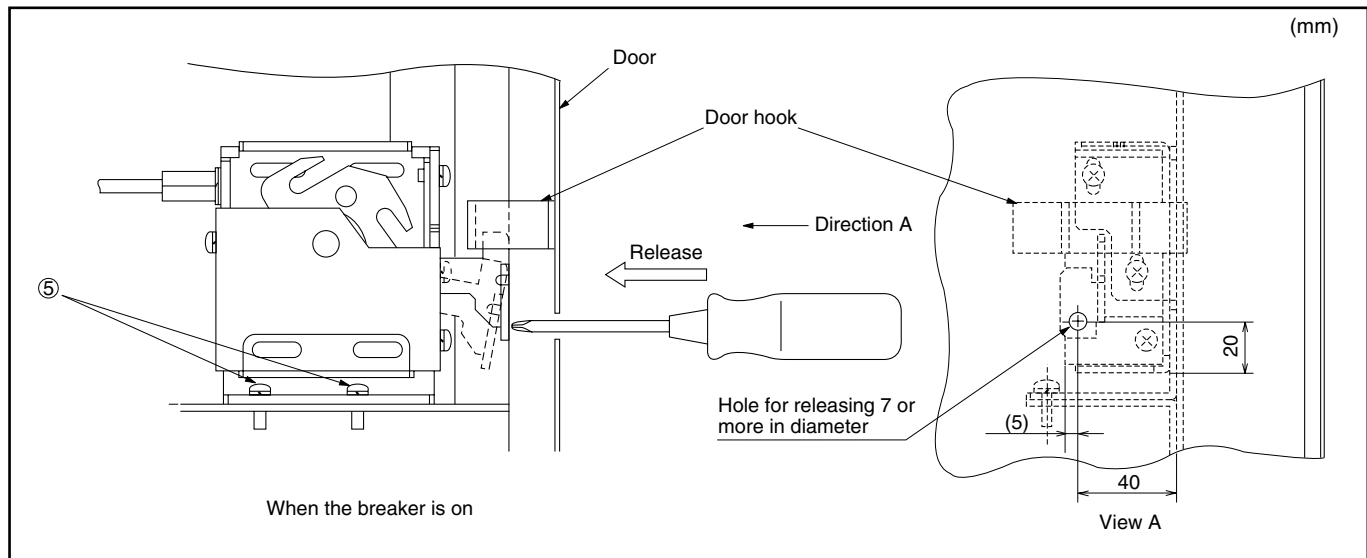


Fig. 18-1

## Cylinder lock (CYL) and Castell Lock (CAL)

### < Procedures for locking in off state >

- ① Press the OFF button to turn off the ACB.
- ② Hold down the OFF button and turn the key to the locking side. Then, the key can be removed, and the breaker will be locked in the off state.

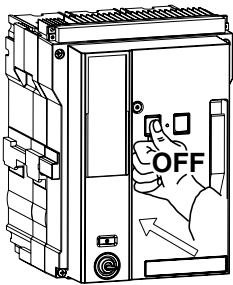


Fig. 18-2

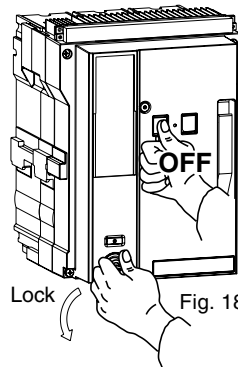


Fig. 18-3

### < Releasing procedures >

- ① Insert the key, and turn the key to the releasing side.  
If the key cannot be turned smoothly, hold down the OFF button and turn the key to the releasing side.

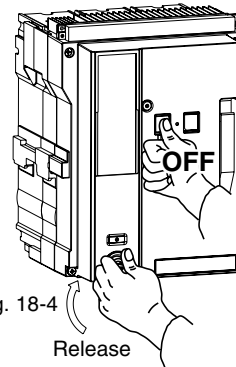


Fig. 18-4

## Shutter lock (SST-LOCK)

The safety shutter can be locked at the closing position so that the live parts are not touched.  
Prepare a pad lock (5 in diameter) by yourself.

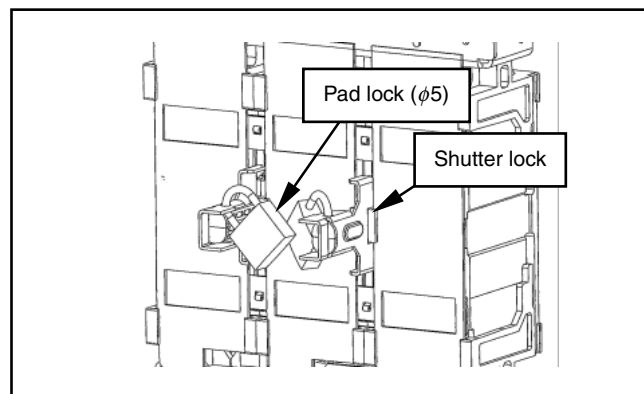


Fig. 19-1

## Safety shutter name plate

Please refer to a lower figure, if you need to attach the sticker "BUSBARS" and "CABLES" included in the package of the safety shutter.

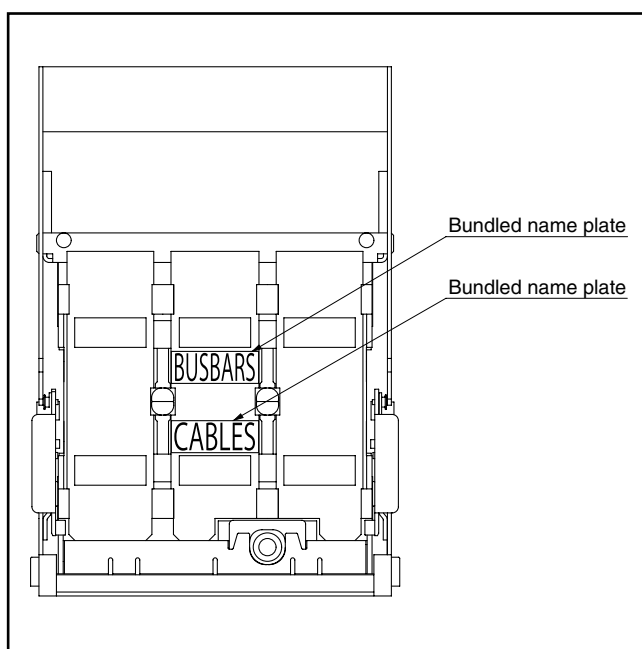


Fig. 19-2

## Functions of electronic trip relay (ETR) parts

### < Functions >

#### ① ERR. LED, Contact alarm output

When any abnormality or setting failure is found in ETR, the LED alerts the operators to the abnormal status. When the power type is P3 to P5, contact output is given between [513] and [574] on the control circuit terminal block.

- ETR function (Microprocessor, H/W)
- Mis-setting of INST. /MCR dial (P.27)
- Internal wiring of breaker related to ETR

#### ② RUN LED (ETR)

This LED indicates that ETR is functional. When control power is applied or approx. 10% of current flows into the main circuit, the internal circuit will start, and the LED will light.

#### ③ RUN LED (Optional setting module)

This LED indicates that the optional setting module is functional.

When the control power is applied or approx. 10% of the main circuit current flows, the LED will light.

#### ④ Trip indicator (LED and contact alarm output)

The LED indicates the tripping or pre-alarm status. When the power supply type is P3 to P5, contact output is given between [513] (common) and [524], [534], [544] and [554] on the control circuit terminal block.

When the current exceeds pre-alarm current setting ( $I_p$ ), the PAL LED will blink. When the LTD time (1/2 of TL) is passed, the PAL LED will light and output the contact.

#### ⑤ TAL LED and contact output [Option]

The ETR temperature detector is made functional by fitting a TAL sensor.

When the power type is P3 to P5, output is given between [513] and [564] on the control circuit terminal block. When the temperature drops, the output will be reset. To retain the output, take measures with an external sequence.

#### ⑥ MCR (Making current release) [Option]

Only when the breaker is turned on (from the off state), it has the INST function. After it is turned on, the INST function will be disabled. If you specify the use of MCR when placing an order, the MCR switch will be incorporated in the main body. MCR will be functional by setting the INST setting dial of ETR to the MCR side. (Refer to Fig. 20-2)

#### ⑦ Reset button

The trip indicator (LED and contact alarm output) can be reset by pressing the "RESET" button on the front panel of ETR or short-circuiting [RS1] and [RS2] on the control circuit terminal block.

(P1 and P2 types are not provided with the function to reset the indication from the control circuit terminal block.) A function is provided to temporarily lock LTD and STD when the INST function is tested with the field test device. (See the breaker tester instruction manual.)

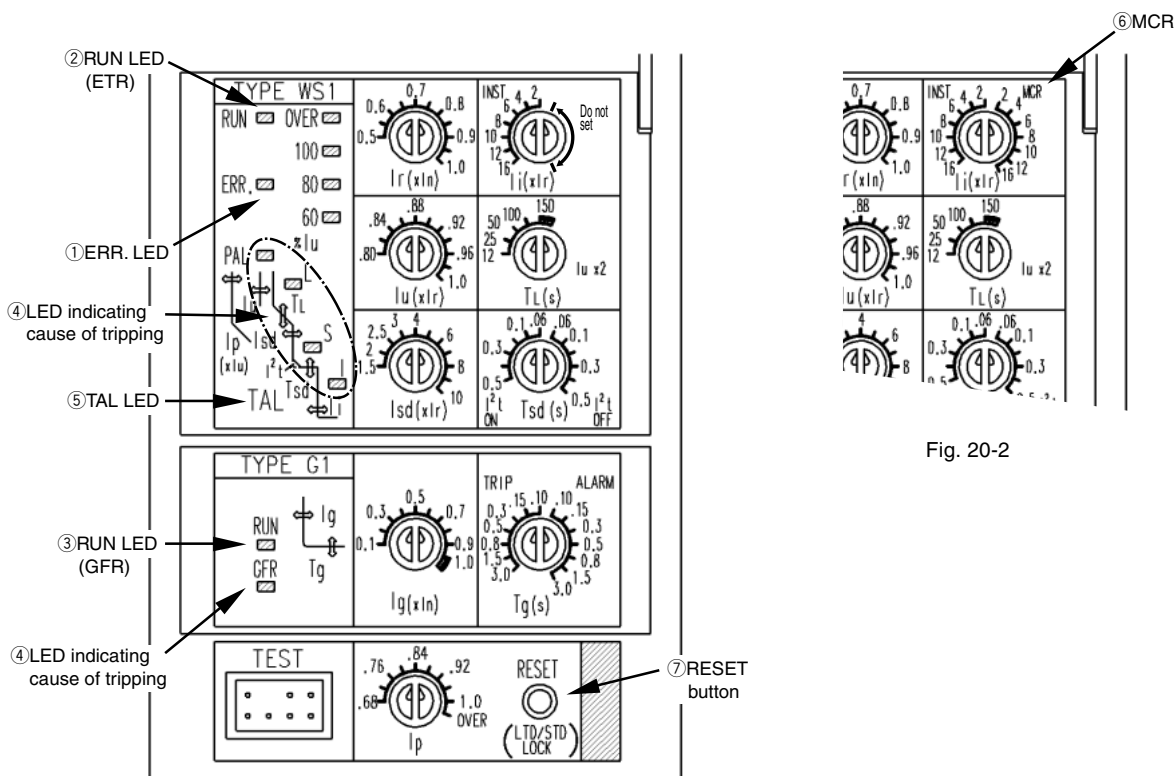


Fig. 20-2

Fig. 20-1

As for the display and interface unit, see the separate instruction manual.

### < Load current LED >

The current value which is used as the reference of the load current indication LED, varies depending on the ETR types and characteristics setting.

Table 21-1


Usage	ETR type	Base current of LED indication	Load current LED indication
General use	WS (WS1) (WS2) (WS3)	I <sub>u</sub> Uninterrupted current	OVER ■
			100 ■
			80 ■
			60 ■ %I <sub>u</sub>
Generator protection use	WM (WM1) (WM2) (WM3)	I <sub>L</sub> LTD pick-up current	100 ■
			80 ■
			60 ■
			40 ■ %I <sub>L</sub>
Special purpose use	WB (WB1) (WB2) (WB3)	I <sub>r</sub> Rated current	OVER ■
			100 ■
			80 ■
			60 ■ %I <sub>r</sub>

Note: When the "OVER" of WS type and the "100%" of LED are lighting, the current value is over LTD pick-up current.

The breaker carries out trip operation after specified time.

### < Pre-alarm function >

When the current exceeds pre-alarm current setting (I<sub>p</sub>), the PAL LED will blink. When the LTD time (1/2 of T<sub>L</sub>) is passed, the PAL LED will light and output the contact.

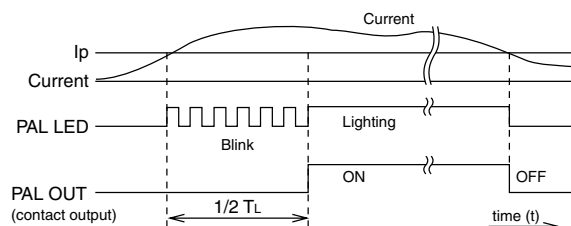

### < Power supply >

Power supply is required for the trip indicator (LED, alarm contact output), the measurement extension module, the display (LCD), etc. Over-current tripping, function when there is no control power supply, it operates with the energy of internal CT.

Table 21-2 Ratings of the power supply and output contacts

Type code	Rated voltage	Criterion for power requirement	Alarm output contacts
P1	100-240V AC-DC	15VA	-
P2	24-60V DC	10VA	-
P3	100-240V AC 100-125V DC	15VA	6-contacts
P4	24-60V DC	10VA	6-contacts
P5	100-240V DC	15VA	6-contacts (SSR)

Table 21-3 Alarm contact capacity (Type code P3 and P4)

	Voltage (V)		Resistive load cos $\phi=1.0$	Inductive load cos $\phi=0.4$ L/R=0.7
	240	120	1A	0.5A
AC	120		1A	1A
	125		0.1A	0.05A
DC	30		1A	1A

Table 21-5 Resetting of the output contact

① LTD	② STD/INST	③ G1/E1/AP	④ PAL	⑤ TAL	⑥ ERR.
Self-holding	Self-holding	Refer to under table	Automatic reset	Automatic reset	Automatic reset

ETR dial set	G1	E1	AP
TRIP side	Self-holding	Self-holding	—
ALARM side	Automatic reset	Automatic reset	Automatic reset

Self-holding :

The output is maintained until it resets.

Automatic reset :

The output will be reset if it back to normal condition.


Table 21-4 Current capacity (Type code P5)

	Voltage (V)		Current	Peak current	max. ON resistance
	240	120	0.1A	0.3A	5Ω
AC	120		0.1A	0.3A	5Ω
	240		0.1A	0.3A	5Ω
DC	30		0.1A	0.3A	5Ω

## ⚠ CAUTION

In case of power type P3 or P4, the alarm contact output relay is high sensitive relay. Therefore may occur a chattering noise (approximately 1 ms) by ON/OFF operation of the breaker. Please adopt a time constant filter of several ms, or sampling double reading, or the like.

## Characteristics setting of type WS relay

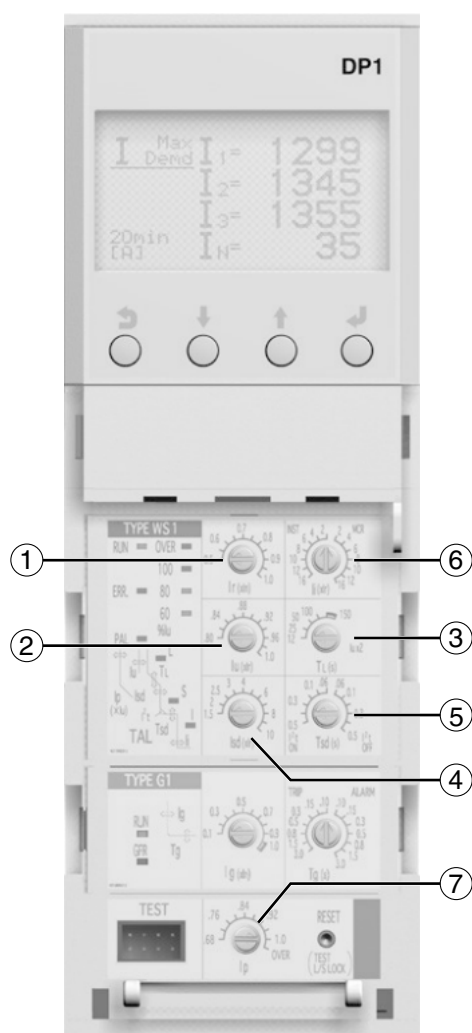

Note: The figure includes the optional G1 setting module, display and MCR.


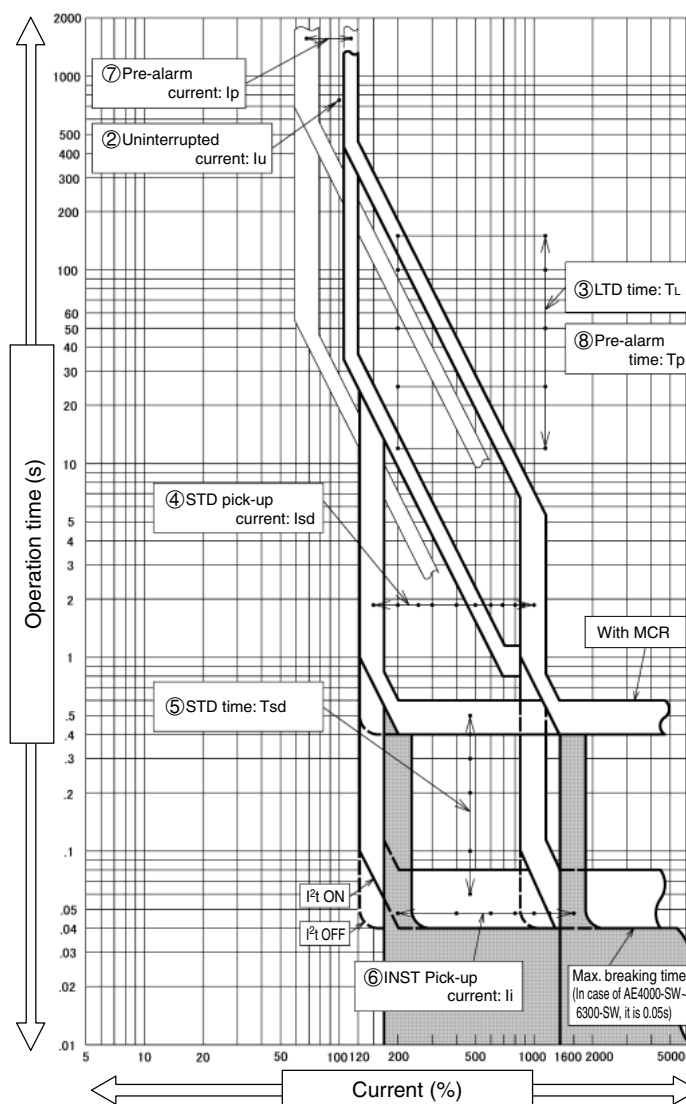


Table 22

No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
①	Current setting	I <sub>r</sub>	0.5 ~ 1.0 (0.05step) × I <sub>n</sub> (CT rating)	—	1.0
②	Uninterrupted current	I <sub>u</sub>	0.8 ~ 1.0 × I <sub>r</sub> (0.02step), Pick-up current : 1.15 × I <sub>u</sub>	1.05 × I <sub>u</sub> ...Non pick-up 1.25 × I <sub>u</sub> ...Pick-up	1.0
③	LTD time	T <sub>L</sub>	12-25-50-100-150s at I <sub>u</sub> × 2	±20%	150
④	STD pick-up current	I <sub>sd</sub>	1.5-2-2.5-3-4-5-6-7-8-9-10 × I <sub>r</sub>	±15%	10
⑤	STD time	T <sub>sd</sub>	0.5-0.4-0.3-0.2-0.1-0.06-0.06-0.1-0.2-0.3-0.4-0.5s (I <sup>2</sup> t ON) (I <sup>2</sup> t OFF) at I <sub>sd</sub> × 1.5	±20% It operates in the range between 0.04 and 0.08s when the time set at 0.06s.	0.5 (I <sup>2</sup> t ON)
⑥	INST/MCR pick-up current	I <sub>i</sub>	<div>AE630-SW~AE1600-SW 16-12-10-8-6-4-2-2-4-6-8-10-12-16 × I<sub>r</sub></div> <div>AE2000-SW~AE3200-SW, AE4000-SW (INST) (MCR) WS1</div> <div>AE2000-SWA, AE4000-SWA 12-10-8-6-4-2-2-4-6-8-10-12 × I<sub>r</sub></div> <div>AE5000-SW (INST) (MCR) WS2</div> <div>AE6300-SW 10-8-6-4-2-2-4-6-8-10 × I<sub>r</sub></div> <div>(INST) (MCR) WS3</div>	±15%	<div>WS1...16 (INST)</div> <div>WS2...12 (INST)</div> <div>WS3...10 (INST)</div>
⑦	Pre-alarm current	I <sub>p</sub>	I <sub>u</sub> × 0.68 ~ 1.0 (0.04step)-OVER	±10%	OVER
⑧	Pre-alarm time	T <sub>p</sub>	1/2 T <sub>L</sub> at I <sub>u</sub> × 2 (after 1/2T <sub>L</sub> , PAL contact output turns on.)	±20%	—

The table shows data obtained on the breakers provided with MCR (optional). For breakers without MCR, the setting position for MCR is not provided.

Relation of setting dial

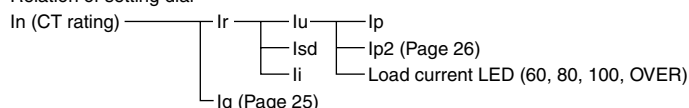

## Characteristics setting of type WM relay


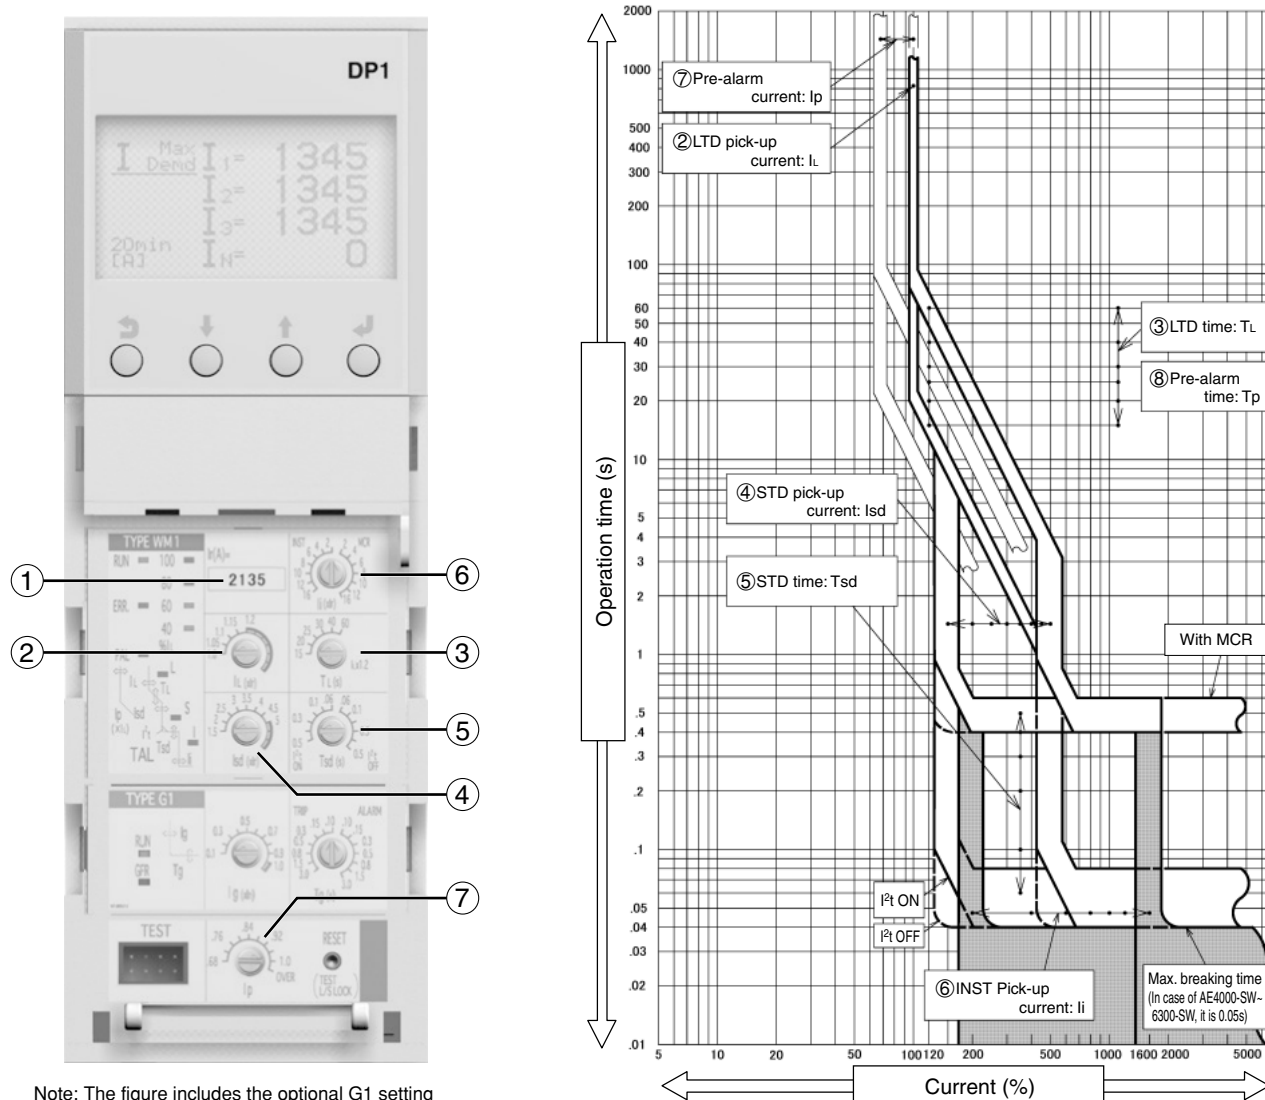


Table 23


No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
①	Current setting	Ir	$0.63 \sim 1.0 \times I_n$ (Adjust by factory : Fixed)	—	Comply with ordering sheet
②	LTD pick-up current	IL	$1.0-1.05-1.1-1.15-1.2 \times I_r$	$\pm 5\%$	1.15
③	LTD time	TL	15-20-25-30-40-60s at $I_L \times 1.2$	$\pm 20\%$	20
④	STD pick-up current	Isd	$1.5-2-2.5-3-3.5-4-4.5-5 \times I_r$	$\pm 15\%$	5
⑤	STD time	Tsd	$0.5-0.4-0.3-0.2-0.1-0.06-0.06-0.1-0.2-0.3-0.4-0.5s$ (I <sub>2</sub> t ON) (I <sub>2</sub> t OFF) at $I_{sd} \times 1.5$	$\pm 20\%$ It operates in the range between 0.04 and 0.08s when the time set at 0.06s.	0.5 (I <sub>2</sub> t ON)
⑥	INST/MCR pick-up current	li	AE630-SW~AE1600-SW $16-12-10-8-6-4-2-2-4-6-8-10-12-16 \times I_r$ (INST) (MCR) [WM1] AE2000-SW~AE3200-SW, AE4000-SW $12-10-8-6-4-2-2-4-6-8-10-12 \times I_r$ (INST) (MCR) [WM2] AE5000-SW $10-8-6-4-2-2-4-6-8-10 \times I_r$ (INST) (MCR) [WM3] AE6300-SW	$\pm 15\%$	WM1...16 (INST) WM2...12 (INST) WM3...10 (INST)
⑦	Pre-alarm current	Ip	$I_L \times 0.68 \sim 1.0$ (0.04step)-OVER	$\pm 5\%$	OVER
⑧	Pre-alarm time	Tp	$1/2 T_L$ at $I_L \times 1.2$ (after $1/2 T_L$ , PAL contact output turns on.)	$\pm 20\%$	—

The table shows data obtained on the breakers provided with MCR (optional). For breakers without MCR, the setting position for MCR is not provided. When the WM relay is used, the pre-alarm current at the setting, OVER, is the same as that at 1.0.

Relation of setting dial

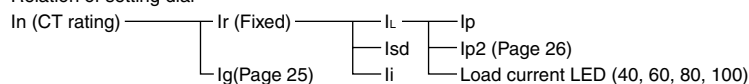

## Characteristics setting of type WB relay

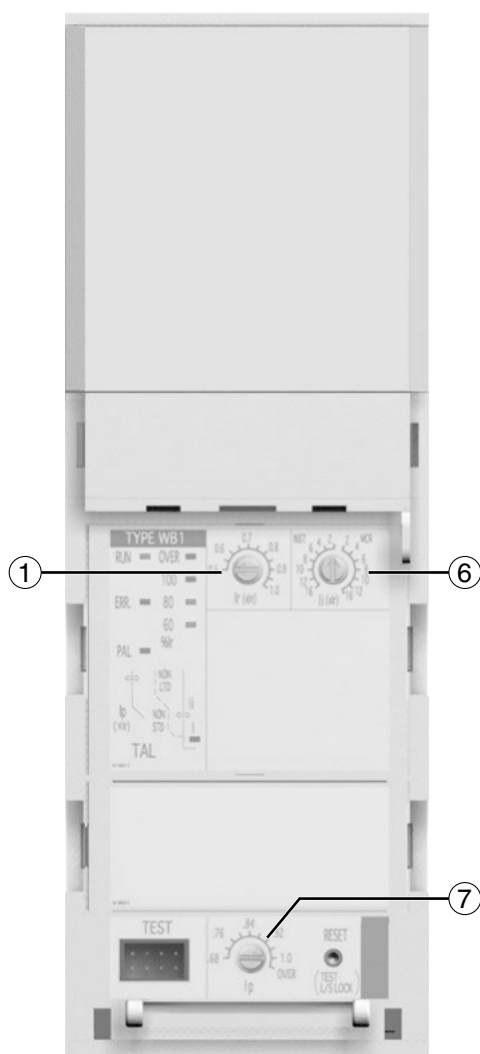

Note: The figure include MCR function.


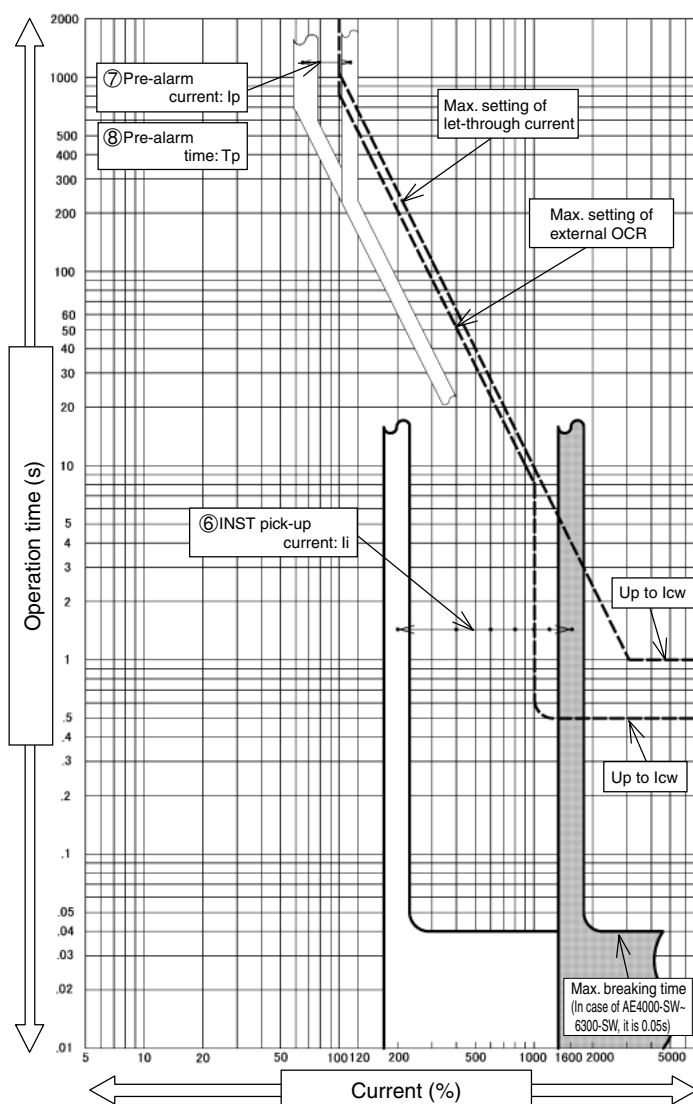


Table 24

No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
①	Current setting	$I_r$	$0.5 \sim 1.0 (0.05\text{step}) \times I_n$ (CT rating)	—	1.0
⑥	INST/MCR pick-up current	$I_i$	<div>AE630-SW~AE1600-SW <math>16-12-10-8-6-4-2-2-4-6-8-10-12-16 \times I_r</math></div> <div>AE2000-SW~AE3200-SW, AE4000-SW (INST) (MCR) <b>WB1</b></div> <div>AE2000-SWA, AE4000-SWA <math>12-10-8-6-4-2-2-4-6-8-10-12 \times I_r</math></div> <div>AE5000-SW (INST) (MCR) <b>WB2</b></div> <div>AE6300-SW <math>10-8-6-4-2-2-4-6-8-10 \times I_r</math></div> <div>(INST) (MCR) <b>WB3</b></div>	$\pm 15\%$	<div>WB1...16 (INST)</div> <div>WB2...12 (INST)</div> <div>WB3...10 (INST)</div>
⑦	Pre-alarm current	$I_p$	$I_r \times 0.68 \sim 1.0 (0.04\text{step})\text{-OVER}$	$\pm 10\%$	OVER
⑧	Pre-alarm time	$T_p$	75s at $I_r \times 2$ (after 75s, PAL contact output turns on.)	$\pm 20\%$	—

The table shows data obtained on the breakers provided with MCR (optional). For breakers without MCR, the setting position for MCR is not provided.


Relation of setting dial

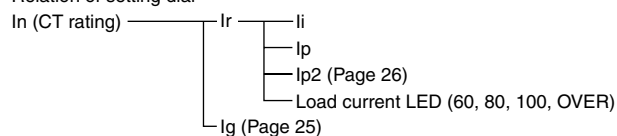



# Characteristic setting of optional setting module


## < Characteristics setting of G1 module >

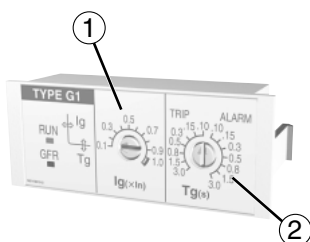

!	<ul style="list-style-type: none"> <li>When the 3pole breaker is used on a 3phase-4wires system, the neutral CT (NCT) is required for ground fault protection. As for the NCT installation, refer to instruction manual (included in the product).</li> <li>In the case of *low-rating of AE630-SW, G1 module can not be mounted.</li> </ul>	
	* AE630-SW low rating type: 500A, 315A and 250A	

Table 25-1

No.	Setting item	Mark	Adjustable setting range	Accuracy	Setting for shipment
①	Ground fault pick-up current	Ig	0.1 to 1.0×In (0.1 steps)	±20%	1.0
②	Ground fault time	Tg	$\frac{3.0-1.5-0.8-0.5-0.3-0.15-0.1}{(TRIP)} - \frac{0.1-0.15-0.3-0.5-0.8-1.5-3.0}{(ALARM)}$ s (at 1.5 × Ig)	±20%	3s(TRIP)

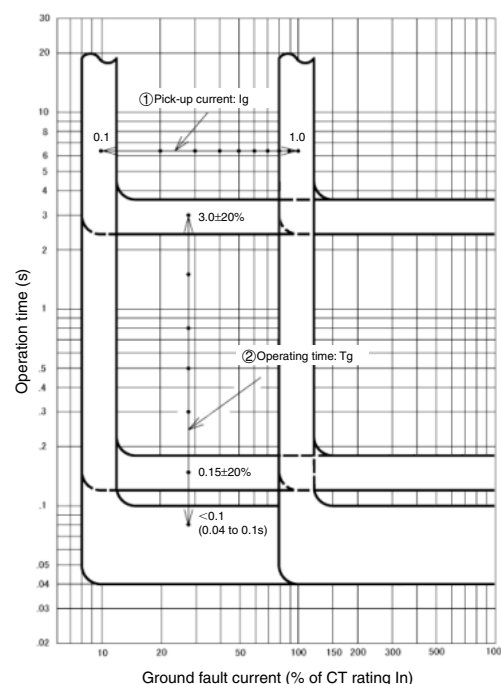

Note: If the ground fault current setting Ig is 0.1, it is necessary to control the power supply. (Ground fault protection does not operate correctly without power supply.)

## < Characteristic setting of E1 module >

By combining the ETR with Earth leakage protection(ER) and External ZCT, earth leakage protection is possible. Control supply is necessary for this function.

### ZCT for load circuit

ZCT types	ACB types, poles
ZCT163	AE630-SW ~ AE1600-SW 3P
ZCT323	AE630-SW ~ AE1600-SW 4P AE2000-SW ~ AE3200-SW 3P
ZCT324	AE2000-SW ~ AE3200-SW 4P

! As for outline dimensions, refer to AE-SW catalogue, and make your choice in reference to the BUSBAR size.

### ZCT with primary conductors

ZCT types	ACB types, poles
ZTA1200A	AE630-SW ~ AE1600-SW 3P
ZTA2000A	AE1250-SW ~ AE1600-SW, AE2000-SWA 3P



### ZCT for ground wire of transformer types

ZCT types					
ZT15B	ZT30B	ZT40B	ZT60B	ZT80B	ZT100B

!	<ul style="list-style-type: none"> <li>Be sure to combine with ZCT of our products.</li> <li>As for the ZCT installation, refer to instruction manual (included in the product).</li> </ul>	
---	---	--

Table 25-2

No.	Setting item	Mark	Adjustable setting range	Accuracy	Setting for shipment
①	ER pick-up current	IΔn	1A-2A-3A-5A-10A	0% -30%	10A
②	ER time	Te	$\frac{3-1.5-0.8-0.5-0.3-0.15-0.1}{(TRIP)} - \frac{0.1-0.15-0.3-0.5-0.8-1.5-3}{(ALARM)}$ s (at 1.5 × IΔn)	±20%	3s(TRIP)

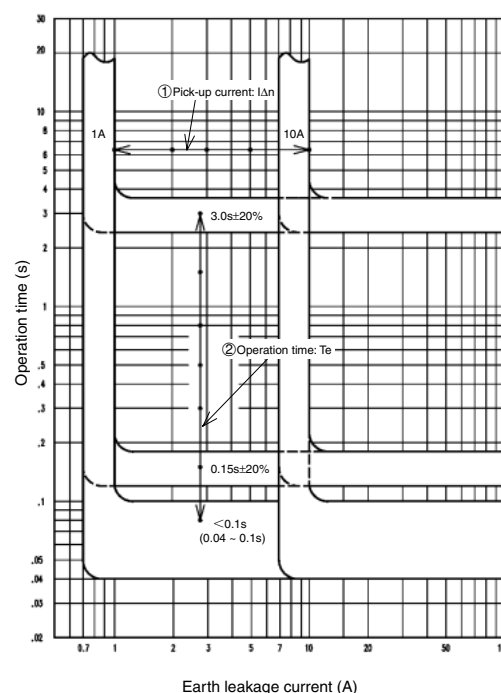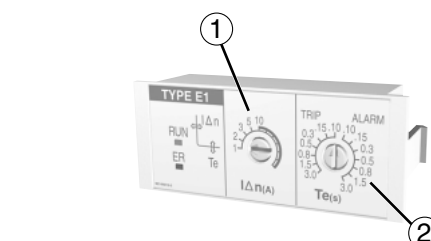


## Characteristic setting of optional setting module


### < Characteristic setting of AP module >

By combining with the Pre-alarm function already installed in standard ETR, the two step pre-alarm functions can be constructed.

In case of AE630-SW low rating type, the control supply is necessary for this function.

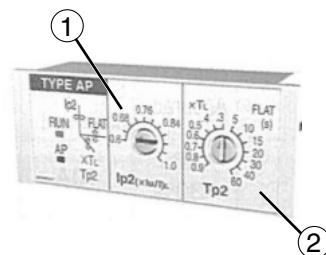

#### ● For type WS relay

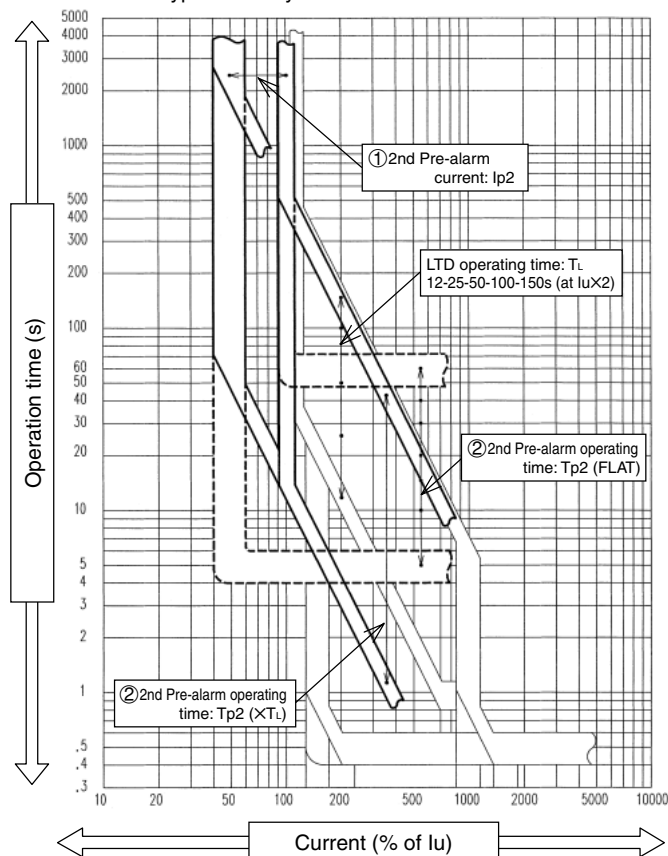

#### ● For type WM relay

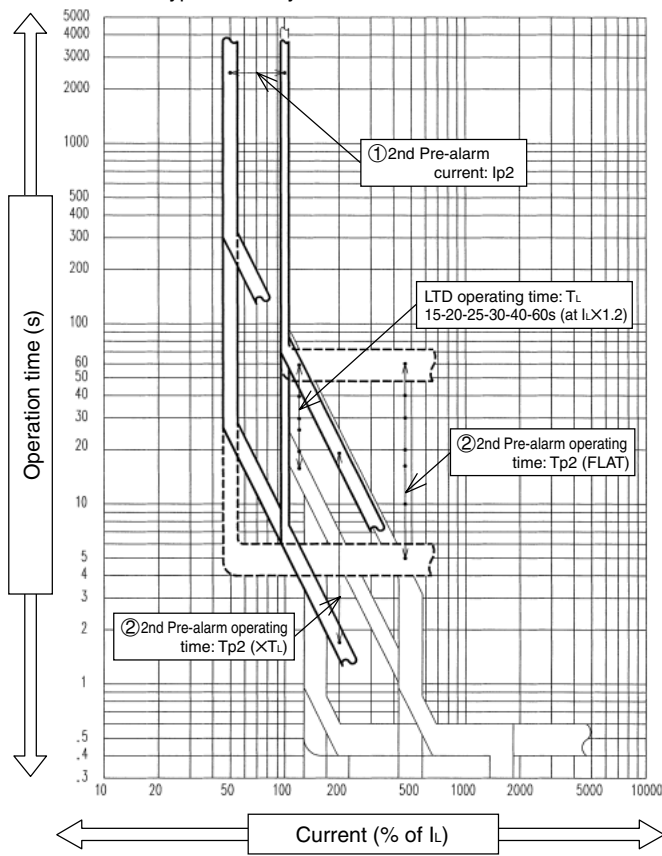


Table 26

No.	Setting item	Mark	Adjustable setting range	Accuracy	Setting for shipment
①	2nd pre-alarm current	$I_{p2}$	0.5-0.6-0.7-0.8-0.84-0.88-0.92-0.96-1.0 $\times I_u$	$\pm 10\%$	1.0
			0.5-0.6-0.7-0.8-0.84-0.88-0.92-0.96-1.0 $\times I_L$	$\pm 5\%$	
②	2nd pre-alarm time	$T_{p2}$	0.9-0.8-0.7-0.6-0.5-0.4-0.3 $\times T_L$ - 5-10-15-20-30-40-60s ( $\times T_L$ ) (FLAT)	$\pm 20\%$	0.9 ( $\times T_L$ )

### < N5 module >

The LTD and pre-alarm characteristics of neutral pole become 50% of other poles. The STD and INST characteristics, however, are same as other poles (100% of other poles). In case of AE630-SW low rating type, the control supply is necessary for this function.



## Setting the operation characteristics

### < Setting procedure >

Note: Press the screwdriver in the direction of the arrow to open the cover.

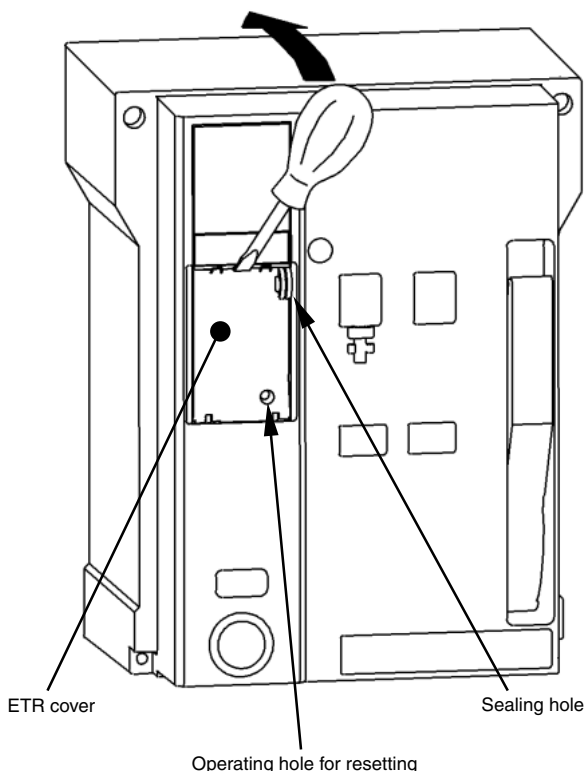


Fig. 27-1

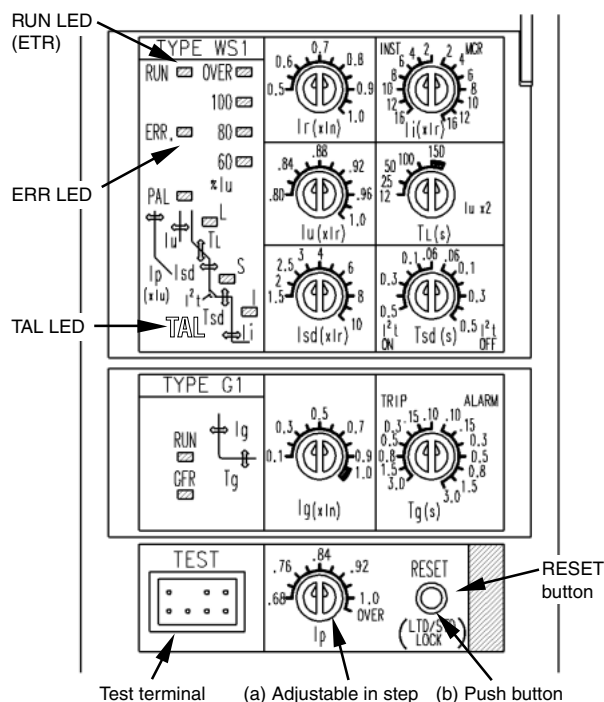


Fig. 27-2


## < Relay sealing >

Seal the ETR cover by using the sealing hole at the top of the ETR cover, if it is necessary.



Before setting, turn off the breaker and the ETR switch then make sure of no current conducting.


- ① Prepare a small flat tipped screwdriver.

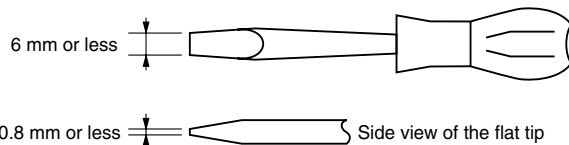

- ② Insert the flat tipped screwdriver into the opening of the ETR (Electronic trip relay) cover. Then, lightly turn the screwdriver to the upside as shown in Fig. 27-1, and the ETR cover will open.
- ③ The following two types of switches are used. Operate the switches in accordance with the following procedures.

- (a) Adjustable in step

A rotary step switch. Do not stop turning the switch at a point between steps. As for set in the between steps, it is work at one of two adjacent. The setting is the same in the zone between two continuous readings on the heavy line. (Operating torque: 0.02 N·m or less)

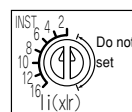

When MCR (optional) is not provided, I is set as shown below. Do not set the switch in the “Do not set” range indicated by the arrows. Set the switch on the INST side. As for the functions of MCR, see page 20.

- (b) Pushbutton switch

A restorable pushbutton switch. Press the switch with a force of 3N or less.

- ④ When any characteristic setting has been changed, check the tripping characteristics using a field test device. A dedicated field test device is available to check the characteristics through the test terminal of ETR. As for the checking procedures, see the instruction manual of the field test device.

### Specifications for field test device Y-2005

Test item	LTD, STD, INST, GFR, PAL
Testable range	1% to 2500%
Outside dimension (mm)	230(W) × 120(H) × 290(D)
Counter	0.000 to 999.999s
Control voltage	100 – 240V AC 50 / 60Hz
Weight	4.5kg

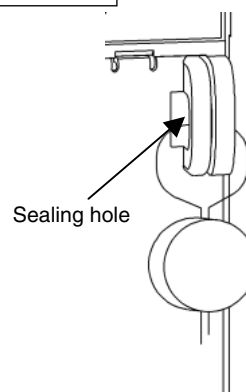
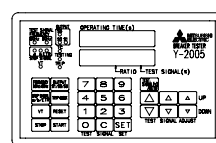


Fig. 27-3

< Example for ETR characteristics setting >  
 For setting calculation, take AE1600-SW 1600A WS1G1 relay for example.  
 Current settings and operating times are calculated.

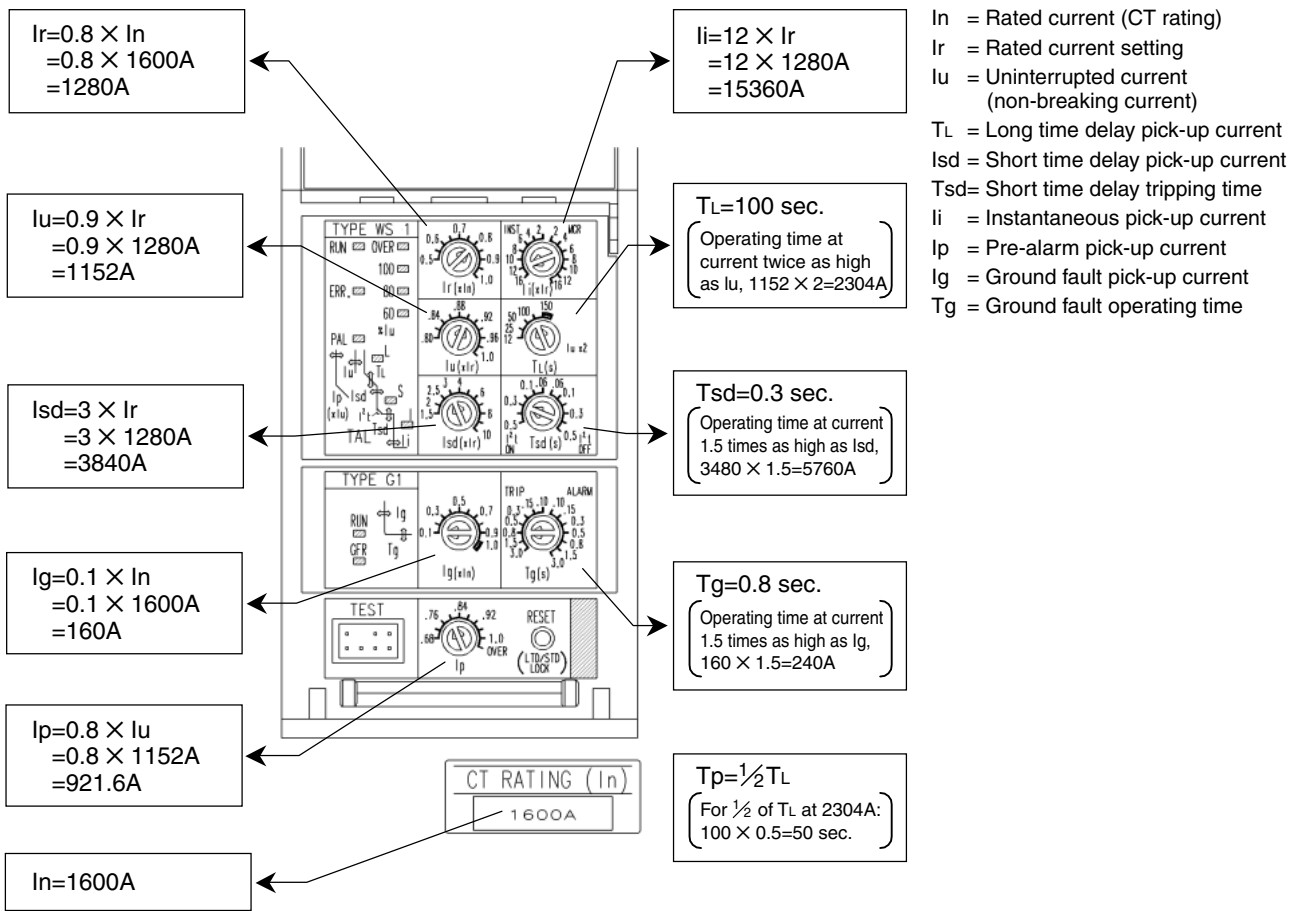



Fig. 28-1

Table 28-1 Calculated current and operating time

$I_n$ (CT rating) =1600A	$I_i$ =15360A±15%
$I_r$ =1280A	$I_p$ =921.6A±10%
$I_u$ =1152A	$T_p$ =50sec.±20% (at 2304A)
$T_L$ =100sec.±20% (at 2304A)	$I_g$ =160A±20%
$I_{sd}$ =3840A±15%	$T_g$ =0.8sec. (at 240A) ±20%
$T_{sd}$ =0.3sec.±20% (at 5760A)	—

## Wiring diagram

\* The following wiring diagram is for a fully equipped breaker.

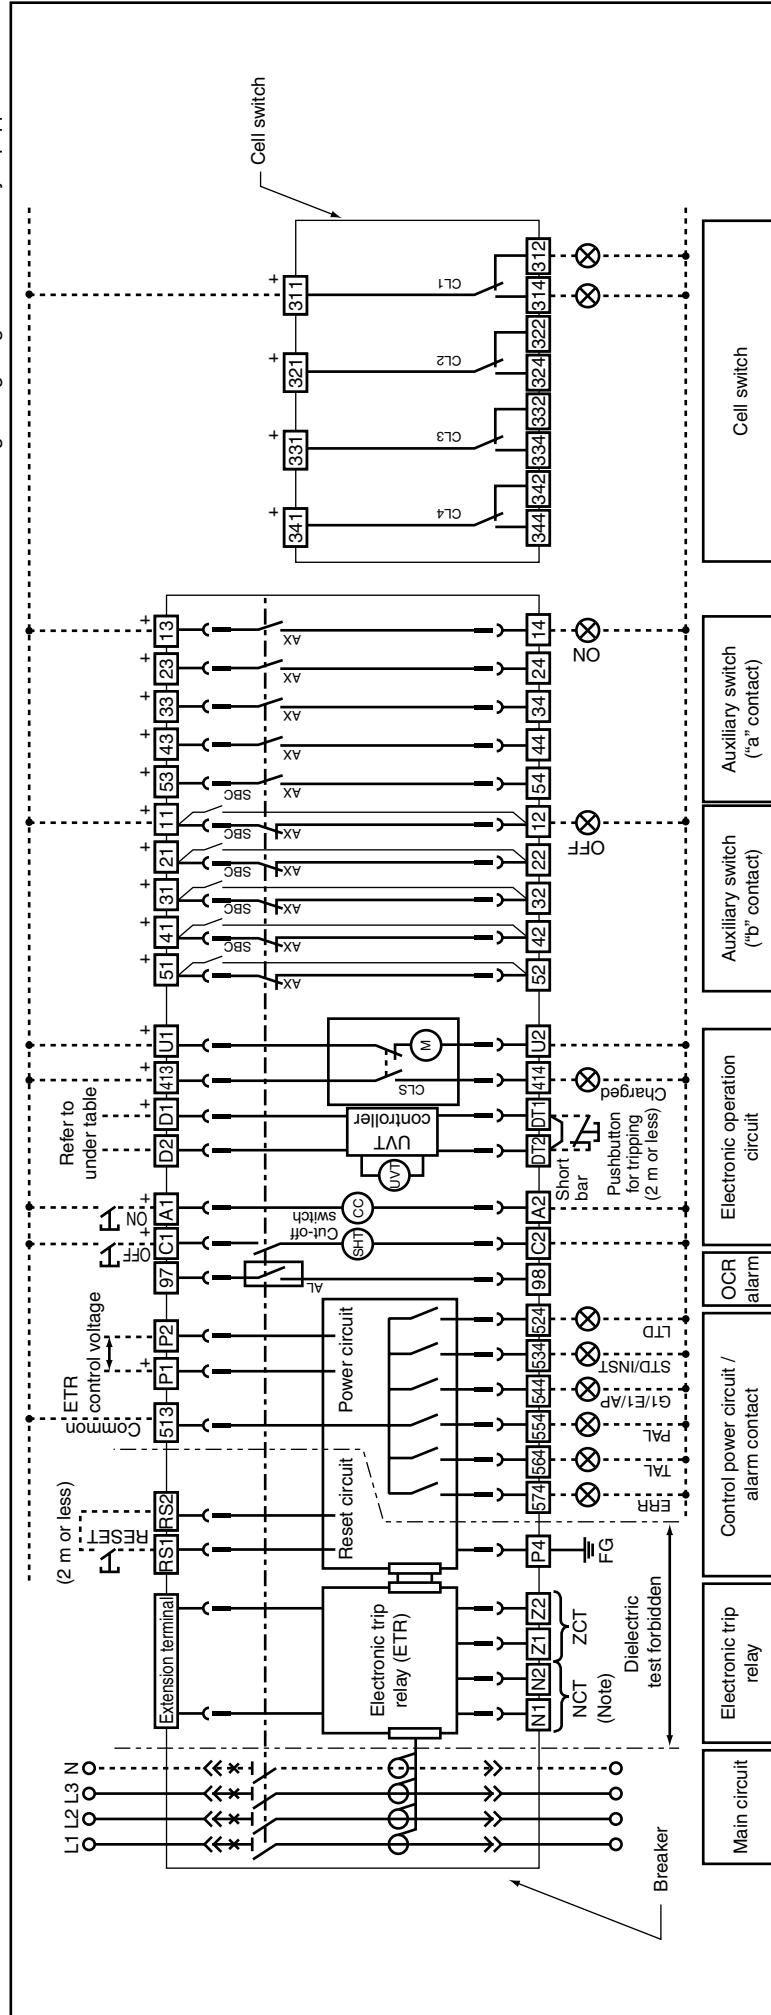

- On the drawout type, the cables should have the length which allow the control circuit terminal block to be moved to the left or right by 5 mm.
- When a coil load is connected in the same control circuit as the ETR<sub>1</sub>, surge absorbers are required to absorb the surge voltage (electromotive force).

- OCR alarm (AL) The contact output of the OCR alarm (Standard type AL) is the one-pulse output (30-50 ms).

For this reason, this output needs self-holding circuit.

- In case of type P3 or P4, the alarm contact output relay is high sensitive relay. Therefore may occur a chattering noise (approximately 1ms) by ON/OFF operation of the breaker. Please adopt a time constant filter of several ms, or double-reading (sampling), or the like.

- Closing coil (CC)  
Do not use AXb contact for a cut-off switch, because pumping prevention is not performed.

- Under voltage trip device (UVI)  
As the pushbutton switch for tripping, use a switch having a contact capacity of 150 V DC, 0.5 A or more.

A short-circuiting bar has been fitted to the trip terminals. Before using the trip terminals, remove the bar. Disconnect the voltage input wires during dielectric testing of main circuit.

- From some terminals are polarized, the wiring should be done correctly as to the polarity shown in the wiring diagram when the control voltage is DC. Auxiliary switch (AX) Standard type has no polarity.

- Reset Circuit

As the pushbutton switch for resetting the trip indicator, use a switch having a contact capacity of 15V DC, 10mA or more.

(Note:) Please do not connect NCT for AE-SS.

Terminal description	Accessory Symbols	UVT controller: wiring
13 14 to 53 54 Auxiliary switch "a" contact		<div>100-120 V AC type 200-240 V AC type All DC type</div> <div></div>
11 12 to 51 52 Auxiliary switch "b" contact		
U1 U2 For motor charging power		
413 414 Charged signal		
D1 D2 Voltage input terminal of UVT	AX Auxiliary switch	
D1 D2 Trip terminal of UVT	AL OCR alarm switch	
A1 A2 For control of closing coil	CLS Charging completion switch	
C1 C2 For control of shunt tripping	SBC Short-circuit B-contact	
P1 P2 OCR alarm	CL Cell switch	
P4 Power supply for ETR		
FS1 FS3 FG: Frame ground		
513 524 to 574 Alarm reset (Trip cause LED, alarm contact)		
513 524 to 574 Trip cause, alarm contact output	Internal wiring	
Z1 Z2 ZCT connecting terminal	External wiring (User's wiring)	
N1 N2 NCT connecting terminal		
Display unit connecting terminal		
Interface unit connecting terminal	Control circuit connector (drawout type)	
Extension terminals		
VT unit connecting terminal		

Fig. 29-1

## Technical note

### ■ Arc space



When the short circuit is interrupted, hot gas blows out discharged from the exhaust port of the arc-extinguishing chamber, so provide a clearance as shown in the following table.

In case of drawout type, secure appropriate space to prevent the fingers from getting trapped at the time of drawing.

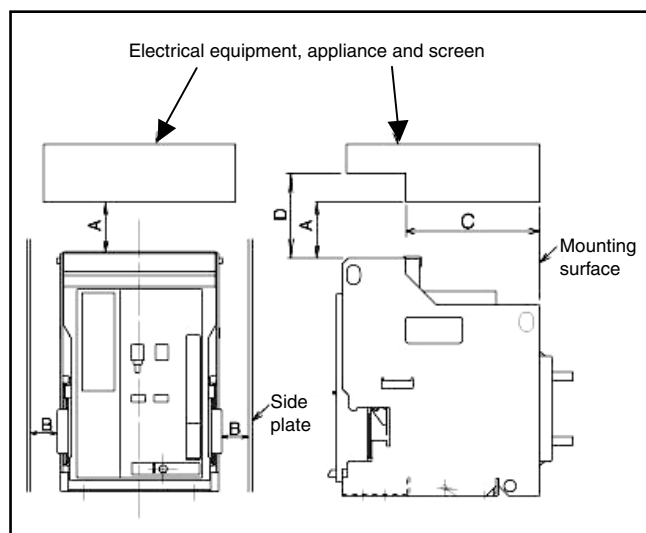


Fig. 30-1

Table 30 Dimensions

(mm)

Type		AE630-SW ~ AE4000-SWA		AE4000-SW ~ AE6300-SW
Applicable voltage		600 V AC or less	660 V AC 690 V AC	690 V AC or less
Fixed type	A	(Note 1) 0	(Note 1) 100	(Note 1) 200
	B	(Note 3) 50	(Note 3) 50	(Note 3) 50
	C	162	162	-
	D	(Note 2) 50	(Note 2) 50	200
Drawout type	A	0	100	(Note 1) 200
	B	(Note 3) 50	(Note 3) 50	(Note 3) 50
	C	240	240	-
	D	(Note 2) 50	(Note 2) 50	200

Note 1: 300 mm or more clearance is necessary to inspect the arc-extinguishing chamber and contacts.

Note 2: The wiring space required for the control terminal block.

Note 3: In case of dimension B becomes larger when the mechanical interlock (MI), door interlock (DI), etc. are installed.

### ■ Reverse connection available

Line and Load is not defined on the Main circuit terminals.

Therefore reverse connection is available without any limitation.

### ■ Performance of withstand voltage

Test location		Withstand voltage (AC)	Uimp
Main circuit (Note 1)	Between the live parts of the main circuit and earth	3500V AC 1 minute	12kV
	Between the live parts of different poles		
	Between the main upper terminals and lower terminals		
	Between the live parts of the main circuit and the control circuit terminal block		
Control circuit	Between the accessories control circuit (Note 2) and earth	2000V AC 1 minute	6kV (Note 4)
	Between the ETR control circuit (Note 3) and earth		4kV

Note 1: Disconnect the UVT voltage input wires (D1, D2) during withstand voltage test.

(In the case of AC380-460V spec., disconnect the voltage input wire (IN1, IN2) of UVT external unit.)

Note 2: The Accessories are AX, MD, UVT, CC, SHT and AL.

Note 3: The electronic trip relay terminals (P1, P2, 513, 524, 534, 544, 554, 564, 574)

Note 4: AE4000-SW ~ AE6300-SW of Drawout type is 4kV.

## Technical note

### ■ Service Conditions

#### 1. Normal service conditions

If under ordinary conditions the following normal working conditions are all satisfied, the AE Series air circuit breaker may be used unless otherwise specified.

##### ① Ambient air temperature:

A range of max. +40°C to min. -5°C is recommended. However, the average over 24 hours must not exceed +35°C.

##### ② Altitude: 2,000 m (6,600 feet) or less

##### ③ Environmental conditions:

The air must be clean, and the relative humidity 85% or less at a max. of +40°C.

Do not use and store in atmospheres with sulfide gas, ammonia gas, etc.

(H<sub>2</sub>S ≤ 0.01 ppm, SO<sub>2</sub> ≤ 0.05 ppm, NH<sub>3</sub> ≤ 0.25 ppm)

##### ④ Installation condition:

When installing the AE Series air circuit breaker, refer to the installation instructions in the catalogue and instruction manual.

##### ⑤ Replacement yardstick :

Approx. 15 years. It is dependent on the environment. Please refer to "Inspection and Maintenance" section of this manual.

#### 2. Special service conditions

In case of special service condition, service life may become shorter in some cases.

##### ① Special environmental conditions

High temperature and/or high humidity

Corrosive gas

##### ② Special ambient temperature

If the ambient temperature exceeds +40°C, the uninterrupted current rating will be reduced.

##### ③ Special altitude

If it is used at 2,000 m or higher the heat radiation rate is reduced decreasing the operating voltage rating, continuous current capacity and breaking capacity. Moreover the durability of the insulation is also decreased owing to the atmospheric pressure. Apply for further detail.

## Guarantee

### Guarantee

#### 1. Free guarantee period

The free guarantee period of the product is one year from the day of purchase.

#### 2. Scope of guarantee

(1) We will repair the product free of charge within the guarantee period on condition that it has been used under the standard working conditions in conformity with the operating conditions, operating procedures, environmental conditions and instructions specified in the catalogs, manuals and caution labels on the product body.

(2) In the following cases, the product will be repaired at your expense even within the free guarantee period.

- Failure caused by your improper storage or handling, carelessness or negligence
- Failure caused by inadequacies of installation
- Failure caused by mis-operation or improper modification
- Failure caused by external factors due to acts of God, such as fire and abnormal voltage, and natural disasters, such as earthquake, windstorm and flood
- Failure caused by reasons that could not be foreseen on the level of science and technology at the time of delivery

The term "guarantee" used in this section refers to the guarantee only of the delivered product. We are not liable to compensate for any damage induced by the failure of the delivered product.

#### 3. Repair parts supplying period

The supply of the repair parts is warranted for 5 years after discontinuation of the production. The supply is terminated as soon as the repair parts run out after the 5 years.

## Inspection and Maintenance

1. Guidelines for Inspection and Maintenance ....	32	4. Inspection Details .....	33
2. External view and Internal construction .....	33	5. Fault Diagnosis .....	36
3. Preparation before Inspection .....	33		

The maintenance and inspection frequency and content are different depending on the working conditions. Read through the following for details of sufficient maintenance and inspection requirements.

### CAUTION



- The personnel having expertise concerned shall perform any maintenance/inspection. Note that there are the risk of electrical shock.
- Any maintenance/inspections shall be performed after cutting off the master circuit-breaker and making sure that there is no current flowing. Note that there are the risk of electrical shock.

If maintenance and/or inspection should be carried out without cutting of the power supply in an unavoidable cases, wear rubber gloves and insulated boots laying rubber mat on the floor. Use insulated tools and instruments only. An access to the live parts is necessary in this maintenance and inspection work, when workers' full attention should be paid to the insulation of human body from the live parts.

Any normal opening/closing may be done safely because the live parts are covered with insulated molded case or the like.

## 1. Guidelines for Inspection and Maintenance

**Inspection** : ACBs are inspected to detect part that may be deteriorating at an early stage, to maintain the performance of the ACB through timely renewal of consumable and deteriorating parts and to prevent accidents that could otherwise arise as the breaker approaches the end of lifetime.

**Maintenance** : Maintenance is necessary in order to maintain the performance of the ACB at every two times of inspection, ex. grease lubrication. Please contact to our service network.

### 1.1 Guidelines for Inspection and Replacement according to the period of use and the environment of usage

It is recommended that periodic inspections are performed about once a month commencing use thereafter according to the guidelines for inspection, maintenance and renewal to ensure a stable, long-term use of the ACB.

Environments			Specific examples	Guidances for inspection	Guidances for maintenance	Guidances for replacement
Reference atmosphere	1	Places with ever clear and dry air.	Dustproof and air-conditioned electrical rooms, etc.	Once every 2 to 3 years	1st : 4 to 6 years	Within approx. 15 years
	2	Indoor Where there is no corrosive gas and little dust.	Distribution panels in individual electrical rooms that are not dustproof and air-conditioned.		2nd or later : Once every 3 years	Within approx. 7 to 15 years
Adverse environment	1	Places with little dust but with such gases as salty, sulfurous acid, hydrogen sulfide, high matures. Places average over 24hours of ambient air temperature exceed +35°C.	Geothermal power plants, waste water treatment, steel miles, paper factories, pulp factories, etc.	Once a year	Once every 2 years	Within approx. 3 to 7 years
	2	Locations with especially service corrosive gas and dust conditions and where humans cannot stay for a long period of time.	Chemical factories, quarries, mining areas, etc.	Once every half year	Once a year	Within approx. 1 to 3 years

### 1.2 Guidelines for Inspection and Replacement according to the number of operating cycles

Model	Guidelines for inspection		Product performance				
	Number of operating cycles with rated current *	Number of operating cycles without rated current	Limit of number of operating cycles with rated current			Limit of number of operating cycles with overload	
			With rated current	Without current	Total	Current	Number of operating cycles
AE630-SW	every 500 cycles	every 2,000 cycles	5,000	20,000	25,000	6 times the rated current	12 cycles
AE1000-SW							
AE1250-SW							
AE1600-SW							
AE2000-SWA	every 150 cycles	every 2,000 cycles	1,500	23,500			
AE2000-SW							
AE2500-SW	every 100 cycles		1,000	18,500	20,000		
AE3200-SW							
AE4000-SWA	every 50 cycles	500	19,000	19,500			
AE4000-SW 3P	every 100 cycles	every 1,000 cycles	1,000	9,000	10,000	3 cycles	
AE5000-SW 3P							
AE6300-SW 3P							
AE4000-SW 4P							
AE5000-SW 4P							
AE6300-SW 4P		every 500 cycles		4,000	5,000		

\*Operating cycles shall be regarded as being with rated current, even if the current is much less than the maximum rated current of the breaker.





## 2. External view and Internal construction

Please refer to page 3 and 4 of this manual.

## 3. Preparation before Inspection

For routine inspection under normal service conditions, proceed with the following.

Make sure that the circuit breaker is turned OFF.

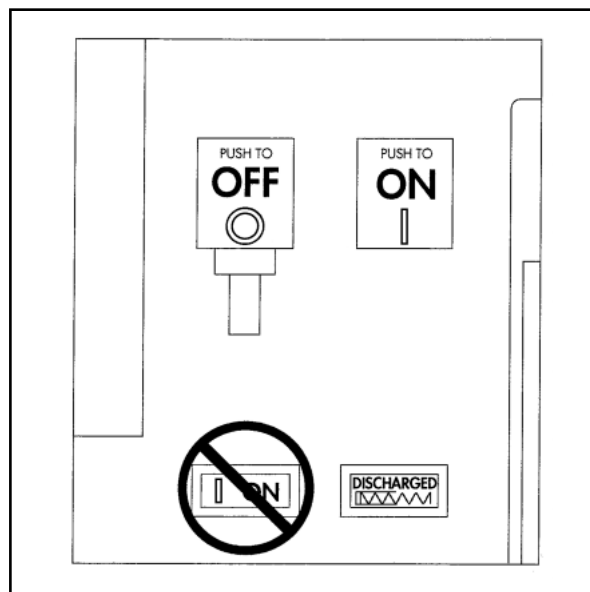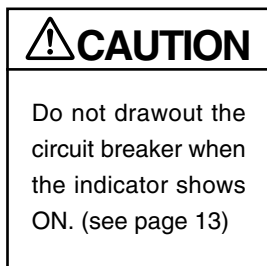

## 4. Inspection Details

### 4.1 Initial Inspection

#### 4.1.1 Inspection prior to applying current

Perform the following inspections after installing the ACB and before applying the current.

Inspection item	Criteria
1. Are the electrical wires and bars fastened securely to the external line connection main terminals?	Must be tightened at the designated tightening torque (M12 screw : 40~50 N · m)
2. Are any conductive foreign objects, such as screw, nails, processing chips from the panel and also connecting lead wires for the withstand voltage tests, left around the terminals?	Must be removed completely.
3. Is the front cover, base, etc. cracked or damaged?	There must be no cracks or damage.
4. Has the breaker been flooded or is there condensation of dew?	There must be no flooding or dew condensation.

(1)Follow the standards in 4.1.2 when carrying out withstand voltage test.

(2)Follow the standards in 4.1.2 when measuring the insulation resistance using a 500 V megohmmeter.

#### 4.1.2 Test locations and standards for insulation resistance and withstand voltage tests

(1)Test locations for insulation resistance and withstand voltage tests.

Test locations	Insulation resistance test		Withstand voltage test	
	ON	OFF	ON	OFF
Between the live parts of the main circuit and earth	○	○	○	○
Between live parts of different poles	○	—	○	—
Between main upper terminals and lower terminals	—	○	—	○
Between the live parts of the main circuit and the control circuit terminal block	○	○	○	○
Between the control circuit terminal block and earth	○	○	○	○

(2)Standards for insulation resistance and withstand voltage tests

Insulation Resistance Test : Must be no less than 5 MΩ. (must be no less than 50 MΩ for the ACB alone)

Withstand Voltage Test AC :

Voltage Application Time : 1 min.	Between the live part of the main circuit and the earth	: 3500 V AC
	Between live parts of different poles	: 3500 V AC
	Between main upper terminals and lower terminals	: 3500 V AC
	Between the live part of the main circuit and the control circuit terminal block	: 3500 V AC
	Between the control circuit terminal block and earth	: 2000 V AC

(The section of dielectric test forbidden shall depend on the instruction on the control circuit terminal label)

## CAUTION



Disconnect the UVT voltage input wires "D1", "D2" during withstand voltage test of panel board, otherwise UVT controller may be broken. (In the case of 380-460 V spec., remove the voltage input wire "IN1", "IN2" of UVT external unit)

## 4.2 Periodic Inspections

It is recommended that periodic inspections are performed once about one month commencing use thereafter according to the guidelines for inspection and renewal to ensure a stable, long-term use of the ACB.

### 4.2.1 External appearance of the ACB

Inspection item	Inspection method	Criteria	Treatment methods
1.Dust and soiling	Visual inspection	There must be no detrimental deposits of dust and dirt.	Blow with air upon each periodic inspection or clean and remove the dust with a dry cloth. Do not use any solvents, such as a thinner.
2.Loosening of the main circuit terminals	Tighten with a torque wrench.	Must be tightened securely. (M12 screw : 40~50 N · m)	Retighten if necessary.
3.Loosening of control terminals	Tighten with a screwdriver.	Must be tightened securely. (M3.5 screw : 0.8~1.2 N · m)	Retighten if necessary.
4.Cracks, breakage or deformation of the front cover, base and control circuit terminal block	Visual inspection	There must be no cracks, breakage or deformation.	Please contact our company if any abnormalities on the front cover or the control circuit terminal block. Replace the circuit breaker when the base is found to have trouble.
5.Flooding, immersion in water	There must be no flooding or immersion.	There must be no flooding or immersion.	Replace the product if flooding or immersion has occurred.

### 4.2.2 Conductive parts of the main circuit (External view)

Inspection item	Inspection method	Criteria	Treatment methods
1.Measurement of insulation resistance	Measure the insulation resistance with 500 V DC insulation resistance tester (megohmmeter).	Must be no less than 5 MΩ. (must be no less than 50 MΩ for the AE-SW alone.) Testing locations are shown in section 4.1.	Clean and dust off before re-measurement. In case the insulation fails to recuperate, replace the circuit breaker and drawout cradle.
2.Soiling of the main circuit conductor	Visual inspection	There must be no detrimental deposits of dust or soot.	Clean the main conductor.
3.Discoloration and deformation	Visual inspection	There must be no detrimental discoloration of the pressing spring.	Replace the cradle if there are any abnormalities.

### 4.2.3 Arc extinguishing chamber and movable/fixed contact

Inspection item	Inspection method	Criteria	Treatment methods
1.Soot and stains	Visual inspection	No detrimental deposits of dust and dirt	Remove dust and clean upon each inspection.
2.Breakage of the arc extinguishing chamber	Visual inspection	There must be no breakage.	Please contact our company if there are any abnormalities.
3.Condition of the arc extinguishing plate	Visual inspection	There must be no remarkable arc extinguishing plate melted.	Please contact our company if there are any abnormalities.
4.Movable/Fixed contacts	Visual inspection	There must be no remarkable contact wearing.	Please contact our company if there are any abnormalities.
5.Loosening of the arc extinguishing chamber fastening screw	Tighten with a wrench for M6 screws.	Must be tightened securely. (M6 screw : 2.5~4 N · m)	Retighten if necessary.

### 4.2.4 Electronic trip relay

Inspection item	Inspection method	Criteria	Treatment methods
1.External appearance of the electronic trip relay	Visual inspection	There must be no breakage or deformation of the external parts and the setting dials.	Please contact our company if there is any breakage or deformation.
2.Dust and soiling	Visual inspection	There must be no detrimental deposits of dust and dirt.	Remove the dust with a dry cloth. Do not use any solvents, such as a thinner.
3.Operating characteristics of the electronic trip relay	Measurement	Use the field test device (Y-2000) to confirm that the characteristics are within the standard values.	Please contact our company if the measured values deviate from the standard values.

#### 4.2.5 Accessory devices (General accessory devices)

Inspection item	Inspection method	Criteria	Treatment methods
1.Closing coil (CC) Shunt trip device (SHT)	Electrical operation	Must operate reliably and without difficulty within the operating voltage range indicated in the "catalog".	Please contact our company if there are any abnormalities.
2.Auxiliary switch (AX)	Check continuity of AXa and AXb.	Must switch in accordance with the conditions of the ACB.	Please contact our company if there are any abnormalities.
3.Motor charging device (MD)	Electrical operation	Must complete the charging reliably and without difficulty within the designated time (less than 5sec.) and the operating voltage range indicated in the "Instruction Manual".	Please contact our company if there are any abnormalities.
4.Under voltage trip device (UVT)	Electrical operation	Must be able to close reliably upon application of a voltage that is 85% of the rated voltage and to trip and disable closing by the time the voltage reaches 45% of the rated voltage.	Please contact our company if there are any abnormalities.
5.Safety shutter (SST)	Drawout/Insert operation	(1) There must be no breakage of the parts.	Please contact our company if there are any abnormalities.
		(2) Must be able to perform the drawout /insertion operation without any difficulty.	① Remove any broken parts that impair the drawout/insertion operation. ② Please contact our company if the drawout/insertion operation cannot be performed.
6.Cell switch (CL)	Drawout/Insert operation	Must switch reliably at the "DISCONNECT", "TEST" and "CONNECT" positions.	Please contact our company if there are any abnormalities.
7.Mechanical interlock (MI)	Check the gap between the trip pin and the lever.	0.2 to 1.2 mm (Accessory attachment manual)	Please contact our company when cannot be adjusted.

#### 4.3 Inspections After a Breaking Operation

Inspect the items detailed for periodic inspection (section 4.2) when the ACB has performed a breaking operation as a result of an overload current or a short-circuit current.

Reuse is possible if the relevant criteria are satisfied. A circuit must never be reclosed (locally or remotely) before the cause of the fault has been identified and cleared.

However, it is recommended that the ACB be replaced as soon as possible after it has interrupted a large fault current. The ACB should be monitored for unusual temperature rises and other abnormalities until replacement occurs. Refer to the following chart regarding the level of breaking currents and the treatments to be performed:

Level of breaking current	Level of ACB damage	Treatment
1.Breaking current is 6 times or less the rated current (LTD, STD range)	(1) Abnormalities of the external parts cannot be detected visually. (2) Slight wear of contacts, soiling by soot, etc.	Reusable. Refer to section 1.2 regarding the switching operation lifetime at the rated current.
2.Breaking current is 70 percent of the rated breaking capacity or less (STD, INST range)	(1) There is slight overall soiling of the exhaust ports by soot. (2) There is also overall damage of the contacts and the arc extinguishing chamber but only to a slight degree.	Reusable. The breaker can be used if the relevant criteria in section 4.2 are satisfied.
3.Breaking current near to the rated breaking capacity	(1) There is significant overall soiling of the exhaust ports by soot. (2) The contacts and the arc extinguishing chamber also suffer considerable damage.	(1) Immediate replacement is desirable. (2) If immediate replacement is not possible, the breaker can be used carefully by gradually reducing the rated current, etc., provided that the relevant criteria in section 4.2 are satisfied. As an additional test, perform the withstand voltage test to the live parts of the main circuit of the ACB at twice the rated insulation voltage, in other words, at 2000 V. However, replace as soon as possible.

(Note) 1. In the case of the electronic trip relay with the trip indication function, it can be determined whether the cause of the tripping lies in the LTD (long-time-delay), STD (short-time-delay) or INST (instantaneous) level.

2. If the magnitude of the fault current cannot be estimated, treat according to 3 of section 4.3.

## 5. Fault Diagnosis

Type and condition of abnormality	Defect/Probable cause	Treatment	
		Investigation/Primary treatment	Secondary treatment
1. Cannot close.	1. The closing operation cannot be performed. (1) The OFF-lock device (CYL,CAL,Padlock) is not released.	Release the OFF-lock device. (CYL,CAL,Padlock)	Please contact our company if closing cannot be performed even after completing the primary treatment.
	(2) The drawout position is not appropriate.	Set to either of the "DISCONNECT", "TEST" or the "CONNECT" positions.	
	(3) The drawout handle is inserted.	Remove the drawout handle.	
	(4) Voltage is not applied to the UVT.	Apply voltage to the UVT.	Refer to the section "Abnormalities of the UVT" if there is an abnormality of the UVT.
	(5) The closing spring is not charged.	Charging operation	1. Please contact our company if charging cannot be performed manually. 2. Refer to the section "Charging disabled" if electrical charging is not possible.
	(6) The closing coil does not operate. (Manual closing operation can be performed.)	1. If the voltage is not applied, examine the control circuit.	—
		2. In the case of voltage is applied, the breaker has some failure. Please contact our company.	Please contact our company.
	2. The closing operation is performed. (1) Tripping (OFF) is performed simultaneously with the closing operation.	Please contact our company.	—
	(2) Turns OFF when charging after a closing operation.	Please contact our company.	—
	3. The ON button is broken.	Please contact our company.	—
2. At the completion of charge, tripping performs at the same time.	External scheme (sequence)	Please examine the external scheme (sequence).	Faulty operating mechanism if the external scheme has no trouble. Please contact our company.
3. OFF disabled.	1. The contact does not open even after pushing the OFF button.	(Note 1) Please contact our company.	—
	2. The SHT does not operate. (Manual OFF operation can be performed.)	1. If the voltage is not applied, examine the control circuit.	—
		2. In the case of voltage applied, the breaker has some failure. Please contact our company.	—
	3. The OFF button cannot be pushed.	Please contact our company.	—
	4. The OFF button is broken.	Please contact our company.	—
4. Charging disabled.	1. Cannot perform manual charging operation.	Please contact our company.	—
	2. Electrical charging cannot be performed.	1. Examine the power supply of control circuit.	—
		2. Examine rated voltage.	In the case of correct voltage is applied, the breaker has some failure. Please contact our company.
	3. The motor turns but closing spring does not charge.	Please contact our company.	—
5. Unusual temperature rise	1. The fastening of the connecting conductor is loose.	Retighten.	Please contact our company if discoloration of the conductor or the terminal molding is noted.
	2. The contact pressure flat spring of the junction is damaged.	Please contact our company.	—
	3. The contact resistance of the contact has increased.	Clean the contact surface (by using wire brush).	Please contact our company if the temperature does not fall even after cleaning the contact surface.
	4. The wear of the contact is severe.	Replace the ACB.	—
	5. Over loaded.	Check the load equipments.	—

(Note 1) When you drawout the breaker forcefully, do it after releasing higher breaker. Drawing out the breaker when it is energized may cause serious accident.

Type and condition of abnormality	Defect/Probable cause	Treatment	
		Investigation/Primary treatment	Secondary treatment
6.Abnormality Electronic Trip Relay (ETR) (1)Trip unnecessarily	1.Tripped at rated current or less	Check the load current and characteristics setting of the ETR. Check the characteristics by the field test device.	Please contact our company if there are any abnormalities.
	2.Tripped at starting of load	Check the inrush current and STD/INST setting of the ETR.	Please contact our company if there are any abnormalities.
	3.By Noise/Surge	Please shift the setting of the ETR to upper level (temporary use). Please check connection of the frame ground terminal "P4".	Reducing the noise/surge, or adding the surge absorber
(2)Abnormal characteristics	1.The breaker does not trip even when an over current flows.	Check the load current and characteristics setting of the ETR. Check the characteristics by the field test device.	Please contact our company if there are any abnormalities.
	2.The characteristics is abnormality. (By field test device)	Check about the field test device setting.	Please contact our company if there are any abnormalities.
(3)Abnormalities of Indication function or contact output	1.The trip indicator LED or alarm contact output does not work.	Check the control power supply, ERR. LED and RUN LED.	Please contact our company.
	2.The display (DP1, DP2) does not function.	Check the cable from the control circuit terminal when using DP2.	
	3.The ERR. LED lit up.	Check the characteristics setting of the ETR.	Please contact our company. (The other factor, refer to page 20)
	4.The RUN LED does not light up.	Check the breaker condition for lighting LED (Refer to page 20).	Please contact our company.
	5.The display key operation is not possible.	Refer to separate instruction manual of Display (DP1, DP2).	Please contact our company.
7.Drawout/insertion operation is not possible.	1.The drawout handle cannot be inserted.	Insert the drawout handle after pushing the OFF button.	Please contact our company if the drawout handle cannot be inserted even when the OFF button is pushed.
	2.The lock plate cannot be pushed in.	Turn the drawout handle slightly to the right and left and push in the lock plate at a position where the lock plate can be pushed in easily.	Please contact our company if the lock plate cannot be pushed in.
	3.The lock plate does not come out at the "TEST" or "CONNECT" position.	Please contact our company.	—
	4.The stopper pin has broken and although the lock plate protrudes out at the "TEST" and "CONNECT" position, the insertion operation does not lock.	Please contact our company.	—
	5.The indication on the drawout indicator does not change.	Please contact our company.	—
	6.The drawout handle does not turn.	Push in the lock plate.	Please contact our company.
	7.The junction is broken and is impairing the drawout/insertion operation.	Please contact our company.	—
	8.The control circuit terminal is broken and is impairing the drawout/insertion operation.	Please contact our company.	—
8.The safety shutter (SST) does not operate.	1.The barrier of the safety shutter (SST) is broken.	Please contact our company.	—
	2.The rod of the safety shutter (SST) unit is broken.	Please contact our company.	—
9.The control circuit terminal does not make contact at the "TEST" and "CONNECT" positions.	1.The molding of the control circuit terminal is broken.	Please contact our company.	—
	2.The blade of the automatic connection terminal is deformed.	Please contact our company.	—
10.The UVT does not draw in (abnormality in the UVT controller).	1.Applied voltage is too low. (Or applied voltage is too high.)	Check the applied voltage, and adjust applied voltage in accordance to rated voltage of UVT controller.	Please contact our company.
	2.The applied voltage capacity is insufficient.	Check the capacity of the voltage supply.	Please contact our company.
	3.The trip terminals, DT1 and DT2, are opened.	Check whether the trip terminals (DT1 and DT2) are shorted. In case of using the push button for trip, use a b-contact type (normally closed button).	Please contact our company.
11.The auxiliary switch does not operate.	1.Breakage of the operating parts of the auxiliary switch	Please contact our company.	—

# SERVICE NETWORK

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Bangladesh	PROGRESSIVE TRADING CORPORATION	Haque Tower, 2nd floor, 610/11, Jubilee Road, Chittagong, Bangladesh	+880-31-624-307
	ELECTRO MECH AUTOMATION& ENGINEERING LTD.	Purana Paltan Lane, (VIP Road), Rokeya Mansion(6th floor), Room#702,Dhaka-1000, Bangladesh	+880-28-321-791
Belarus	Tehnikon	Oktyabrskaya 19, Off. 705, BY-220030 Minsk, Belarus	+375(0)17210 46 26
Belgium	Koning & Hartman B.V.	Woluwelaan 31, BE-1800 Vilvoorde, Belgium	+32(0)2/2570240
Cambodia	DHINIMEX CO.,LTD	#245, St. Tep Phan, Phnom Penh, Cambodia	+855-23-997-725
Chile	Rhona S.A.	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
China	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai, 200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. Beijing Branch	9/F, Office Tower1 Henderson Centre 18 Jianguomennei Dajie DongCheng district Beijing 100005	+86-10-6518-8830
	Mitsubishi Electric Automation (China) Ltd. ShenZhen Branch	Room 2512--2516, Great China International Exchange Square, Jintian Rd.S., Futian District, Shenzhen, 518034	+86-755-2399-8272
	Mitsubishi Electric Automation (China) Ltd. GuangZhou Branch	Room 1609, North Tower, The Hub Center, No.1068, Xing Gang East Road, Haizhu District, Guang Zhou, China 510335	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. ChengDu Branch	Block B, Room 407-408, Shangri-La Center Office Building, No.9 BinJiang East Road, Chengdu, China 610021	+86-28-8446-8030
	Mitsubishi Electric Automation (Hongkong) Ltd.	10/F., Manulife Tower, 169 Electric Road, North Point, Hong Kong	+852-2887-8810
Colombia	Proelectrico Representaciones S.A.	Carrera 42 # 75-367 Bod 109 Itagui Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEIJER ELECTRONICS A/S	LYKKEGARDSVEJ 17, DK-4000 ROSKILDE	+45(0)46/75 76 66
Egypt	Cairo Electrical Group	9, Rostoum St. Garden City P.O. Box 165-11516 Maglis El-Shaab, Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V.	25, Boulevard des Bouvets, F-92741 Nanterre Cedex	+33(0)1/55 68 55 68
Germany	Mitsubishi Electric Europe B.V.	Gothaer Str. 8, 40880 Ratingen , Germany	+49(0) 2102 486-0
Greece	KALAMARAKIS - SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOUS ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
	UTECO	5, MAVROGENOUS STR., 18542 PIRAEUS, Greece	+30-211-1206-900
Hungary	Meltrade Ltd.	Fertő utca 14. HU-1107 Budapest, Hungary	+36(0)1-431-9726
India	Mitsubishi Electric India Private Limited	2nd Floor, Tower A&B, Cyber Greens, DLF Cyber City, DLF Phase-III, Gurgaon - 122 022 Haryana, India	+91-124-4630300
Indonesia	P. T. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353(0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972(0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-60531
Kazakhstan	Kazpromavtomatika	ul. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	1480-6, Gayang-Dong, Gangseo-Gu, Seoul, Korea	+82-2-3660-9572
Laos	AROUNKIT CORPORATION IMPORT- EXPORT SOLE CO.,LTD	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS	+856-20-415899
Lebanon	Comptoir d'Electricite Generale-Liban	Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+961-1-240445
Lithuania	Rifas UAB	Tinklų 29A, LT-5300 Panevezys, Lithuania	+370(0)45-582-728
Malaysia	Mittrich Sdn Bhd	No. 5 Jalan Pemberita U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam, Selangor, Malaysia	+603-5569-3748
Malta	ALFATRADE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356(0)21-697-816
Maroco	SCHIELE MAROC	KM 7,2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161, Yangon, Myanmar	+95-(0)1-202589
Nepal	Watt&Volt House	KHA 2-65, Volt House Dillibazar Post Box: 2108, Kathmandu, Nepal	+977-1-4411330
Netherlands	Imtech Marine & Offshore B.V.	Sluisjesdijk 155, NL-3087 AG Rotterdam, Netherlands	+31(0)10-487-19 11
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS	Leirvikasen 43B, NO-5179 Godvik, Norway	+47(0)55-506000
Middle East Arab Countries & Cyprus	Comptoir d'Electricite Generale-International-S.A.L.	Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Pakistan	Prince Electric Co.	2-P, GULBERG II, LAHORE - 54660 PAKISTAN	+92-(0)42-35752323 +92-(0)42-35753373
	AL-KAMAL GROUP	Office No. 7 & 8, 1st Floor, Barkat Ali Khan Center, 101 Circular Road, Lahore. Pakistan	+92-(0)42-37631632
Philippines	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, Edsa Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63(0)2-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 50, 32-083 Balice, Poland	+48(0)12 630 47 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373(0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Aleea Lacul Morii Nr.3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric Europe B.V. Moscow Branch	52, bld. 3 Kosmodamianskaya Nab. 115054, Moscow, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421(0)51-7580 611
	SIMAP	Jana Derku 1671, SK - 91101 Trenčin, Slovakia	+ 421(0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386(0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubí 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34(0)93-565-3131
Sweden	Euro Energy Components AB	Järnvägsгатan 36, S-434 24 Kungälv, Sweden	+46(0)300-690040
Switzerland	TriElec AG	Muehlentalstrasse 136, CH-8201 Schaffhausen	+41-(0)52-6258425
Taiwan	Setsuyo Enterprise Co., Ltd	5th Fl., No.105, Wu Kung 3rd, Wu-Ku Hsiang, Taipei, Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrungmuang Road, Klong Mahanak Pomprab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	GTS	Bayraktar Bulvarı Nutuk Sok. No:5, Posta Kutusu34384, TR-34775 Yükan Dudullu-Uemraniye, Istanbul, Turkey	+90(0)216 526 3990
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts. AL10 8XB, United Kingdom	+44(0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
Venezuela	Adesco S.A.	Calle 7 La Urbina Edificio Los Robles Locales C y D Planta Baja, Caracas - Venezuela	+58-212-241-9952
Vietnam	Mitsubishi Electric Vietnam Co., Ltd. Head Office	Unit01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam	+84-8-3910-5945
	Mitsubishi Electric Vietnam Co., Ltd. Hanoi Branch	6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi City, Vietnam	+84-4-3937-8075

According to Registration of Broadcasting and Communication Equipments belonging in “KC”, we inform of the following user guidance.

Applicable models are Electronic type of ACBs, MCCBs and ELCBs.

### 사용자안내문

기 종 별	사 용 자 안 내 문
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

三菱低圧気中遮断器 World Super AE 形  
MITSUBISHI Low-Voltage Air Circuit Breakers World Super AE  
**Type AE-SW**

**MITSUBISHI ELECTRIC CORPORATION**

東京都千代田区丸の内2-7-3(東京ビル) 〒100-8310  
HEAD OFFICE: TOKYO BLDG., MARUNOUCHI, 2-7-3, CHIYODAKU, TOKYO 100-8310. TELEX: J24532 CABLE: MELCO TOKYO

**三菱電機株式会社 福山製作所**

〒720-8647 広島県福山市緑町1番8号 TEL (084)921-3211 FAX (084)931-4714  
MITSUBISHI ELECTRIC FUKUYAMA WORKS

---