Temperature Controllers

E5CSL/E5CWL/E5EWL

The Simple and New Temperature Controller is Released that Easily Achieves the Temperature Control.


- Easy to Read (Character Height E5CSL: 21.7 mm, E5CWL: 16.2 mm (PV), E5EWL: 20 mm (PV)).
- Depth beyond front panel: Only 60 mm.
- Fewer parameters for simple setup.
- Faster sampling at 250 ms.

Note: Refer to Precautions on page 9.



48 × 96 mm E5EWL **NEW**

Main I/O Functions

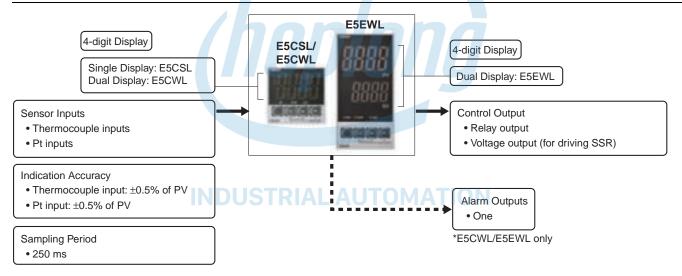

Model Number Structure

Model Number Legend

E5CSL-

1. Control Output

R: Relay output: 250 VAC, 3 A

Q: Voltage output (for driving SSR): 12 VDC, 21 mA

2. Sensor type

TC: Thermocouple (K, J, T, R, or S)

P: Platinum resistance thermometer (Pt100)

E5CWL-<u>1</u> 1 2 3

1. Control Output

R: Relay output: 250 VAC, 3 A

Q: Voltage output (for driving SSR): 12 VDC, 21 mA

2. Alarm

1: Relay output: 250 VAC, 1 A (resistive load)

3. Sensor type

TC: Thermocouple (K, J, T, R, or S)

P: Platinum resistance thermometer (Pt100)

E5EWL-1 2 3

1. Control Output

R: Relay output: 250 VAC, 3 A

Q: Voltage output (for driving SSR): 12 VDC, 21 mA

2. Alarm

1: Relay output: 250 VAC, 1 A (resistive load)

3. Sensor type

TC: Thermocouple (K, J, T, R, or S)

P: Platinum resistance thermometer (Pt100)

Ordering Information

E5CSL

Size	Power supply voltage	Input type	Alarm output	Control output	Model
1/16 DIN 48 × 48 × 60 (W × H × D)	100 to 240 VAC	Thermocouple	None	Relay output	E5CSL-RTC
		Resistance thermometer			E5CSL-RP
		Thermocouple		Voltage output	E5CSL-QTC
		Resistance thermometer		(for driving SSR)	E5CSL-QP

E5CWL

Size	Power supply voltage	Input type	Alarm output	Control output	New model
1/16 DIN 48 × 48 × 60 (W × H × D)	100 to 240 VAC	Thermocouple	1	Relay output	E5CWL-R1TC
		Resistance thermometer			E5CWL-R1P
		Thermocouple		Voltage output (for driving SSR)	E5CWL-Q1TC
		Resistance thermometer			E5CWL-Q1P

E5EWL

Size	Power supply voltage	Input type	Alarm output	Control output	New model
1/8 DIN 48 × 96 × 60 (W × H × D)	100 to 240 VAC	Thermocouple	1	Relay output	E5EWL-R1TC
		Resistance thermometer			E5EWL-R1P
		Thermocouple		Voltage output (for driving SSR)	E5EWL-Q1TC
		Resistance thermometer			E5EWL-Q1P

Accessories (Order Separately)

Terminal Cover Adapter

Torrinia Gover		rtaaptor	
Model	E53-COV19	Model	Remarks
Front Panel (for E5CSL	/E5CWL)	Y92F-45	Use this Adapter when the Front Panel has already been prepared for the E5B□.
Model	E53-COV20		Only black is available. Order separately.
Note: 1. This Front Panel acces 48B or Y92A-48D. 2. This Front Panel acces	ssory is required to attach the Y92A-ssory is only the frame.	Y92F-49	Use for E5CSL/E5CWL only. Provided with E5CSL/E5CWL.
It does not include the		Y92F-51	Use for E5EWL only. Provided with E5EWL.

Specifications

INDUSTRIAL AUTOMATION

Ratings

_					
Power supply voltage		100 to 240 VAC, 50/60 Hz			
Operating voltage range		85% to 110% of rated supply voltage			
Power consumption		3.5 VA			
Sensor input		Models with thermocouple inputs Thermocouple: K, J, T, R, or S			
		Models with platinum resistance thermometer inputs Platinum resistance thermometer: Pt100			
	Relay output	SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum load: 5 V, 10 mA			
Control output	Voltage output (for driving SSR)	Output voltage: 12 VDC +25%/–15% (PNP), max. load current: 21 mA, with short-circuit protection circuit			
Alarm output	(See note.)	SPST-NO, 250 VAC, 1 A (resistive load), electrical life: 100,000 operations, minimum load: 5 V, 10 mA			
Control metho	od	ON/OFF control or 2-PID control (with auto-tuning)			
Setting metho	od	Digital setting using front panel keys			
Indication me	thod	7-segment digital display and individual indicators Character height: E5CSL: 21.7 mm, E5CWL: 16.2 mm (PV), E5EWL: 20 mm (PV)			
Other functions		Temperature input shift, run/stop, protection functions, etc.			
Ambient operating temperature		-10 to 55°C (with no icing or condensation)			
Ambient operating humidity		25% to 85%			
Storage temperature		-25 to 65°C (with no icing or condensation)			
N. 4 550\A/I //		·			

Note: E5CWL/E5EWL only

Input Ranges

Models with Thermocouple Inputs

Model	Set value	Input type	Range		
(temperature input)	Set value		°C	°F	
	0	K	-200 to 1,300	-300 to 2,300	
	1		-20.0 to 500.0	0.0 to 900.0	
	2	J T	-100 to 850	-100 to 1500	
TC input	3		-20.0 to 400.0	0.0 to 750.0	
10 mput	4		-200 to 400	-300 to 700	
	5		-199.9 to 400.0	-199.9 to 700.0	
	6	R	0 to 1,700	0 to 3,000	
	7	S	0 to 1,700	0 to 3,000	

Default setting: 0

Applicable standards (K, J, T, R, S): JIS C1602-1995 and IEC 60584-1

Models with Resistance Thermometer Inputs

Model	Set value	Input type	Range	
(temperature input)	Jet value	iiiput type	°C	°F
Dt innut	8	Pt100	-200 to 850	-300 to 1500
Pt input	9		-199.9 to 500.0	-199.9 to 900.0

Default setting: 8

Applicable standards (Pt100): JIS C1604-1997 and IEC 60751


Alarm Types

Select alarm types out of the 11 alarm types listed in the following table.

table.			
Setting	Alarm type	Positive alarm value (X)	Negative alarm value (X)
0	No alarm	Output OFF	
1	Deviation upper/ lower limit	ON X X SP	Always ON
2	Deviation upper limit	ON OFF SP	ON X - SP
3	Deviation lower limit	ON X SP	ON → X ← SP
4	Deviation upper/ lower range	ON X X OFF SP	Always OFF
5 (See note.)	Deviation upper/ lower limit standby sequence ON	ON X X F	Always OFF
6 (See note.)	Deviation upper limit standby sequence ON	ON X C	ON OFF SP
7 (See note.)	Deviation lower limit standby sequence ON	ON X SP	ON → X ← SP
8	Absolute value upper limit	ON OFF 0	ON OFF 0
9	Absolute value lower limit	ON OFF 0	ON OFF
10 (See note.)	Absolute value upper limit standby sequence ON	ON OFF 0	ON ←X→ OFF 0
11 (See note.)	Absolute value lower limit standby sequence ON	ON OFF 0	ON OFF 0
12	Do not set.		

Note: Alarms with a Standby Sequence

The alarm is blocked until the first safe-state is reached.
Unwanted alarm during start-up are prevented.
Example: Deviation Lower Limit Standby Sequence ON

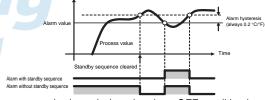

The standby sequence is cleared when the alarm OFF condition has been met.

The standby sequence is started again when any of the following conditions is met.

- Operation is started (power is turned ON or operation is switched from stop to run).
- The alarm value is changed.
- The temperature input offset is changed.
- The set point is changed.

Characteristics


Indication accuracy		Thermocouple: (See note 1.) $(\pm 0.5\%$ of indicated value or $\pm 1^{\circ}$ C, whichever is greater) ± 1 digit max. Platinum resistance thermometer: $(\pm 0.5\%$ of indicated value or $\pm 1^{\circ}$ C, whichever is greater) ± 1 digit max.			
Influence of temperature		R and S thermocouple inputs: (±1% of PV or ±10°C, whichever is greater) ±1 digit max.			
Influence of voltage		(£1% of PV or ±10°C, whichever is greater) ±1 digit max. (£1% of PV or ±4°C, whichever is greater) ±1 digit max.			
Influence of EMS. (at EN61326-1)		Platinum resistance thermometer inputs: (±1% of PV or ±2°C, whichever is greater) ±1 digit max.			
Hysteresis		0.1 to 999.9 (in units of 0.1) °C/°F			
Proportional band (P)		0.1 to 999.9 (in units of 0.1) °C/°F			
Integral time (I)		0 to 3999 s (in units of 1 s)			
Derivative time (D)		0 to 3999 s (in units of 1 s)			
Control period		0.5, 1 to 99 s (in units of 1 s)			
Alarm setting range		-1999 to 9999 (decimal point position depends on input type)			
Sampling period		250 ms			
Affect of signal source resistance		Thermocouple: $0.1^{\circ}\text{C}/\Omega$ max. (100 Ω max.) (See note 2.) Platinum resistance thermometer: $0.6^{\circ}\text{C}/\Omega$ max. (10 Ω max.)			
Insulation resistance		20 MΩ min. (at 500 VDC)			
Dielectric strength		2,300 VAC, 50 or 60 Hz for 1 min (between terminals with different charge)			
Vibration resistance	Malfunction	10 to 55 Hz, 20 m/s² for 10 min each in X, Y, and Z directions			
VIDIALIOII TESISLATICE	Destruction	10 to 55 Hz, 20 m/s² for 2 hrs each in X, Y, and Z directions			
Shock	Malfunction	100 m/s² min., 3 times each in X, Y, and Z directions			
resistance	Destruction	300 m/s² min., 3 times each in X, Y, and Z directions			
Majaht	E5CSL/E5CWL	Controller: Approx. 100 g, Mounting Bracket: Approx. 10 g			
Weight	E5EWL	Controller: Approx. 150 g, Mounting Bracket: Approx. 10 g			
Degree of protection		Front panel: IP50 Rear case: IP20, Terminals: IP00			
Memory protection		Non-volatile memory (number of writes: 100,000 times)			
Conformed standards		EN61326-1 (See note 3.), EN61010-1, IEC61010-1 VDE0106 Part 100 (Finger protection), when the terminal cover is mounted.			
EMC		Emission Enclosure: EN55011 Group1 Class A Emission AC Mains: EN55011 Group1 Class A Immunity ESD: EN61000-4-2 Immunity RF-interference: EN61000-4-3 10 V/m Immunity Conducted Disturbance: EN61000-4-6 3 V Immunity Burst: EN61000-4-4 Immunity Surge: EN61000-4-5 Immunity Voltage Dip/Interrupting: EN61000-4-11			

Note: 1. The indication accuracy of K and T thermocouples at a temperature of –100°C max. is ±2°C ±1 digit maximum. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max.

2. R, and S sensors: 0.2° C/ $\dot{\Omega}$ max. (100 $\dot{\Omega}$ max.)

3. Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)


Electrical Life Expectancy Curve for Relays (Reference Values)

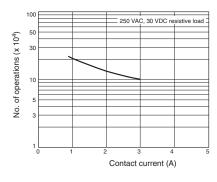


CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢPESC SC/E5CWL/E5EWL

External Connections

• A voltage output (control output) is not electrically insulated from the internal circuits. When using a grounding thermocouple, do not connect any of the control output terminals to ground. If the control output terminals are connected to ground, errors will occur in the measured temperature values as a result of leakage current.

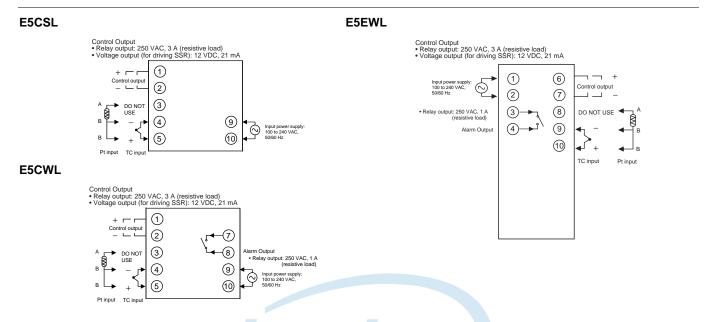


Nomenclature

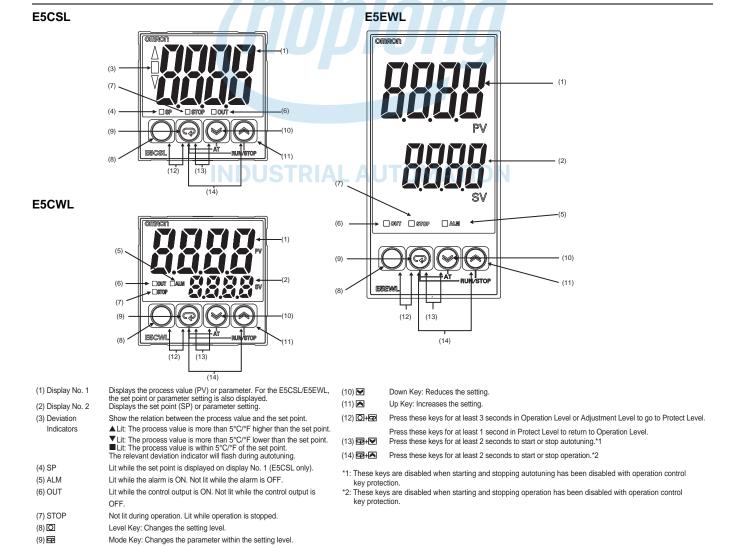


Dimensions (Unit: mm)

E5CSL/E5CWL

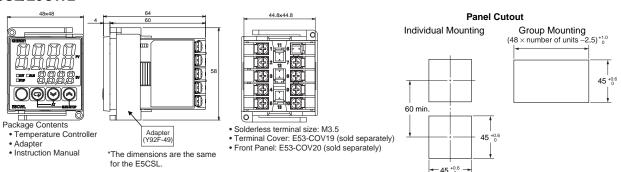

- Recommended panel thickness is 1 to 5 mm.
 Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
 When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the ambient operating temperature given in the specifications.


E5EWL

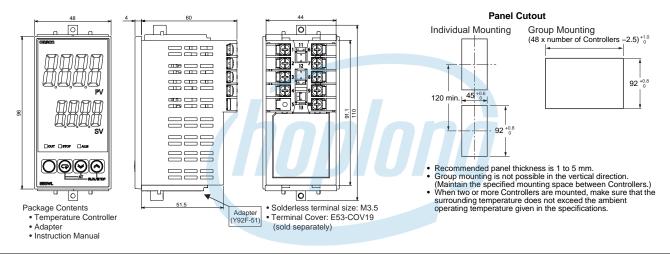

INDUSTRIAL AUTOMATION

CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢPESCUS G/E5CWL/E5EWL


Accessories (Order Separately)

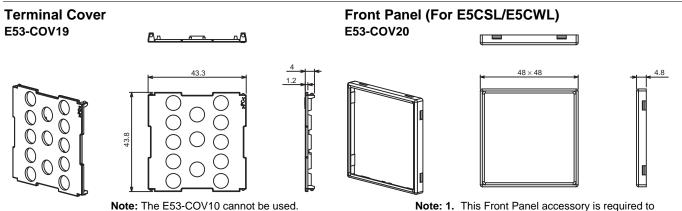

- Note: 1. This Front Panel accessory is required to attach the Y92A-48B or Y92A-48D.
 - 2. This Front Panel accessory is only the frame. It does not include the plastic cover.


Adapter (For E5CSL/E5CWL)

- Note: 1. Use this Adapter when the panel has already been prepared for the E5B□.
 - 2. Only black is available.

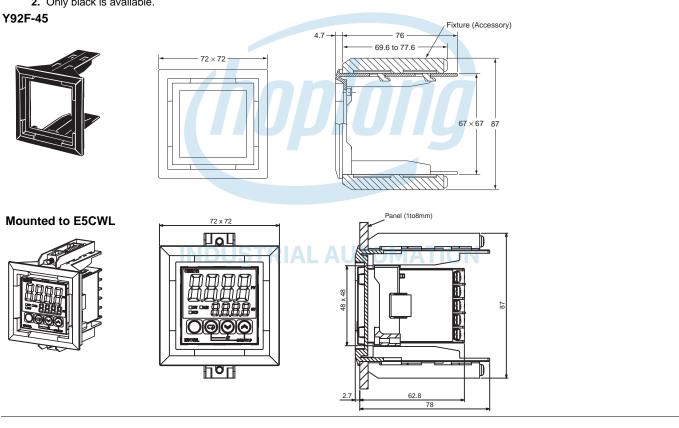

Operation

Parameter Operations

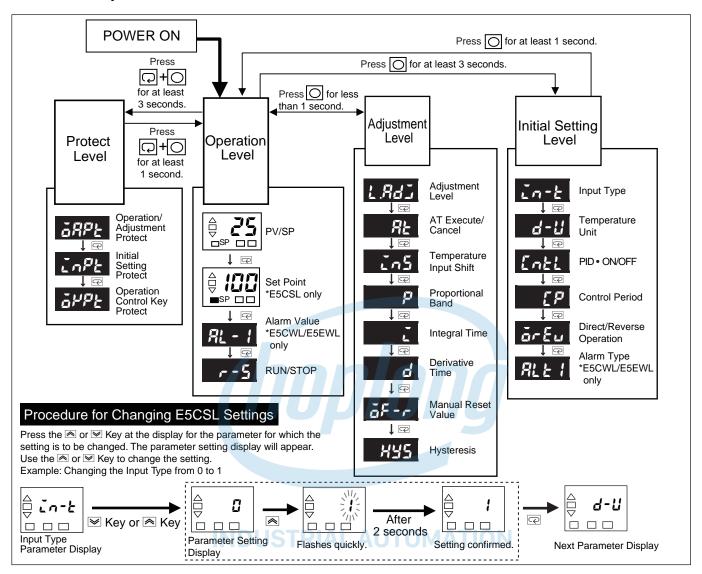

CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢPESCUS G/E5CWL/E5EWL

Safety Precautions

∕!\ CAUTION

Do not touch the terminals while power is being supplied.

Doing so may occasionally result in minor injury due to electric shock.



Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Do not use the product where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.



Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur.



If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy.



The life expectancy of output relays varies considerably with the output load and switching conditions.



Tighten the terminal screws to between 0.74 and 0.90 N·m. Loose screws may occasionally result in fire.

Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result



in property damage or accidents.


A malfunction in the Temperature Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Temperature Controller, take appropriate safety measures, such as installing a monitoring device on a



Precautions for Safe Use

separate line

Be sure to observe the following precautions to prevent operation
failure, malfunction, or adverse affects on the performance and
functions of the product. Not doing so may occasionally result in

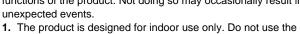

- product outdoors or in any of the following locations.Places directly subject to heat radiated from heating equipment.
- Places subject to splashing liquid or oil atmosphere.
- Places subject to direct sunlight.
- Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
- Places subject to intense temperature change.
- · Places subject to icing and condensation.
- · Places subject to vibration and large shocks.
- Use/store within the rated temperature and humidity ranges. Provide forced-cooling if required.
- To allow heat to escape, do not block the area around the product. Do not block the ventilation holes on the product.
- 4. Be sure to wire properly with correct polarity of terminals.
- 5. Use specified size (M3.5, width 7.2 mm or less) crimped terminals for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a rated temperature of over 70°C and a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.205 to 2.081 mm²). (The stripping length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- 6. Do not wire the terminals which are not used.
- 7. Allow as much space as possible between the controller and devices that generate a powerful high-frequency or surge. Separate the high-voltage or large-current power lines from other lines, and avoid parallel or common wiring with the power lines when you are wiring to the terminals.
- 8. Use this product within the rated load and power supply.

- 9. Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
- 10.Make sure that the Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- 11.A switch or circuit breaker should be provided close to this unit. The switch or circuit breaker should be within easy reach of the operator, and must be marked as a disconnecting means for this unit
- 12.Do not use paint thinner or similar chemical to clean with. Use standard grade alcohol.
- **13.**Design system (control panel, etc) considering the 2 seconds of delay that the controller's output to be set after power ON.
- **14.**The output may turn OFF when shifting to certain levels. Take this into consideration when performing control.
- 15. The number of non-volatile memory write operations is limited.



Precautions for Correct Use

Service Life

- Use the product within the following temperature and humidity ranges:
 - Temperature: -10 to 55°C (with no icing or condensation) Humidity: 25% to 85%
 - If the product is installed inside a control board, the ambient temperature must be kept to under 55°C, including the temperature around the product.
- 2. The service life of electronic devices like Temperature Controllers is determined not only by the number of times the relay is switched but also by the service life of internal electronic components. Component service life is affected by the ambient temperature: the higher the temperature, the shorter the service life and, the lower the temperature, the longer the service life. Therefore, the service life can be extended by lowering the temperature of the Temperature Controller.
- 3. When two or more Temperature Controllers are mounted horizontally close to each other or vertically next to one another, the internal temperature will increase due to heat radiated by the Temperature Controllers and the service life will decrease. In such a case, use forced cooling by fans or other means of air ventilation to cool down the Temperature Controllers. When providing forced cooling, however, be careful not to cool down the terminals sections alone to avoid measurement errors.

Measurement Accuracy

- When extending or connecting the thermocouple lead wire, be sure to use compensating wires that match the thermocouple types.
- When extending or connecting the lead wire of the platinum resistance thermometer, be sure to use wires that have low resistance and keep the resistance of the three lead wires the same.
- 3. Mount the product so that it is horizontally level.
- If the measurement accuracy is low, check to see if input shift has been set correctly.

Waterproofing

The degree of protection is as shown below. Sections without any specification on their degree of protection or those with $IP \square 0$ are not waterproof.


Front panel: IP50

Rear case: IP20, Terminal section: IP00

Operating Precautions


- It takes approximately two seconds for the outputs to turn ON from after the power supply is turned ON. Due consideration must be given to this time when incorporating Temperature Controllers in a sequence circuit.
- When starting operation after the Temperature Controller has warmed up, turn OFF the power and then turn it ON again at the same time as turning ON power for the load. (Instead of turning the Temperature Controller OFF and ON again, switching from STOP mode to RUN mode can also be used.)
- Avoid using the Controller in places near a radio, television set, or wireless installing. These devices can cause radio disturbances which adversely affect the performance of the Controller.

Mounting Mounting to a Panel E5CSL/E5CWL

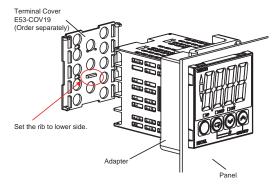

- 1. Insert the E5CSL/E5CWL into the mounting hole in the panel.
- 2. Push the adapter from the terminals up to the panel, and temporarily fasten the E5CSL/E5CWL.
- 3. Tighten the two fastening screws on the adapter. Alternately tighten the two screws little by little to maintain a balance. Tighten the screws to a torque of 0.29 to 0.39 N·m.

E5EWL

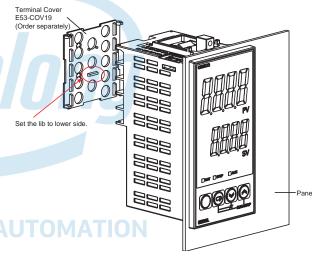


- 1. Insert the E5EWL into the mounting hole in the panel.
- 2. Attach the adapter provided with the product to the mounting grooves on the top and bottom surfaces of the rear case.
- 3. Push until adapter reaches the panel and is fixed in place.

Mounting the Terminal Cover

Make sure that the rib on the E53-COV19 Terminal Cover to lower side, and then attach the this cover to E5CSL/E5CWL/E5EWL.

Precautions when Wiring

- Separate input leads and power lines in order to prevent external noise
- Use specified size (M3.5, width 7.2 mm or less) crimped terminals for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a rated temperature of over 70°C and a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.205 to 2.081 mm²). (The stripping length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- Use crimp terminals when wiring the terminals.
- Use the suitable wiring material and crimp tools for crimp terminals.
- Tighten the terminal screws to between 0.74 and 0.90 N-Em.
- Use the following types of crimp terminals for M3.5 screws.

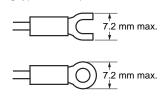

CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢP LONG

Warranty and Application Considerations

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted. IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Disclaimers

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON *Warranty and Limitations of Liability.*

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

Hotline: 1900.6536 - Website: HOPLONGTECH.COM

CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢP LONG



OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 **Authorized Distributor:**

© OMRON Corporation 2010 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM_1_3_0715 Printed in Japan Cat. No. H167-E1-02

0811

Hotline: 1900.6536 - Website: HOPLONGTECH.COM