OMRON

SYSMAC CP-series CP1E CPU Units CP1E-EDD-A CP1E-NDD-D

The CP1E Package PLCs: Economy, Easy, and Efficient

- The E-type Basic CPU Units provide cost performance and easy application with only basic functionality.
- The N-type Application CPU Units support Programmable Terminal connection, position control, and inverter connection



CP1E-E20DR-A NEW

CP1E-N40DR-A NEW


Features

- Programming, setting, and monitoring with CX-Programmer for CP1E.
- Easy connection with computers using commercially available USB cables
- Expansion I/O Units can be used to increase the I/O capacity of a CPU Unit (for CPU Units with 30 or 40 I/Opoints).
- Expansion Units can be used to add analog I/O or temperature inputs to a CPU Unit with 30 or 40 I/O points.
- Quick-response inputs
- Input interrupts
- Extensive high-speed counter functionality.
- Versatile pulse control (Models with transistor outputs only). Available soon
- Execution of origin searches and origin returns using instructions (Models with transistor outputs only). Available soon
- PWM output function (Models with transistor outputs only). Available soon
- Changing settings with the analog adjusters.
- Built-in RS-232C port on N-type CPU Units.
- A Serial Option Board can be added to N-type CPU Units with 30 or 40 I/O points.


CP1E-EDD-A/CP1E-NDD-D

System Configuration

Basic System Configuration Using an E-type CPU Unit

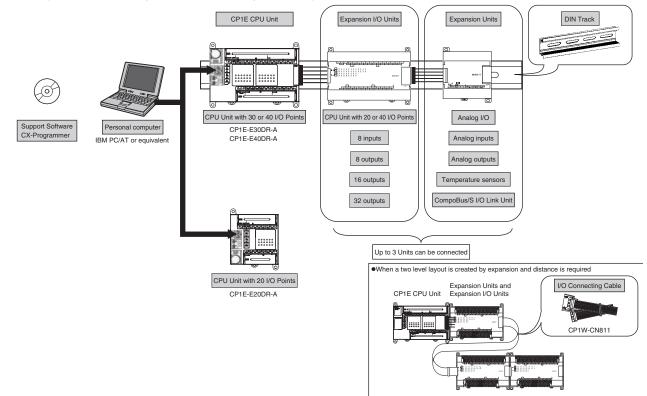

Basic System Configuration Using an N-type CPU Unit

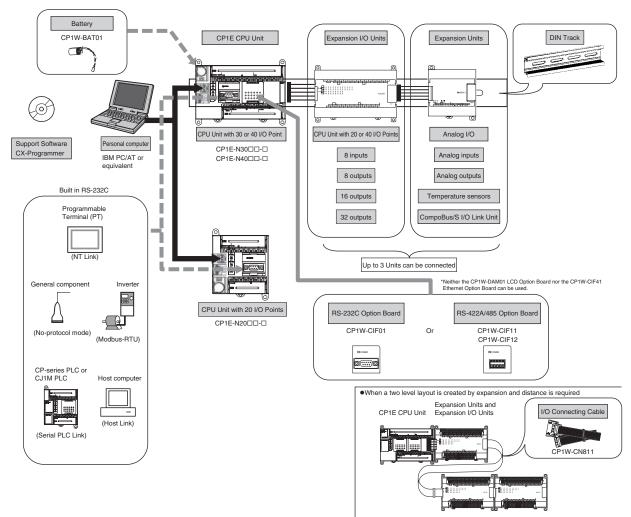

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus,
- UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

E-type CP1E CPU Units (Basic Models)

Product			Specif	ications			External power		rent ption (A)	tion (A)	
name	Power Supply	Inputs	Outputs	Output type	Program capacity	Data memory capacity	supply (24 VDC) (A)	5 V	24 V	Model	Standards
E-type CPU Units with 20 I/O Points		12	8	Relay				0.17	0.08	CP1E-E20DR-A <u>NEW</u>	
E-type CPU Units with 30 I/O Points	100 to 240 VAC	18	12	Relay	2K steps	2K words	0.30	0.17	0.07	CP1E-E30DR-A <u>NEW</u>	CE
E-type CPU Units with 40 I/O Points		24	16	Relay			0.30	0.17	0.09	CP1E-E40DR-A <u>NEW</u>	

Note: There are no accessories included with E-type CP1E CPU Units. A Battery (CP1W-BAT01) cannot be used.

Product			Specif	fications			External power		rent ption (A)			
name	Power Supply	Inputs	Outputs	Output type	Program capacity	Data memory capacity	supply (24 VDC) (A)	5 V	24 V	Model	Standards	
N-type CPU Units with 20 I/O				Relay				0.18	0.08	CP1E-N20DR-A <u>NEW</u>		
Points	100 to 240 VAC			Transistor (sinking)				0.23	0.02	Available soon CP1E-N20DT-A		
			- 12	8	Transistor (sourcing)	9K atapa	8K words		0.23	0.02	Available soon CP1E-N20DT1-A	
				12	0	Relay	- 8K steps	or words		0.18	0.08	Available soon CP1E-N20DR-D
	24 VDC			Transistor (sinking)				0.23	0.02	Available soon CP1E-N20DT-D		
					Transistor (sourcing)				0.23	0.02	Available soon CP1E-N20DT1-D	
V-type CPU Units vith 30 I/O				Relay			0.30	0.21	0.07	CP1E-N30DR-A <u>NEW</u>		
Points	100 to 240 VAC			Transistor (sinking)			0.30	0.27	0.02	Available soon CP1E-N30DT-A		
		18	12	Transistor (sourcing)	- 8K steps	8K words	0.30	0.27	0.02	Available soon CP1E-N30DT1-A	CE	
		24 VDC			Relay				0.21	0.07	Available soon CP1E-N30DR-D	4
	24 VDC			Transistor (sinking)	_			0.27	0.02	Available soon CP1E-N30DT-D	-	
				Transistor (sourcing)				0.27	0.02	Available soon CP1E-N30DT1-D	-	
I-type PU Units				Relay			0.30	0.21	0.09	CP1E-N40DR-A <u>NEW</u>		
vith 40 I/O Points	100 to 240 VAC			Transistor (sinking)			0.30	0.31	0.02	Available soon CP1E-N40DT-A		
		24	16	Transistor (sourcing)	8K steps	8K words	0.30	0.31	0.02	Available soon CP1E-N40DT1-A		
		24	10	Relay	or sieps			0.21	0.09	Available soon CP1E-N40DR-D	_	
	24 VDC			Transistor (sinking)				0.31	0.02	Available soon CP1E-N40DT-D	_	
				Transistor (sourcing)				0.31	0.02	Available soon CP1E-N40DT1-D		
Battery Set										CP1W-BAT01 <u>NEW</u>	CE	

N-type CP1E CPU Units (Application Models)

Note: There are no accessories included with N-type CP1E CPU Units. RS-232C connectors for the built-in RS-232C port and the Battery (CP1W-BAT01) are not included.

Options (for N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points)

The Options cannot be used for N-type CPU Units with 20 I/O points and all E-type CPU Units.

Product name	Specifications	Model	Standards	
RS-232C Option Board	One RS-232C Option Board can be mounted to the Option Board slot. For N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points only. One RS-232C connector is included.	CP1W-CIF01	UC1, N, L, CE	
RS-422A/485 Option Board	One RS-422A/485 Option Board can be mounted to the Option Board slot.	CP1W-CIF11		
RS-422A/485 Isolated-type Option Board	For N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points only.	CP1W-CIF12	N, L, CE	

Note: It is not possible to use a CP-series Ethernet Option Board (CP1W-CIF41), LCD Option Board (CP1W-DAM01), or Memory Card (CP1W-ME05M) with a CP1E CPU Unit.

Programming Devices

		Specifications								
Product name	9		Number of licenses	Media	Model	Standards				
CX-Programmer for CP1E		PLC Support Software (CP1E Only) The Smart Input function is provided. OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista Applicable models: CP1E	1 license	CD	WS02-CXPC3 <u>NEW</u>					
		CX-One is a package that integrates the Support Software for OMRON PLCs and components. CX-One runs on the following OS.	1 license *1	CD	Available soon *5 CXONE-AL01C-V3					
Package Ver.	tegrated Tool 3.⊟	OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista CX-One Ver. 3.□ includes CX-Programmer Ver. 8.□. For details, refer to the <i>CX-One Catalog</i> (Cat. No. R134).		DVD *2	Available soon *5 CXONE-AL01D-V3					
		CX-Programmer can still be ordered individually with the following model number.								
	CX-Programmer Ver. 8. □	PLC Support Software OS: Windows 2000 (Service Pack 3 or higher), XP, or Vista	1 license *3	CD	Available soon WS02-CXPC1-V8					
FA Integrated Tool Package CX-One Lite Ver. 3. □		CX-One Lite runs on the following OS. Windows 2000 (Service Pack 3 or higher), XP, or Vista CX-One Lite is a subset of the complete CX-One package that provides only the Support Software required for micro PLC applications. *4 Applicable models: CP1□, CPM□□, and SRM1	1 license	CD	Available soon) *5 CXONE-LT01C-V3					

Note: The Smart Input function is provided only by CX-Programmer for CP1E. *** 1.** Site licenses are available for the CX-One (3, 10, 30 or 50 licenses).

* 2. When purchasing the DVD format, verify the computer model and DVD drive specifications before purchasing.

* 3. Site licenses are available for the CX-Programmer (3 or 10 licenses).

* 4.CX-One Lite provides the following Support Software: CX-Programmer Ver. 8. 🗌 (micro PLCs only), CX-Integrator Ver. 2. 🗋, CX-Simulator Ver. 1. _, CX-Designer Ver. 3. _, CX-Protocol Ver. 1. _, CX-Thermo Ver. 4. _, Switch Box Utility Ver. 1. _, CX-Drive Ver. 1. _, and CX-Configurator FDT Ver. 1. _.

* 5.CX-Programmer Ver. 8.2 or higher is required for CP1E PLCs. CX-Programmer Ver. 8.2 is available via a CX-One V3 auto update.

Expansion I/O Units and Expansion Units (for E-type CP1E CPU Units with 30 I/O Points or 40 I/O Points and N-type CP1E CPU Units with 30 I/O Points or 40 I/O Points)

E-type CP1E CPU Units with 20 I/O points and N-type CP1E CPU Units with 20 I/O points do not support Expansion I/O Units and Expansion Units.

Unit type	Product name		Specifications			rent ption (A)	Model	Standards
onn type	i roudot name	Inputs	Outputs	Output type	5 V	24 V	Model	Stanuarus
	Input Unit	8			0.018		CP1W-8ED	
	Output Units			Relay	0.026	0.044	CP1W-8ER	U, C, N, L, CE
CP1W Expansion I/O Units			8	Transistor (sinking)	0.075		CP1W-8ET	_
				Transistor (sourcing)	0.075		CP1W-8ET1	
	ā			Relay	0.042	0.090	CP1W-16ER	
			16	Transistor (sinking)	0.076		CP1W-16ET	N, L, CE
	FIREFRATE			Transistor (sourcing)	0.076		CP1W-16ET1	
				Relay	0.049	0.131	CP1W-32ER	
			32	Transistor (sinking)	0.113		CP1W-32ET	N, L, CE
				Transistor (sourcing)	0.113		CP1W-32ET1	
	I/O Units			Relay	0.103	0.044	CP1W-20EDR1	
		12	8	Transistor (sinking)	0.130		CP1W-20EDT	U, C, N, L, CE
	A COMPANY OF			Transistor (sourcing)	0.130		CP1W-20EDT1	
				Relay	0.080	0.090	CP1W-40EDR	
		24	16	Transistor (sinking)	0.160		CP1W-40EDT	N, L, CE
				Transistor (sourcing)	0.160		CP1W-40EDT1	
		4 analog inputs Input range: 0 to 5 0 to 20 mA, or 4 to Resolution: 1/6000			0.100	0.090	CP1W-AD041	
	Analog Output Unit	4 analog outputs Output range: 0 to 0 to 20 mA, or 4 to Resolution: 1/6000		10 V, ±10 V,	0.080	0.124	CP1W-DA041	– UC1, N, L, CE
CP1W				′, ±10 V,	0.083	0.110	CP1W-MAD11	
Expansion Units	Temperature Sensor Unit	2 temperature sen Sensor type: Ther			0.040	0.059	CP1W-TS001	
		4 temperature sen Sensor type: Ther			0.040	0.059	CP1W-TS002	
	ACABOUT		sor inputs num resistance ther 00 or JPt100)	mometer	0.054	0.073	CP1W-TS101	U, C, N, L, CE
			sor inputs num resistance ther 00 or JPt100)	mometer	0.054	0.073	CP1W-TS102	
	CompoBus/S I/O Link Unit	CompoBus/S slav 8 inputs and 8 out			0.029		CP1W-SRT21	

I/O Connecting Cable

Product name	Specifications	Model	Standards	
	80 cm (for CP1W Expansion I/O Units and Expansion Units) Only one I/O Connecting Cable can be used in each PLC.	CP1W-CN811	UC1, N, L, CE	

Note: An I/O Connecting Cable (approx. 6 cm) for horizontal connection is provided with CP1W Expansion I/O Units and Expansion Units.

CP1E-EDD-A/CP1E-NDD-D

General Specifications

Туре		AC power supply models	DC power supply models Available soon				
Model		CP1E-DDD-A	CP1E- N D				
Inclosure		Mounted in a panel					
Dimensions (H × D ×	W)	CPU Unit with 20 I/O points (CP1E-□20D□-□): 90mm *1 × 85mm *2 × 86 mm CPU Unit with 30 I/O points (CP1E-□30D□-□): 90mm *1 × 85mm *2 × 130 mm CPU Unit with 40 I/O points (CP1E-□40D□-□): 90mm *1 × 85mm *2 × 150 mm					
Weight		CPU Unit with 20 I/O points (CP1E-□20D□-□): 370g max. CPU Unit with 30 I/O points (CP1E-□30D□-□): 600g max. CPU Unit with 40 I/O points (CP1E-□40D□-□): 660g max.					
	Supply voltage	100 to 240 VAC 50/60 Hz	24 VDC				
	Operating voltage range	85 to 264 VAC	20.4 to 26.4 VDC				
Electrical specifications	Power consumption	15 VA/100 VAC max. (CP1E-D20DD-A) 25 VA/240 VAC max. (CP1E-D20DD-A) 50 VA/100 VAC max. (CP1E-D30DD-A/D40DD-A) 70 VA/240 VAC max. (CP1E-D30DD-A/D40DD-A)	13 W max. (CP1E-N20D□-D) 34 W max. (CP1E-N30D□-D/N40D□-D)				
	Inrush current	120 VAC, 20 A for 8 ms max. for cold start at room temperature 240 VAC, 40 A for 8 ms max. for cold start at room temperature	30 A max. (for cold start) 20ms max.				
	External power supply	None (CP1E-□20D□-A) 300 mA 24 VDC (CP1E-□30D□-A/□40D□-A)	None				
	Insulation resistance	$20\ \text{M}\Omega$ min. (at 500 VDC) between the external AC terminals and GR terminals	No issulation between primary and secondary DC power supplies.				
	Dielectric strength	2,300 VAC 50/60Hz for 1 min between AC external and GR terminals Leakage current: 5 mA max.	No issulation between primary and secondary DC power supplies.				
	Power OFF detection time	10 ms min.	2 ms min.				
	Ambient operating temperature	0 to 55 °C					
	Ambient humidity	10% to 90%					
	Atmosphere	No corrosive gas.					
	Ambient storage temperature	-20 to 75 °C (excluding battery)					
	Altitude	2,000 m max.					
Application	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.					
environment	Noise resistance	2 kV on power supply line (Conforms to IEC61000-4-4	4.)				
	Overvoltage category	Category II: Conforms to JIS B3502 and IEC 61131-2					
	EMC Immunity Level	Zone B					
	Vibration resistance	Conforms to JIS 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz Acceleration of 9.8 m/s ² for 100 min in X, Y, and Z dirr	ections (10 sweeps of 10 min each = 100 min total)				
	Shock resistance	Conforms to JIS 60068-2-27. 147 m/s ² , 3 times in X, Y, and Z directions					
Terminal block		Fixed (not removable)					
Ferminal screw size		M3					
Applicable standards	5	EC Directive					
Grounding method		Ground to 100 Ω or less.					

*** 1.**Total of 110 mm with mounting brackets. *** 2.**Excluding cables.

Performance Specifications

			CP1E-							
Item			E20DR-A	E30DR-A	E40DR-A	N20D□-□	N30D□-□	N40D□-□		
Program capac	ity		2 K steps (8 Kbytes) including the symbol table, comments, and program indices of the CX-Programmer for CP1E8 K steps (32 Kbytes) including the symbol table, comments, and program indices of the CX-Programmer for CP1E							
Control method	I		Stored program r	method						
I/O control met	nod		Cyclic scan with	immediate refreshi	ing					
Program langua	age		Ladder diagram							
Instructions			Approximately 20	00						
Processing	Overhead proce	essing time	0.4 ms							
speed	Instruction exec	cution times		s (LD): 1.19 μs mir ons (MOV): 7.9 μs						
Number of CP1 connected	W-series Expansi	on Units	None	3 Units	1	None	3 Units			
Maximum num	per of I/O points		20	150 (30 built in, 40 x 3 expansion)	160 (40 built in, 40 x 3 expansion)	20	150 (30 built in, 40 x 3 expansion)	160 (40 built in, 40 x 3 expansion)		
Built-in I/O			20 12 inputs 8 outputs	30 18 inputs 12 outputs	40 24 inputs 16 outputs	20 12 inputs 8 outputs	30 18 inputs 12 outputs	40 24 inputs 16 outputs		
count		High-speed counter mode/ maximum frequency	Incremental Puls 10 kHz: 6 count Up/Down Inputs 10 kHz: 2 count Pulse + Direction 10 kHz: 2 count Differential Phas 5 kHz: 2 counte	ters 1 Inputs ters e Inputs (4x)		Incremental Pulse Inputs 100 kHz: 2 counters,10 kHz: 4 counters Up/Down Inputs 100 kHz: 1 counters,10 kHz: 1 counters Pulse + Direction Inputs 100 kHz: 2 counters Differential Phase Inputs (4x) 50 kHz: 1 counter, 5 kHz: 1 counter				
Built-in input functions	counters	Counting mode	Linear mode Ring mode							
		Count value	32 bits							
		Counter reset modes	Phase Z and software reset (excluding increment pulse input) Software reset							
		Control method	Target Matching Range Comparis	on						
	Input interrupts	i	6 inputs (interrup	t input pulse width	: 50 µs min.)					
	Quick-response	e Inputs	6 inputs (input pu	ulse width: 50 µs m	nin.)					
	Normal input	Input constants		et in the PLC Setur 2, 4, 8, 16, or 32 n	o (0 to 32 ms, defa ns	ault: 8 ms).				
		Pulse output method and output frequency				Pulse + Direction Mode 1 Hz to 100 kHz: 2 outputs				
		Output mode				Continuous mode (for speed control) Independent mode (for position control)				
	Pulse outputs (Models with	Number of output pulses	No pulse output f	function		Relative coordinates: 0000 0000 to 7FFF FFFF hex (0 to 2147483647) Absolute coordinates: 8000 0000 to 7FFF FFFF hex (-2147483647 to 2147483647)				
Built-in output functions	transistor outputs only)	Acceleration/ deceleration curves					eleration and decel n S-curve accelera			
Available soon		Changing SVs during instruction execution				Only target posit	tion can be change	d.		
		Origin searches				Included				
	Pulse outputs	Frequency					(in increments of 0. Hz (in increments of			
	(Models with transistor outputs only)	Duty factor	PWM output fund	ction not included		Accuracy: +1%/-	6 (in increments of 0.1%) /-0% at 2 Hz to 10,000 Hz and /-0% at 10,000 Hz to 32,000 kHz			
		Output mode				Continuous Mod	le			
Analog adjuste	rs		2 adjusters (Setti	ing range: 0 to 255	5)					

					CP	1E-			
Item			E20DR-A	E30DR-A	E40DR-A	N20D	N30D□-□	N40D□-□	
	Peripheral USB	Port Transmission	Conforming to US	SB 2.0 B type					
		distance	5 m max.						
	Built-in RS-2320					Interface: Confor	rms to EIA RS-2320).	
		Communications method				Half duplex			
		synchronization				Start-stop			
		Baud rate				1.2, 2.4, 4.8, 9.6	, 19.2, 38.4, 57.6, o	r 115.2 kbps	
		Transmission distance	No built-in RS-23	82C port		15 m max.			
		Supported protocol				Host Link 1:N NT Link No-protocol m Serial PLC Lir Modbus-RTU	nk Slave, Serial PLC	CLink Master	
	Serial Option po	ort					1 port		
Communications		Mountable Option Boards	CP1W-CIF01 One RS-232C port CP1W-CIF11 One RS-422A/485 port CP1W-CIF12 One RS-422A/485 port (isolated)					485 port	
		Communications method	Option Board cannot be mounted.				Depends on Option	on Board.	
		synchronization					Depends on Optio		
		Baud rate					1.2, 2.4, 4.8, 9.6, or 115.2 kbps	19.2, 38.4, 57.6,	
		Compatible protocols	17				Host Link 1:N NT Link No-protocol mo Serial PLC Link PLC Link Mast Modbus-RTU E	c Slave, Serial er	
Maximum subro	Number of tasks Maximum subroutine number		One cyclic execution task One scheduled interrupt task (always interrupt task 1) Six input interrupt tasks (interrupt tasks 2 to 7) Sixteen high-speed counter interrupt tasks (interrupt tasks 1 to 16) 128 128						
Maximum jump Scheduled inter			128 1 interrupt task						
Clock			Clock function no	ot included.		Included. Accuracy (monthly deviation): -4.5 min to -0.5 min at ambient temperature of 55°C -2.0 min to +2.0 min at ambient temperature of 25°C -2.5 min to +1.5 min at ambient temperature of 0°C			
	Built-in EEPRO	И	Ladder programs and parameters are automatically saved to built-in EEPROM A section of the Data Memory Area can be saved to the built-in EEPROM.						
Memory backup	Battery backup CP1W-BAT01 B (Sold separately	attery	Battery cannot be			o the built-in EEPROM. CP1W-BAT01 can be used. Maximum battery service life: 5 years Backup Time Guaranteed value (ambient temperature: 55°C): 13,000 hours (approx. 1.5 years) Effective value (ambient temperature: 25°C): 43,000 hours (approx. 5 years)			
	Input Bits		, (vords): CIO 0.00 to		0 to CIO 99)			
CIO Area	Output Bits		, (vords): CIO 100.00			,		
Work Area (W)	Serial PLC Link	Words	· ·	ords): CIO 200.00 to (ords): W0 00 to W			0 289)		
Holding Area (H)		1,600 bits (100 words): W0.00 to W99.15 (W0 to W99) 800 bits (50 words): H0.00 to H49.15 (H0 to H49) The bits and words in this area are used only in programming. Bit ON/OFF status will be retained when the operating mode is changed.						
Auxiliary Area (A	A)			8 bits (448 words) A 6 bits (306 words) i		753			
Temporary Relay Area (TR) (TR Area)			16 bits: TR0 to T		(accorde for the second	(untere))			
Timer Area (T) Counter Area (C)				rs (T0000 to T255 bers (C0000 to C2					
Data Memory Ar			256 counter numbers (C0000 to C255 (separate from timers)) 2 Kwords: D0 to D2047 Of these, 1,500 words can be saved to the backup memory (built-in EEPROM) using settings in the Auxiliary Area. 8 Kwords: D0 to D8191 Of these, 7,000 words can be saved to the backup memory (built-in EEPROM) using settings in the Auxiliary Area.						
Operating modes			PROGRAM mode: Program execution is stopped. Preparations can be executed prior to program execution in this mode. MONITOR mode: Programs are executed. Some operations, such as online editing, and changes to present values in I/O memory, are enabled in this mode. RUN mode: Programs are executed. This is the normal operating mode.						

CP1E-EDD-A/CP1E-NDD-D

Function Specifications

Function					Function description
Cycle time	Minimum cy	cle time			Makes the cycle time consistent.
management	Monitoring t	he cycle time			Monitors the cycle time.
		High-speed counter	High-speed	pulse inputs	High-speed pulses from devices such as a rotary encoder are counted. The counted values are stored in the Auxiliary Area. Interrupt tasks can be executed when target is reached or by range comparison.
		inputs	Input pulse frequency measurement		The frequency of pulses input by the PRV instruction is measured.
		Interrupt inp	uts		Relevant interrupt tasks are executed during the cycle when the CPU Unit built-in inputs turn ON or turn OFF.
	Inputs	Quick-response inputs			Inputs can be read without being affected by cycle time. Use the quick-response inputs to read signals shorter than the cycle time.
			I/O	Cyclic refreshing	The CPU Unit's built-in I/O are cyclically refreshed.
CPU Unit		Normal inputs	refreshing	Immediate refreshing	I/O refreshing by immediate refreshing instructions
built-in functions			Input respor	nse times	Input constants can be set for Basic I/O Units. The response time can be increased to reduce the effects of chattering and noise at input contacts. The response time can be decreased to enable detecting shorter input pulses.
		Pulse outputs (Models with transistor outputs	Pulse contro	ы	A pulse signal is output and positioning or speed control is performed with a servo driver that accepts a pulse input. Continuous mode for speed control or independent mode for position control can be used. There are functions for changing to positioning during speed control and for changing the target value during positioning.
	Outputs	only) Available soon	Origin positioning		Origin searches and origin returns
		PWM output (Models with Available soon	n transistor outputs only)		Pulses for which the duty ratio (ratio between ON time and OFF time during one pulse cycle) can be set are output.
		Normal outputs	Load OFF fu	nction	All of the outputs on the CPU Unit's I/O can be turned OFF when an error occurs in RUN or MONITOR mode.
S	Functions	I/O	Cyclic refreshing		The Expansion I/O Units and Expansion Units are cyclically refreshed.
	supported by both	refreshing	Refreshing b	by IORF	I/O refreshing by IORF instruction
Expansion I/O Units and Expansion	Expansion I/O Unit and Expansion Unit	Load OFF function			All of the outputs on Expansion I/O Units and Expansion Units are turned OFF (0000 hex) when an error occurs in RUN or MONITOR mode.
Units	Expansion I/O Units	Input respon	ise times		The response time can be increased to reduce the effects of chattering and noise at inpu contacts. The response time can be decreased to enable detecting shorter input pulses.
	Expansion Units	Unit error de	etection		Errors in Expansion Units are detected. The CPU Unit is notified that the Expansion Unit stopped due to an error.
Memory management	Holding I/O r	nemory when	changing ope	rating modes	The status of I/O memory can be held when the operating mode is changed. The forced-set/reset status can be held when the operating mode is changed.
functions	(built-in EEP		ackup memo	ry	Automatic backup of ladder programs and parameter area to the backup memory (built-in EEPROM)
Communicat					
	Peripheral USB port	Peripheral b	us (toolbus)		Port for communications with computer (CX-Programmer)
	Serial port (0	P1E-NDD-D] only)		
		Host Link (S	YSWAY) com	munications	Host Link command can be sent to Host Computer or PT to read/write I/O memory, read/ control the operating mode, and perform other operations for PLC.
		No-protocol	communicatio	ons	I/O instructions for communications ports (TXD/RXD instructions) can be used for data transfer with peripheral devices such as bar code readers.
		NT Link com	munications		I/O memory in the PLC can be allocated and directly linked to various PT functions, including status control areas, status notification areas, touch switches, lamps, memory tables, and other objects.
		Serial PLC L	inks		Up to ten words per Unit can be shared by up to nine CPU Units, including one Polling Uni and eight Polled Units. Note: Programmable Terminal (PT) cannot be connected.
		Modbus-RTL	J Easy Master	function	Modbus-RTU commands are sent by the Modbus-RTU Master function. Modbus slaves, such as inverters, can be easily controlled with serial communications.
	Scheduled in	nterrupts			Tasks can be executed at a specified interval (1.0 ms min., Unit: 0.1 ms).
Interret	Interrupt inp	uts			Interrupt tasks are processed when the built-in input turns ON or OFF.
Interrupt	High-speed	High-speed counter interrupts			This function counts input pulses with the CPU Unit's built-in high-speed counter and executes an interrupt task when the count reaches the preset value or falls within a prese range (target value or zone comparison).


10

Function			Function description				
Power supply management	Memory protect	ion	Holding Area data, DM Area data, EM Area data, Counter Completion Flags, and counter present values are held even when power is turned OFF. This function can be used only with an N-type CPU Unit and only when the Battery Set (sold separately) is mounted.				
	Number of powe	er interruptions counter	The number of times power has been interrupted is counted.				
	Online editing		The program can be changed during operation in MONITOR mode or PROGRAM mode.				
	Force-set/reset		Specified bits can be set or reset.				
Debugging	Differentiate mo	nitoring	ON/OFF changes in specified bits can be monitored.				
	Storing the stop	position at errors	The location and task number where execution stopped for a program error is recorded.				
	Program check		The programs can be checked for items such as no END instruction and FALS/FAL errors at startup.				
	Error Log		Details and the time of occurrence of error codes predefined by the CPU Unit are stored.				
	CPU error detec	tion	CPU Unit WDT errors are detected.				
	User-defined fai	lure diagnosis	Errors can be generated for user-specified conditions: Non-fatal errors (FAL) and fatal errors (FALS).				
	Load OFF funct	ion	The built-in outputs, Expansion I/O Unit outputs, and Expansion Unit outputs are turned OFF.				
	Non-fatal error detection	System FAL error detection (User-defined non-fatal error)	This function generates a non-fatal (FAL) error when the user-defined conditions are met in program.				
		Backup memory error detection	This function detects when data in the backup memory (built-in EEPROM) that stores the ladder program is corrupted.				
		PLC Setup error detection	This function detects setting errors in the PLC Setup.				
		Option Board errors	This function detects when the Option Board is malfunctioning or disconnected.				
		Battery error detection (N-type CPU Units only)	This function detects when the battery voltage is low or the battery is disconnected. Note: This function is valid only when a battery is mounted and the Do not detect battery <i>error</i> Check Box is cleared in the PLC Setup.				
		Memory error detection	This function detects errors that occur in memory of the CPU Unit.				
		I/O bus error detection	This function detects errors that occur during data transfer between the CPU Unit and another Unit.				
Self-diagn osis		Too Many I/O Points Error Detection	This function detects when more than the maximum number of CP1W Expansion I/O Units and Expansion Units are connected to the PLC.				
and restoration		Program error detection	This function detects when there is an error in the program. See the following for details.				
		Instruction processing error detection	This function detects an error when the given data value is invalid when executing an instruction, or execution of instruction between tasks was attempted.				
		Indirect DM addressing BCD error	This function detects an error when an indirect DM/EM address in BCD mode is not BCD.				
	Fatal Error	Illegal area access error detection	This function detects an error when an attempt is made to access an illegal area with an instruction operand.				
	Detection	No END error detection	This function detects an error when there is no END instruction at the end of the program.				
		Task error detection	The execution condition for an interrupt task was met but there is no interrupt task with the specified number.				
		overflow error detection	This function detects an error when too many differentiated instructions are entered or deleted during online editing (131,072 times or more).				
		Invalid instruction error detection	This function detects an error when an attempt is made to execute an instruction that is not defined in the system.				
		User program area overflow error detection	This function detects an error when instruction data is stored after the last address in user program area.				
		Cycle time exceeded error detection	This function monitors the cycle time (10 to 1,000 ms) and stops the operation when the set value is exceeded.				
		System FALS error detection (user-defined fatal error)	This function generates a fatal (FALS) error when the user-defined conditions are met in program.				
Maintenance	Automatic onlin	e connection via network	This function enables automatically connecting to the PLC online when the CX-Programmer is directly connected by a serial connection (peripheral USB port or serial port).				
Security functions	Read protection	using password	This function protects user memory. Read protection: Set a password using the CX-Programmer. Overwrite protection is not provided.				
	Write protection	from FINS commands	This function prohibits writing by using FINS commands sent over the network.				

Internal Memory in the CPU Units

CPU Unit Memory Backup

As shown in the following diagram, the internal memory in the CPU Unit consists of built-in RAM and built-in EEPROM. The built-in RAM is used as execution memory and the built-in EEPROM is used as backup memory.

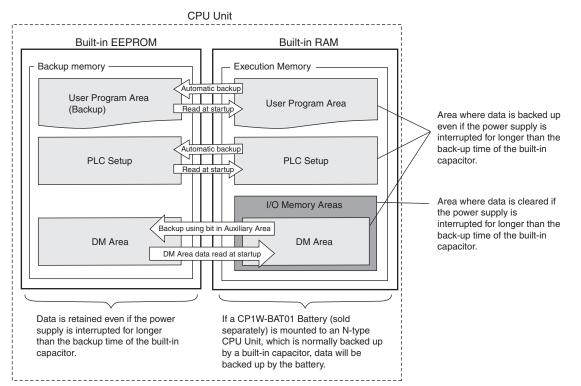


Precautions for Correct Use

Create a system and write the ladder programs so that problems will not occure in the system if the data in these area may be unstable.

- Data in areas such as the DM area (D), Holding Area (H), the Counter Present Values (C) and the status of Counter Completion Flags (C), which is retained by the battery, may be unstable when the power supply is turned off (Except for the DM area that are retained by the built-in EEP-ROM using the Aucilliary Area bit.)
- The error log, and clock data (N-type CPU Unit only) in the Auxiliary Area will become unstable. Other words and bits in the Auxiliary Area will be cleared to their default values.


The built-in capacitor's backup time varies with the ambient temperature as shown in the following graph.

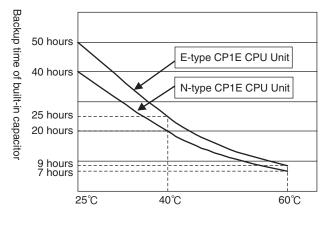

Ambient temperature

I/O Memory Areas

Data can be read and written to I/O memory from the ladder programs. I/O memory consists of an area for I/O with external devices, user areas, and system areas.

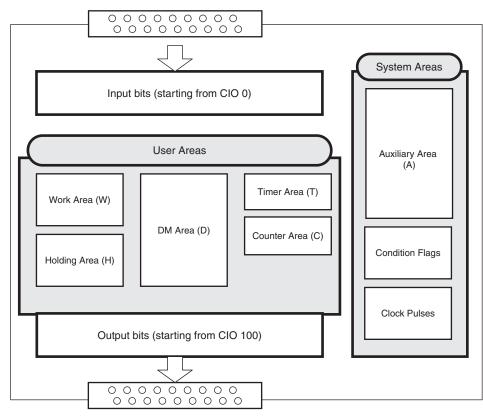


I/O Memory Areas

N	lame	No. of bits	Word addresses	Remarks
	Input Bits	1,600 bits (100 words)	CIO 0 to CIO 99	
CIO Area	Output Bits	1,600 bits (100 words)	CIO 100 to CIO 199	
	Serial PLC Link Words	1,440 bits (90 words)	CIO 200 to CIO 289	
Work Area (W)	•	1,600 bits (100 words)	W0 to W99	
Holding Area (H)		800 bits (50 words)	H0 to H49	Data in this area is retained during power interruptions if a Battery Set (sold separately) is mounted to an N-type CPU Unit.
	E-type CPU Unit	2 Kwords	D0 to D2047	Data in specified words of the DM Area can be retained in the built-in EEPROM in the backup memory by using a bit in the Auxiliary Area. Applicable words: D0 to D1499
Data Memory Area (D)	N-type CPU Unit	8 Kwords	D0 to D8191	Data in specified words of the DM Area can be retained in the built-in EEPROM in the backup memory by using a bit in the Auxiliary Area. Applicable words: D0 to D6999
T ime on A and a (T)	Present values	256	T0 4- T055	
Timer Area (T)	Timer Completion Flags	256	T0 to T255	
Counter Area (C)	Present values	256	C0 to C255	Data in this area is retained during power interruptions if a Battery Set (sold separately) is mounted to an N-type CPU Unit.
	Counter Completion Flags	256		
	Read only	7168 bits (448 words)	A0 to A447	Data in this area is retained during power interruptions if a
Auxiliary Area (A)	Read-write	4,896 bits (306 words)	A448 to A753	Battery Set (sold separately) is mounted to an N-type CPU Unit.
Temporary Area (TR)		16 bits	TR0 to TR15.	

Backing Up and Restoring DM Area Data

The contents of the DM Area (D) will become unstable if the power supply is interrupted for longer than the backup time of the built-in capacitor for an N-type CPU Unit without a Battery or for an E-type CPU Unit.

The contents of the specified words in the DM Area data can be backed up from RAM to the built-in EEPROM backup memory during operation by turning ON a bit in the Auxiliary Area. The number of DM Area words to back up is specified in the Number of CH of DM for backup Box in the PLC Setup. If the Restore D0- from backup memory Check Box is selected in the PLC Setup, the backup data will automatically be restored to RAM when the power is turned back ON so that data is not lost even if power is interrupted.

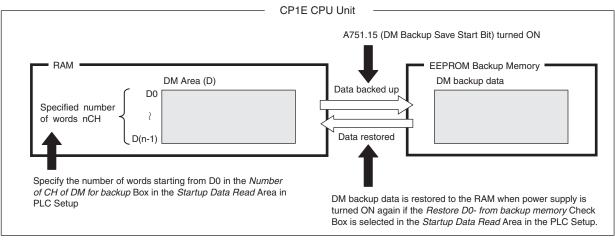

Conditions for Executing Backup

Specified words starting from D0 in the RAM can be saved to the built-in EEPROM backup memory by turning ON A751.15. (These words are called the DM backup words and the data is called the DM backup data.) A751.15 (DM Backup Save Start Bit) can be used in any operating mode (RUN, MONITOR, or PROGRAM mode).

Words That Can Be Backed Up


- E-type CP1E CPU Units: D0 to D1499
- N-type CP1E CPU Units: D0 to D6999

Number of Words To Back Up

The number of words to back up starting from D0 is set in the Number of CH of DM for backup Box in the Startup Data Read Area in the PLC Setup.

Restoring DM Backup Data to RAM When Power Is Turned ON


The DM backup data can be restored to RAM when power is turned ON by selecting the Restore D0- from backup memory Check Box in the Startup Data Read Area in the PLC Setup.

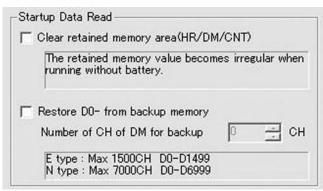


Built-in Inputs

Terminal Arrangements

●Input Terminal Arrangement for CPU Unit with 20 I/O Points AC power supply models



DC power supply models Available soon



●Input Terminal Arrangement for CPU Unit with 30 I/O Points AC power supply models

L	.1	L2/1	۱C	DM	0	1	0	3	0	5	0	7	0	9	1	1	0	1	0	3	0	5	
	Ę	<u>-</u>)	¢	0	0	0	2	0	4	0	6	0	8	1	0	0	0	0	2	0	4	Ν	С
		IN 0 CH												IN	11	СН							

DC power supply models Available soon

-	ł	_	-	СС	M	0	1	0	3	0	5	0	7	0	9	1	1	0	1	0	3	0	5	
	N	С		\mathbf{b}	0	0	0	2	0	4	0	6	0	8	1	0	0	0	0	2	0	4	Ν	С
		IN 0 CH													IN	1	СН							

•Input Terminal Arrangement for CPU Unit with 40 I/O Points AC power supply models

L	.1	L2	/N	СС	M	01	(03	0	5	07	0	9	1	1	0	1	03	3	05	(07	0	9	11
	4	5			00)	02	0	4	06	0	8	10	С	0	0	02	2	04	1	06	C	8	1(0
					IN	10	СН								IN	110	СН								

DC power supply models Available soon

+	_	-	со	M 0	1	03	05	5 (07	0	9	11		0	1	03	0	5	07		09	9	11	
N	С	Ē)	00	02	0	4	06	0	8	10	р	00	С	02	0	4	06	6	08	3	10		_
				IN C	CH								IN	1 (СН									

Allocating Built-in Inputs to Functions

Input terminals are allocated functions by setting parameters in the PLC Setup. Set the PLC Setup so that each terminal is used for only one function.


					1			•	Settings in PL			only one function.
									ţ			
	CPU Unit		Input term	ninal block		Inte Bu	rrupt input ilt-in Input	setting on Tab Page		unter 0 to 3 setti Input Tab Page	ng on Built-	Origin search settings on Pulse Output 0/ 1 Tab Page
							Û			Û		Û
CPU	CPU	CPU				Normal	Interrupt	Quick		Use	i.	
Unit with 20 I/O points	Unit with 30 I/O points	Unit with 40 I/O points	Terminal block label	Terminal number		Normal input	Input interrupt	Quick- response input	Single-phase (increment pulse input)	Two-phase (differential phase x4 or up/down)	Two- phase (pulse/ direction)	Use
Û	Û	Ŷ			-	\bigtriangledown	\bigtriangledown	\bigtriangledown	\bigtriangledown	\bigtriangledown	\bigtriangledown	\bigtriangledown
				00	\triangleright	Normal input 0			Counter 0, increment input	Counter 0, phase A or up input	Counter 0, pulse input	
				01		Normal input 1			Counter 1, increment input	Counter 0, phase B or down input	Counter 1, pulse input	
				02	\triangleright	Normal input 2	Interrupt input 2	Quick-response input 2	Counter 2, increment input	Counter 1, phase A or up input	Counter 0, direction	
				03	\triangleright	Normal input 3	Interrupt input 3	Quick-response input 3		Counter 1, phase B or down input	Counter 1, direction	
				04	_	Normal input 4	Interrupt input 4	Quick-response input 4	Counter 3, increment input	Counter 0, phase Z or reset input	Counter 0, reset input	
				05		Normal input 5	Interrupt input 5	Quick-response input 5	Counter 4, increment input	Counter 1, phase Z or reset input	Counter 1, reset input	
Applicable			0CH	06	\triangleright	Normal input 6	Interrupt input 6	Quick-response input 6	Counter 5, increment input			Pulse 0: Origin input signal
				07	\triangleright	Normal input 7	Interrupt input 7	Quick-response input 7				Pulse 1: Origin input signal
	Applicable			08		Normal input 8						
				09		Normal input 9						
				10	\triangleright	Normal input 10						Pulse 0: Origin proximity input signal
	-	Applicable		11	\triangleright	Normal input 11						Pulse 1: Origin proximity input signal
				00		Normal input 12						
				01	_	Normal input 13						
				02		Normal input 14						
				03		Normal input 15						
				04		Normal input 16						
Not applicable		-	1CH	05		Normal input 17						
аррисаріе				06	_	Normal input 18 Normal						
				07		input 19						
	Not applicable			08	_	Normal input 20 Normal						
				09	-	input 21						
				10		Normal input 22						
				11		Normal input 23						


Built-in Outputs

Terminal Arrangements


Output Terminal Arrangement for CPU Unit with 20 I/O Points

AC power supply model





•Output Terminal Arrangement for CPU Unit with 30 I/O Points AC power supply model



DC power supply model Available soon

	N	С	0	0	0	1	0	2	0	4	0	5	0	7	0	0	0	2	
N	С	СС	DM	СС)M	СС	DM	0	3	СС	DM	0	6	СС	DM	0	1	0	3
	100 CH												10)1 C	ЭН				

Output Terminal Arrangement for CPU Unit with 40 I/O Points AC power supply model

4	-	0	0	0	1	0	2	0	3	0	4	0	6	0	0	0	1	0	3	0	4	0	6	
			cc	М	СС	ЭМ	СС	M	СС	м	0	5	0	7	СС	DM	0	2	СС	ЭМ	0	5	0	7
			10	0 C	ЭН										10	1 C	Ж							

DC power supply model Available soon

NC	0	0	0	1	0	2	0	3	0	4	0	6	0	0	0	1	0	3	0	4	0	6	
1	NC	СС	М	cc	М	СС	M	СС	M	0	5	0	7	СС	М	0	2	СС	DM	0	5	0	7
		10	0 C	Ж										10	1 C	ж							

Allocating Built-in Output Terminals to Functions

Output terminals are allocated functions by setting parameters in the PLC Setup. Set the PLC Setup so that each terminal is used for only one function.

					1	Other than	When a pulse output	Setting in PLC Setup	When the PWM
	CPU Unit			terminal ock		those shown right	instruction (SPED, ACC, PLS2, or ORG) is executed	Origin search setting on Pulse Output 0/1 Tab Page	instruction is executed
							Û	•	
CPU Unit with 20 I/O	CPU Unit with 30 I/O	CPU Unit with 40 I/O	Terminal block label	Terminal number		Normal output	Fixed duty ratio	o pulse output	Variable duty ratio pulse output
points	points	points					Pulse + direction	Use	PWM output
Ŷ	Û	Û					\bigtriangledown	\bigtriangledown	\sim
				00	\triangleright	Normal output 0	Pulse output 0 (pulse)		
				01	\triangleright	Normal output 1	Pulse output 1 (pulse)		PWM output 0
				02	\triangleright	Normal output 2	Pulse output 0 (direction)		
Applicable			100CH	03	\triangleright	Normal output 3	Pulse output 1 (direction)		
	Applicable			04	\triangleright	Normal output 4		Pulse 0: Error counter reset output	
		Applicable		05	\triangleright	Normal output 5		Pulse 1: Error counter reset output	
				06	1	Normal output 6			
				07	1	Normal output 7			
				00	1	Normal output 8			
				01	1	Normal output 9			
				02	1	Normal output 10			
Not			101CH	03		Normal output 11			
applicable		Ī		04		Normal output 12			
	Not			05	1	Normal output 13			
	applicable			06		Normal output 14			
				07		Normal output 15			

These functions are supported only by N-type CPU Units with transistor outputs.

Available soon

I/O Specifications for CPU Units


Input Specifications


Item		Speci	ification	
Input type	High-speed counter inputs or Normal Inputs	High-speed counter input, quick-resport Inputs	er inputs, interrupt nse inputs, or Normal	Normal inputs
Input bits	CIO 0.00 to CIO 0.01	CIO 0.02 to CIO 0	.07 *1	CIO 0.08 to CIO 0.11 and CIO 1.00 to CIO 1.11 *1
Input voltage	24 VDC, +10%, -15%			1
Applicable sensors	2-wire and 3-wire sensors			
Input Impedance	3.3 kΩ	3.3 kΩ		4.8 kΩ
Input current	7.5 mA typical	7.5 mA typical		5 mA typical
ON voltage/current	17.0 VDC/3 mA min.	17.0 VDC/3 mA m	in.	14.4 VDC/3 mA min.
OFF voltage/current	1 mA max. at 5.0 VDC max.	1 mA max. at 5.0 \	/DC max.	1 mA max. at 5.0 VDC max.
ON response time *2	E-type CPU Unit: 50 μs min. N-type CPU Unit: 2.5 μs min.	50 µs max.		1 ms max.
OFF response time *2	E-type CPU Unit: 50 μs min. N-type CPU Unit: 2.5 μs min.	50 µs max.		1 ms max.
	E-type CPU Unit			N-type CPU Unit
	Input 0.00 to 0.07	Internal circuits	Input 0.00 to 0.01	Input indicator
Circuit configuration		Internal circuits	сомі	Input indicator
			Input 0.08 to 0.11,	1.00 to 1.11
			N 	

*1.The bits that can be used depend on the model of CPU Unit.


* 2. The response time is the delay caused by hardware. The delay set in the PLC Setup (0 to 32 ms, default: 8 ms) for a normal input must be added to this value.


Pulse plus direction input mode, Increment mode Up/down input mode





Differential phase mode



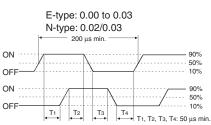


Output Specifications •Output Specifications for Relay Outputs

Item			Specification
Maximum switc	hing capacity		250 VAC/2 A (cosφ = 1) 2 A, 24 VDC (4 A/common)
Minimum switch	ning capacity		5 VDC, 10 mA
	Electrical	Resistive load	200,000 operations (24 VDC)
Service life of relay	Electrical	Inductive load	70,000 operations (250 VAC, cos
loluy	Mechanical		20,000,000 operations
ON delay			15 ms max.
OFF response ti	ime		15 ms max.
Circuit configur	ation		Computindicator


Estimating the Service Life of Relays

Under normal conditions, the service life of output contacts is as shown above. The service life of relays is as shown in the following diagram as a guideline

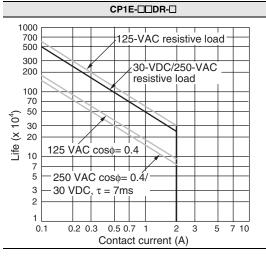


Relationship between Continuous Simultaneous ON Rate and Ambient Temperature

There are restrictions on the power supply voltage and output load current imposed by the ambient temperature. Make sure that the power supply voltage and output load current are within the following ranges.

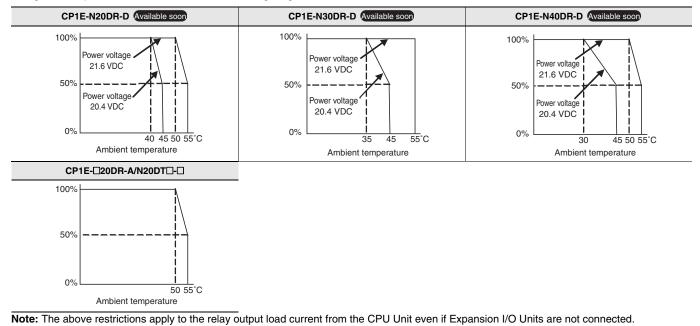

OMRON

•Output Specifications for Transistor Outputs (Sinking or Sourcing) Normal Outputs (Available soon)

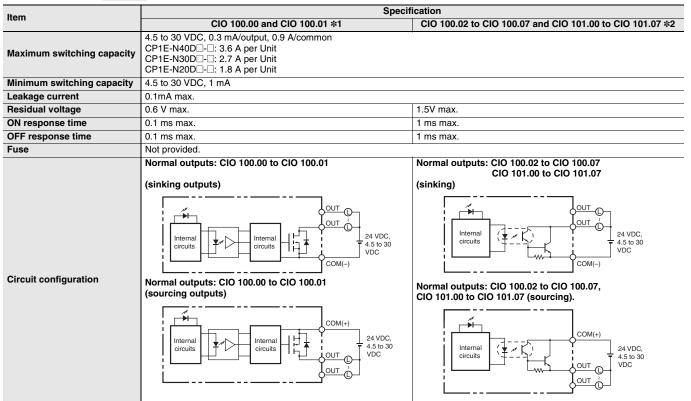

Note: Do not connect a load to an output terminal or apply a voltage in excess of the maximum switching capacity.

*1.Also do not exceed 0.9 A for the total for CIO 100.00 to CIO 100.03.


*** 2.**The bits that can be used depend on the model of CPU Unit.

Pulse Outputs (CIO 100.00 and CIO 100.01) Available soon

Item	Specification
Maximum switching capacity	100 mA/4.5 to 26.4 VDC
Minimum switching capacity	7 mA/4.5 to 26.4 VDC
Maximum output frequency	100 kHz
Output waveform	OFF 90% ON 10% 4μs min. 2μs min.

Note: 1. The load for the above values is assumed to be the resistance load, and does not take into account the impedance for the connecting cable to the load.

2. Due to distortions in pulse waveforms resulting from connecting cable impedance, the pulse widths in actual operation may be smaller than the values shown above.

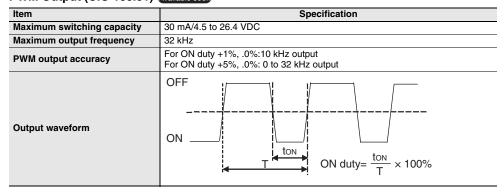

PWM Output (CIO 100.01) Available soon


CP1E-EDD-A/CP1E-NDD-D

Specifications of Expansion I/O Units and Expansion Units

Expandable CPU Units


- Expansion I/O Units and Expansion Units cannot be connected to an E-type or N-type CPU Units with 20 I/O points.
- A total of up to three Expansion I/O Units and Expansion Units can be connected to an E-type or N-type CPU Unit with 30 or 40 I/O points.

•CP1E CPU Unit with 20 I/O Points



CP-series Expansion Units and Expansion I/O Units cannot be connected.

●CP1E CPU Unit with 30 or 40 I/O Points

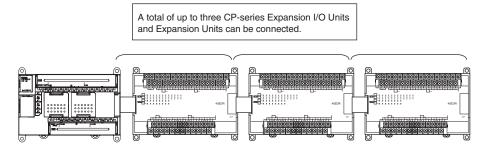

Connection Methods

Connection cables for the Expansion I/O Units and Expansion Units are used to connect the Units. The length can be extended by using a CP1W-CN811 I/O Connection Cable (length: 800 m).

Maximum Number of I/O Points for an Expanded System

CPU Unit	Built-in I/O on CPU Unit		Total number of Expansion I/O Units and Expansion Units that can	Nu Total number of I	umber of inputs: 2 umber of outputs: /O points when thr on I/O Units are co	16 ee CP1W-40ED⊡	
	Total	Number of inputs	Number of outputs	be connected	Total	Number of inputs	Number of outputs
CP1E-20D0-0	20	12	8	Not possible.	20	12	8
CP1E-030D0-0	30	18	12	3 Units maximum	150	90	60
CP1E-040D0-0	40	24	16		160	96	64

Restrictions on External Power Supply Capacity

The following restrictions apply when using the CPU Unit's external power supply.

●CPU Unit with 30 or 40 I/O Points

It may not be possible to use the full 300 mA of the external power supply when connecting a CP-series Expansion I/O Unit or CP-series Expansion Unit because the power supply capacity is restricted for CPU Units with 30 or 40 I/O points.

The entire 300 mA from the external power supply can be used if Expansion Units and Expansion I/O Units are not connected. Refer to the CP1E CPU Unit Hardware Manual (Cat. No. W479) for details.

•CPU Unit with 20 I/O Points

There is no external power supply on CPU Units with 20 I/O points.

Specifications of Expansion I/O Units ●Input Specifications (CP1W-40EDR/40EDT/40EDT1/20EDR1/20EDT/20EDT1/8ED)

Item	Specification
Input voltage	24 VDC +10%/-15%
Input impedance	4.7 kΩ
Input current	5 mA typical
ON voltage	14.4 VDC min.
OFF voltage	5.0 VDC max.
ON delay	1 ms max. *
OFF delay	1 ms max. *
Circuit configuration	Input LED


Note: Do not apply voltage in excess of the rated voltage to the input terminal.

* The response time is the hardware delay value. The delay set in the PLC Setup (0 to 32 ms, default: 8 ms) must be added to this value. For the CP1W-40EDR/EDT/EDT1, a fixed value of 16 ms must be added.


Output Specifications Relay Outputs (CP1W-40EDR/32ER/20EDR1/16ER/8ER)

	Item		Specification		
Max. switching capacity			2 A, 250 VAC (cosφ = 1), 2 A, 24 VDC (4 A/common)		
Min. switching	capacity		5 VDC, 10 mA		
Service life of	Electrical	Resistive load	150,000 operations (24 VDC)		
relay	Electrical	Inductive load	100,000 operations (240 VAC, $\cos\phi = 0.4$)		
(See note.)	Mechanical	÷	20,000,000 operations		
ON delay	ON delay		15 ms max.		
OFF delay			15 ms max.		
Circuit configuration			Output LED Internal circuits		


Note: 1. Under the worst conditions, the service life of output contacts is as shown above. The service life of relays is as shown in the following diagram as a guideline.

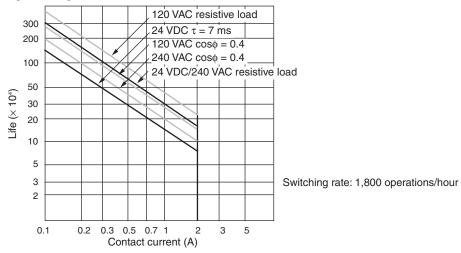


2. With the CP1W-32ER/CP1W-16ER, the load current is restricted depending on the ambient temperature. Design the system considering the load current based on the following graph.

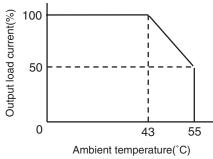

3. CP1W-32ER's maximum number of simultaneously ON output points is 24 (75%). Design the system considering the simultaneously ON points and load current based on the following curve.

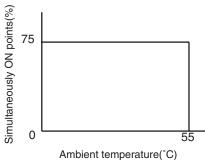

4. CPU Units with DC power supply (CP1E-N O Available soon) are restrictions imposed by the ambient temperature. Relay Output Load Current Derating Curves for Expansion I/O Units (CP1W-8ER/16ER/20EDR1/32ER/40EDR)

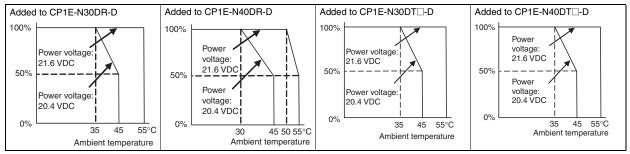


			Specification		
Item	CP1W-40EDT CP1W-40EDT1	CP1W-32ET CP1W-32ET1	CP1W-20EDT CP1W-20EDT1	CP1W-16ET CP1W-16ET1	CP1W-8ET CP1W-8ET1
Max. switching capacity (See note 2.)	4.5 to 30 VDC 0.3 A/output	4.5 to 30 VDC 0.3 A/output	24 VDC +10%/-5% 0.3 A/output	4.5 to 30 VDC 0.3 A/output	OUT00/01 4.5 to 30 VDC, 0.2 A/output OUT02 to 07 4.5 to 30 VDC, 0.3 A/output
	0.9 A/common 3.6 A/Unit	0.9 A/common 7.2 A/Unit	0.9 A/common 1.8 A/Unit	0.9 A/common 3.6 A/Unit	0.9 A/common 1.8 A/Unit
Leakage current	0.1 mA max.				
Residual voltage	1.5 V max.				
ON delay	0.1 ms max.	0.1 ms max.	0.1 ms.	0.1 ms max.	0.1 ms max.
OFF delay	1 ms max. 24 VDC +10%/-5% 5 to 300 mA	1 ms max. 24 VDC +10%/-5% 5 to 300 mA	1 ms max. 24 VDC +10%/-5% 5 to 300 mA	1 ms max. 24 VDC +10%/-5% 5 to 300 mA	1 ms max. 24 VDC +10%/-5% 5 to 300 mA
Max. number of Simultaneously ON Points of Output	16 pts (100%)	24 pts (75%)	8 pts (100%)	16 pts (100%)	8 pts (100%)
Fuse (See note 1.)	1 fuse/common				
Circuit configuration	Sinkin Outpu		24 VDC/4.5 to 30 VDC		24 VDC/4.5 to 30 VDC

Transistor Outputs (Sinking or Sourcing)

Note: 1. The fuse cannot be replaced by the user.

2. If the ambient temperature is maintained below 50?C, up to 0.9 A/common can be used.

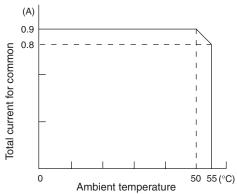

3. Do not connect a load to an output terminal or apply a voltage in excess of the maximum switching capacity.

Specifications of Expansion Units

•Analog Input Units

Model			CP1W-AD041		
Item		Voltage Input	Current Input		
Number of inputs		4 inputs (4 words allocated)			
Input signal range		0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC	0 to 20 mA or 4 to 20 mA		
Max. rated input		±15 V	±30 mA		
External input impedance	e	1 M Ω min.	Approx. 250 Ω		
Resolution		1/6000 (full scale)			
25°C		0.3% full scale	0.4% full scale		
Overall accuracy	0 to 55°C	0.6% full scale	0.8% full scale		
A/D conversion data		16-bit binary (4-digit hexadecimal) Full scale for -10 to 10 V: F448 to 0BB8 Hex Full scale for other ranges: 0000 to 1770 Hex	Full scale for -10 to 10 V: F448 to 0BB8 Hex		
Averaging function		Supported (Set in output words n+1 and n+2.)			
Open-circuit detection function		Supported			
Conversion time		2 ms/point (8 ms/all points)			
Isolation method		Photocoupler isolation between analog I/O terminals and internal circuits. No isolation between analog I/O signals.			
Current consumption		5 VDC: 100 mA max.; 24 VDC: 90 mA max.			

Analog Output Units

	Model		CP1W-	-DA041		
	Item		Voltage Output	Current Output		
	Number of o	outputs	4 outputs (4 words allocated)			
	Output sign	al range	1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC	0 to 20 mA or 4 to 20 mA		
	External output allowable load resistance		2 kΩ min.	350 Ω max.		
Analog	External out	put impedance	0.5 Ω max.			
output			1/6000 (full scale)			
section	Overall	25°C	0.4% full scale			
	accuracy	0 to 55°C	0.8% full scale			
	D/A conversion data		16-bit binary (4-digit hexadecimal) Full scale for -10 to 10 V: F448 to 0BB8 Hex Full scale for other ranges: 0000 to 1770 Hex			
Conversion	Conversion time		2 ms/point (8 ms/all points)			
Isolation me	Isolation method		Photocoupler isolation between analog I/O terminals and internal circuits. No isolation between analog I/O signals.			
Current con	sumption		5 VDC: 80 mA max.; 24 VDC: 124 mA max.			

•Analog I/O Units

	Model			CP1W-MAD11
	Item		Voltage I/O	Current I/O
	Number of inputs		2 inputs (2 words allocated)	
	Input signal range		0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC	0 to 20 mA or 4 to 20 mA
	Max. rated input		±15 V	±30 mA
	External input impedance	e	1 MΩ min.	Approx. 250 Ω
	Resolution		1/6000 (full scale)	
Analog Input Section		25°C	0.3% full scale	0.4% full scale
	Overall accuracy	0 to 55°C	0.6% full scale	0.8% full scale
	A/D conversion data		16-bit binary (4-digit hexadecimal) Full scale for –10 to 10 V: F448 to 0BB8 hex Full scale for other ranges: 0000 to 1770 hex	
	Averaging function		Supported (Settable for individual inputs via DIP switch)	
	Open-circuit detection function		Supported	
	Number of outputs		1 output (1 word allocated)	
	Output signal range		1 to 5 VDC, 0 to 10 VDC, or -10 to 10 VDC,	0 to 20 mA or 4 to 20 mA
	Allowable external output load resistance		1 k Ω min.	600 Ω max.
Analog Output	External output impedance		0.5 Ω max.	
Section	Resolution		1/6000 (full scale)	
	Overall accuracy	25°C	0.4% full scale	
	Overall accuracy	0 to 55°C	0.8% full scale	
	Set data (D/A conversion)		16-bit binary (4-digit hexadecimal) Full scale for –10 to 10 V: F448 to 0BB8 hex Full scale for other ranges: 0000 to 1770 hex	
Conversion time		2 ms/point (6 ms/all points)		
Isolation method		Photocoupler isolation between analog I/O terminals and internal circuits. No isolation between analog I/O signals.		
Current consumpt	ion		5 VDC: 83 mA max., 24 VDC: 110 mA	max.

•Temperature Sensors Units

Item	CP1W-TS001	CP1W-TS002	CP1W-TS101	CP1W-TS102		
	Thermocouples		Platinum resistance thermor	meter		
Temperature sensors	Switchable between K and J, I all inputs.	able between K and J, but same type must be used for its.		and JPt100, but same type must		
Number of inputs	2	4	2	4		
Allocated input words	2	4	2	4		
Accuracy	(The larger of ±0.5% of conve max. *	(The larger of $\pm 0.5\%$ of converted value or $\pm 2^{\circ}$ C) ± 1 digit max. *		(The larger of $\pm 0.5\%$ of converted value or $\pm 1^{\circ}C)\pm 1$ digit max.		
Conversion time	250 ms for 2 or 4 input points	250 ms for 2 or 4 input points				
Converted temperature data	16-bit binary data (4-digit hex	16-bit binary data (4-digit hexadecimal)				
Isolation	Photocouplers between all ter	Photocouplers between all temperature input signals				
Current consumption	5 VDC: 40 mA max., 24 VDC	: 59 mA max.	5 VDC: 54 mA max., 24 VD	C: 73 mA max.		

* Accuracy for a K-type sensor at -100°C or less is \pm 4°C \pm 1 digit max.

The rotary switch is used to set the temperature range.

Set	ting		CP1W-TS001/TS002			CP1W-TS101/TS102		
361	ting	Input type	Range (°C)	Range (°F)	Input type	Range (°C)	Range (°F)	
FFO	0	K	-200 to 1,300	-300 to 2,300	Pt100	-200.0 to 650.0	-300.0 to 1,200.0	
	1	n i i i i i i i i i i i i i i i i i i i	0.0 to 500.0	0.0 to 900.0	JPt100	-200.0 to 650.0	-300.0 to 1,200.0	
	2	1	-100 to 850	-100 to 1,500				
681	3	J	0.0 to 400.0	0.0 to 750.0		Cannot be set.		
	4 to F		Cannot be set.					

●CompoBus/S I/O Link Unit


Model number	CP1W-SRT21
Master/slave	CompoBus/S Slave
Number of I/O points	8 input points, 8 output points
Number of words allocated in CPU Unit I/O memory	1 input word, 1 output word
Node number setting	Set using the DIP switch (Set before turning on the CPU Unit's power supply.)

CP1E-EDD-A/CP1E-NDD-D


External Interfaces

The CP1E CPU Units provide the following external interfaces.


CP1E CPU Unit with 20 I/O Points

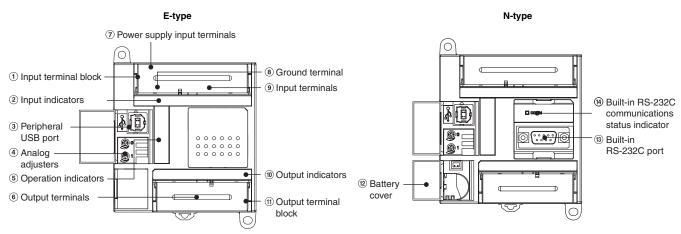

CP1E CPU Unit with 30/40 I/O Points

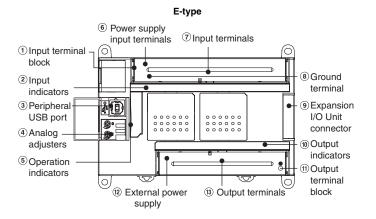


Built-in RS-232C Port for N-type CPU Units •RS-232C Connector

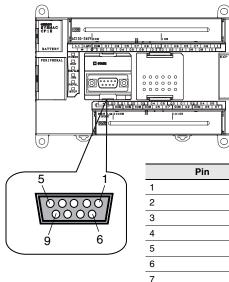


Pin	Abbr.	Signal name	Signal direction
1	FG	Frame ground	
2	SD (TXD)	Send data	Output
3	RD (RXD)	Receive data	Input
4	RS (RTS)	Request to send	Output
5	CS (CTS)	Clear to send	Input
6	5 V	Power supply	
7	DR (DSR)	Data set ready	Input
8	ER (DTR)	Data terminal ready	Output
9	SG (0 V)	Signal ground	
Connector hood	FG	Frame Ground	

N-type

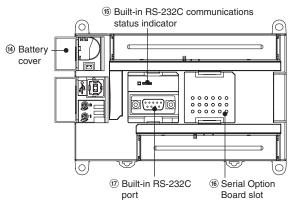

Optional Serial Communications Board for N-type CPU Units with 30 or 40 I/O Points

The Option Board can be mounted in the option board slot of a CP1E N-type CPU Unit with 30 or 40 I/O Points.

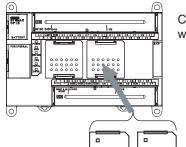

CP1E N-type CPU Unit with 30 or 40 I/O Points

RS-232C	RS-422A/485
Option Board	Option Board
(CP1W-CIF01)	(CP1W-CIF11/12)

Model number	Port	Maximum transmission distance	Connection method
CP1W-CIF01	One RS-232C port	15 m	Connector (D-sub, 9 pin female)
CP1W-CIF11	One RS-422A/485 port	50 m	Terminal block (using ferrules)
CP1W-CIF12	One insulated RS-422A/485 port	500 m	Terminal block (using ferrules)

CP1W-CIF01 RS-232C Option Board

0000

Back

(1) Communications Status Indicator



Front



③CPU Unit Connector

2 RS-232 Connector

5

•RS-232C Connector


4	Pin	Abbr.	Signal name	Signal direction
/	1	FG	Frame ground	
200	2	SD (TXD)	Send data	Output
OQ	3	RD (RXD)	Receive data	Input
	4	RS (RTS)	Request to send	Output
6	5	CS (CTS)	Clear to send	Input
	6	5 V	Power supply	
	7	DR (DSR)	Data set ready	Input
	8	ER (DTR)	Data terminal ready	Output
	9	SG (0 V)	Signal ground	
	Connector hood	FG	Frame Ground	

CP1W-CIF11/CIF12 RS-422A/485 Option Board

Back


Front

(1) Communications Status Indicator



(2) RS-422A/485 Connector

•RS-422A/485 Terminal Block



Connecting to Support Software


Operating Environment and System Configuration

The following system is required to operate the CX-Programmer for CP1E. Make sure your system provides the following conditions and has the necessary components.

Item	Description
Supported computer	IBM PC/AT or equivalent
CD-ROM or DVD-ROM drive	One or more
Supported Operating Systems	Windows Vista, Windows XP, Windows 2000 (Service Pack 2 or later)
CPU	Pentium II 333 MHz or faster
RAM	256 MB min. 512 MB or more recommended
Available hard disk space	600 MB min.
Display	800 x 600 SVGA min.
PLC and connection port	USB port
Supported PLCs	CP1E

Connecting Methods

Using commercially available USB cable, connect the CX-Programmer to the peripheral USB port on the CPU Unit.

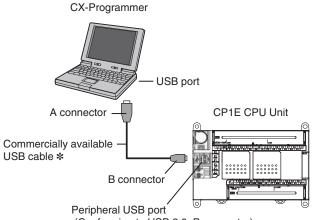

(Conforming to USB 2.0, B connector)

Note: The CX-Programmer cannot be used if it is connected to the built-in RS-232C port or serial option port of a CP1E CPU Unit. * Commercially available USB cable: 5 m max., for USB 2.0.

Connecting Cable

Use the following cable to connect the CP1E CPU Unit to the computer running the Support Software.

Port at Unit	Port at computer	Network type (communications mode)	Model numbers	Length	Remarks
Peripheral USB port	USB port	USB 2.0 (or 1.1)	Commercially available USB cable (A connector - B connector)	Less than 5 m	

Unit Versions

Units	Model numbers	Unit version
CP1E CPU Units	CP1E-EDD-A CP1E-NDD-D	Unit version 1.0

Unit Versions and Programming Devices

The following tables show the relationship between unit versions and CX-Programmer versions.

Unit Versions and Programming Devices

		Required Programming Device *1		
CPU Unit	Functions	CX-Programmer for CP1E	CX-Programmer	
		Version 1.0 or higher	Version 8.2 or higher	
CP1E-EDD-A CP1E-NDD-D	Functions for unit version 1.0	Applicable The SmartInput function is supported.	Applicable *2 The SmartInput function is not supported.	

*** 1.**A Programming Console cannot be used.

*2.CX-Programmer version 8.2 is available via a CX-One V3 auto update.

Programming Instructions

Sequence Input Instructions

Instruction	Mnemonic
LOAD	LD
LOAD NOT	LD NOT
AND	AND
AND NOT	AND NOT
OR	OR
OR NOT	OR NOT
AND LOAD	AND LD
OR LOAD	OR LD
NOT	NOT
CONDITION ON	UP
CONDITION OFF	DOWN

Sequence Output Instructions

Instruction	Mnemonic
OUTPUT	OUT
OUTPUT NOT	OUT NOT
KEEP	KEEP
DIFFERENTIATE UP	DIFU
DIFFERENTIATE DOWN	DIFD
SET	SET
RESET	RSET
MULTIPLE BIT SET	SETA
MULTIPLE BIT RESET	RSTA
SINGLE BIT SET	SETB
SINGLE BIT RESET	RSTB

Sequence Output Instructions

Instruction	Mnemonic
END	END
NO OPERATION	NOP
INTERLOCK	IL
INTERLOCK CLEAR	ILC
MULTI-INTERLOCK DIFFERENTIATION HOLD	MILH
MULTI-INTERLOCK DIFFERENTIATION RELEASE	MILR
MULTI-INTERLOCK CLEAR	MILC
JUMP	JMP
JUMP END	JME
CONDITIONAL JUMP	CJP
FOR LOOP	FOR
BREAK LOOP	BREAK
NEXT LOOP	NEXT

Timer and Counter Instructions

Instruction	Mnemonic
TIMER	ТІМ
HMER	TIMX
COUNTER	CNT
COUNTER	CNTX
HIGH-SPEED TIMER	ТІМН
HIGH-SPEED TIMER	TIMHX
ONE-MS TIMER	ТМНН
ONE-MS TIMER	ТМННХ
ACCUMULATIVE TIMER	TTIM
ACCOMOLATIVE TIMER	TTIMX
LONG TIMER	TIML
LONG TIMER	TIMLX
REVERSIBLE COUNTER	CNTR
REVENSIBLE COUNTER	CNTRX
RESET TIMER/COUNTER	CNR
RESET TIMER/COUNTER	CNRX

Comparison Instructions

Instruction	Mnemonic
	LD,AND,OR+=
	LD,AND,OR+<>
Input Comparison Instructions	LD,AND,OR+<
(unsigned)	LD,AND,OR+<=
	LD,AND,OR+>
	LD,AND,OR+>=
	LD,AND,OR+=+L
	LD,AND,OR+<>+L
Input Comparison Instructions	LD,AND,OR+<+L
(double, unsigned)	LD,AND,OR+<=+L
	LD,AND,OR+>+L
	LD,AND,OR+>=+L
	LD,AND,OR+=+S
	LD,AND,OR+<>+S
Input Comparison Instructions	LD,AND,OR+<+S
(signed)	LD,AND,OR+<=+S
	LD,AND,OR+>+S
	LD,AND,OR+>=+S
	LD,AND,OR+=+SL
	LD,AND,OR+<>+SL
Input Comparison Instructions	LD,AND,OR+<+SL
(double, signed)	LD,AND,OR+<=+SL
	LD,AND,OR+>+SL
	LD,AND,OR+>=+SL
	=DT
	<>DT
	<dt< td=""></dt<>
Time Comparison Instructions	<=DT
	>DT
	>=DT
COMPARE	СМР
DOUBLE COMPARE	CMPL
SIGNED BINARY COMPARE	CPS
DOUBLE SIGNED BINARY COMPARE	CPSL
TABLE COMPARE	ТСМР
UNSIGNED BLOCK COMPARE	BCMP
AREA RANGE COMPARE	ZCP
DOUBLE AREA RANGE COMPARE	ZCPL

Data Movement Instructions

Instruction	Mnemonic
MOVE	MOV
DOUBLE MOVE	MOVL
MOVE NOT	MVN
MOVE BIT	MOVB
MOVE DIGIT	MOVD
MULTIPLE BIT TRANSFER	XFRB
BLOCK TRANSFER	XFER
BLOCK SET	BSET
DATA EXCHANGE	XCHG
SINGLE WORD DISTRIBUTE	DIST
DATA COLLECT	COLL

32

Data Shift Instructions

Instruction	Mnemonic
SHIFT REGISTER	SFT
REVERSIBLE SHIFT REGISTER	SFTR
WORD SHIFT	WSFT
ARITHMETIC SHIFT LEFT	ASL
ARITHMETIC SHIFT RIGHT	ASR
ROTATE LEFT	ROL
ROTATE RIGHT	ROR
ONE DIGIT SHIFT LEFT	SLD
ONE DIGIT SHIFT RIGHT	SRD
SHIFT N-BITS LEFT	NASL
DOUBLE SHIFT N-BITS LEFT	NSLL
SHIFT N-BITS RIGHT	NASR
DOUBLE SHIFT N-BITS RIGHT	NSRL

Increment/Decrement Instructions

Instruction	Mnemonic
INCREMENT BINARY	++
DOUBLE INCREMENT BINARY	++L
DECREMENT BINARY	
DOUBLE DECREMENT BINARY	L
INCREMENT BCD	++B
DOUBLE INCREMENT BCD	++BL
DECREMENT BCD	B
DOUBLE DECREMENT BCD	BL

Symbol Math Instructions

Instruction	Mnemonic
SIGNED BINARY ADD WITHOUT CARRY	+
DOUBLE SIGNED BINARY ADD WITHOUT CARRY	+L
SIGNED BINARY ADD WITH CARRY	+C
DOUBLE SIGNED BINARY ADD WITH CARRY	+CL
BCD ADD WITHOUT CARRY	+B
DOUBLE BCD ADD WITHOUT CARRY	+BL
BCD ADD WITH CARRY	+BC
DOUBLE BCD ADD WITH CARRY	+BCL
SIGNED BINARY SUBTRACT WITHOUT CARRY	-
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L
SIGNED BINARY SUBTRACT WITH CARRY	-C
DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL
BCD SUBTRACT WITHOUT CARRY	-В
DOUBLE BCD SUBTRACT WITHOUT CARRY	-BL
BCD SUBTRACT WITH CARRY	-BC
DOUBLE BCD SUBTRACT WITH CARRY	-BCL
SIGNED BINARY MULTIPLY	*
DOUBLE SIGNED BINARY MULTIPLY	*L
BCD MULTIPLY	*В
DOUBLE BCD MULTIPLY	*BL
SIGNED BINARY DIVIDE	/
DOUBLE SIGNED BINARY DIVIDE	/L
BCD DIVIDE	/В
DOUBLE BCD DIVIDE	/BL

Conversion Instructions

Instruction	Mnemonic
BCD-TO-BINARY	BIN
DOUBLE BCD-TO-DOUBLE BINARY	BINL
BINARY-TO-BCD	BCD
DOUBLE BINARY-TO-DOUBLE BCD	BCDL
2'S COMPLEMENT	NEG
DATA DECODER	MLPX
DATA ENCODER	DMPX
ASCII CONVERT	ASC
ASCII TO HEX	HEX

Logic Instructions

Instruction	Mnemonic
LOGICAL AND	ANDW
DOUBLE LOGICAL AND	ANDL
LOGICAL OR	ORW
DOUBLE LOGICAL OR	ORWL
EXCLUSIVE OR	XORW
DOUBLE EXCLUSIVE OR	XORL
COMPLEMENT	СОМ
DOUBLE COMPLEMENT	COML

Special Math Instructions

Instruction	Mnemonic
ARITHMETIC PROCESS	APR
BIT COUNTER	BCNT

Floating-point Math Instructions

Instruction	Mnemonic
FLOATING TO 16-BIT	FIX
FLOATING TO 32-BIT	FIXL
16-BIT TO FLOATING	FLT
32-BIT TO FLOATING	FLTL
FLOATING-POINT ADD	+F
FLOATING-POINT SUBTRACT	-F
FLOATING-POINT DIVIDE	/F
FLOATING-POINT MULTIPLY	*F
	LD, AND, OR+=F
	LD, AND, OR+<>F
Electing Symbol Comparison	LD, AND, OR+ <f< td=""></f<>
Floating Symbol Comparison	LD, AND, OR+<=F
	LD, AND, OR+>F
	LD, AND, OR+>=F
FLOATING- POINT TO ASCII	FSTR
ASCII TO FLOATING-POINT	FVAL

Table Data Processing Instructions

Instruction	Mnemonic
SWAP BYTES	SWAP
FRAME CHECKSUM	FCS

Data Control Instructions

Instruction	Mnemonic
PID CONTROL WITH AUTOTUNING	PIDAT
TIME-PROPORTIONAL OUTPUT	ТРО
SCALING	SCL
SCALING 2	SCL2
SCALING 3	SCL3
AVERAGE	AVG

CP1E-EDD-A/CP1E-NDD-D

Subroutine Instructions

Instruction	Mnemonic
SUBROUTINE CALL	SBS
SUBROUTINE ENTRY	SBN
SUBROUTINE RETURN	RET

Interrupt Control Instructions

Instruction	Mnemonic
SET INTERRUPT MASK	MSKS
CLEAR INTERRUPT	CLI
DISABLE INTERRUPTS	DI
ENABLE INTERRUPTS	El

High-speed Counter and Pulse Output Instructions

Instruction	Mnemonic
MODE CONTROL	INI
HIGH-SPEED COUNTER PV READ	PRV
COMPARISON TABLE LOAD	CTBL
SPEED OUTPUT	SPED
SET PULSES	PULS
PULSE OUTPUT	PLS2
ACCELERATION CONTROL	ACC
ORIGIN SEARCH	ORG
PULSE WITH VARIABLE DUTY FACTOR	PWM

Step Instructions

Instruction	Mnemonic
STEP DEFINE	STEP
STEP START	SNXT

I/O Unit Instructions

Instruction	Mnemonic
I/O REFRESH	IORF
7-SEGMENT DECODER	SDEC
DIGITAL SWITCH INPUT	DSW
MATRIX INPUT	MTR
7-SEGMENT DISPLAY OUTPUT	7SEG

Serial Communications Instructions

Instruction	Mnemonic	
TRANSMIT	TXD	
RECEIVE	RXD	

Clock Instructions

Instruction	Mnemonic
CALENDAR ADD	CADD
CALENDAR SUBTRACT	CSUB
CLOCK ADJUSTMENT	DATE

Failure Diagnosis Instructions

Instruction	Mnemonic
FAILURE ALARM	FAL
SEVERE FAILURE ALARM	FALS


Other Instructions

Instruction	Mnemonic
SET CARRY	STC
CLEAR CARRY	CLC
EXTEND MAXIMUM CYCLE TIME	WDT


34

Dimensions

CP1E CPU Unit •CPU Units with 20 I/O Point

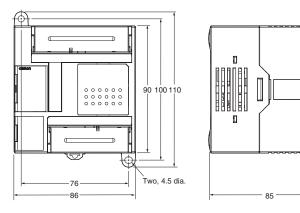

●CPU Units with 30 I/O Point

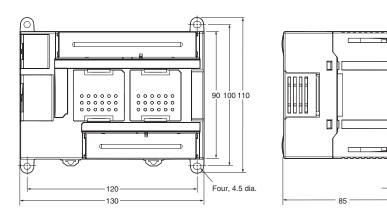


8


P

- 8


•CPU Units with 40 I/O Point

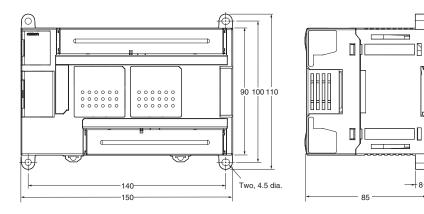


Expansion I/O Units and Expansion Units •CP1W-8EDD/CP1W-SRT21

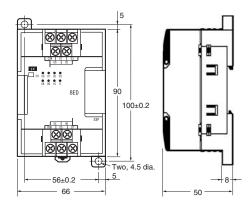


●CP1W-20ED□/CP1W-16E□□/CP1W-AD041/CP1W-DA041/CP1W-MAD11/CP1W-TS□□□

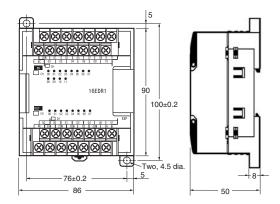

●CP1W-40ED□/CP1W-32E□□

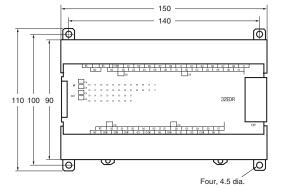



CP1E-EDD-A/CP1E-NDD-D

Related Manuals

Manual name	Cat. No.	Model numbers	Application	Contents
SYSMAC CP Series CP1E CPU Unit Hardware Manual	W479 CP1E-E_DA CP1E-N_D		To learn the hardware specifications of the CP1E PLCs	Describes the following information for CP1E PLCs. • Overview and features • Basic system configuration • Part names and functions • Installation and settings • Troubleshooting
			Use this manual together with the CP1E CPU CP1E CPU Unit Instructions Reference Mar	
SYSMAC CP Series CP1E CPU Unit Software Manual	W480	CP1E-EDD-A CP1E-NDD-D	To learn the software specifications of the CP1E	Describes the following information for CP1E PLCs. • CPU Unit operation • Internal memory • Programming • Settings • CPU Unit built-in functions • Interrupts • High-speed counter inputs • Pulse outputs • Serial communications • Other functions
			Use this manual together with the CP1E CPU Unit Hardware Manual (Cat. No. W479) and CP1E CPU Unit Instructions Reference Manual (Cat. No. W483).	
SYSMAC CP Series CP1E CPU Unit Instructions Reference Manual	W483	CP1E-EDD-A CP1E-NDD-D	To learn programming instructions in detail	Describes each programming instruction in detail. When programming, use this manual together with the CP1E CPU Unit Hardware Manual (Cat. No. W479) and CP1E CPU Unit Software Manual (Cat. No. W480).
CS/CJ/CP/NSJ Series Communications Commands Reference Manual	W342	CS1G/H-CPU H CS1G/H-CPU -V1 CS1D-CPU H CS1D-CPU S CS1W-SCU -V1 CS1W-SCB -V1 CJ1G/H-CPU H CJ1G-CPU P CJ1M-CPU CJ1G-CPU CJ1G-CPU CJ1G-CPU CJ1G-CPU CJ1G-CPU CJ1G-CPU CJ1G-CPU CJ1W-SCU CJ1V-V1	To learn communications commands for CS/CJ/CP/NSJ-series Controllers in detail Note: This manual describes commands a commands addressed to other Units	or ports (e.g., serial communications ports
			on CPU Units, communications port and other Communications Units).	s on Serial Communications Units/Boards,

МЕМО

Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the product in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

OMRON Corporation

Industrial Automation Company **Control Devices Division H.Q.** PLC Division Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81) 75-344-7084/Fax: (81) 75-344-7149

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ELECTRONICS LLC One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 OMRON Industrial Automation Global: www.ia.omron.com

Authorized Distributor:

© OMRON Corporation 2009 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. P061-E1-01

Printed in Japan 0309